



**BXOS Software**

## **CLI Users Guide and Command Reference**

*Release 4.0*

**Juniper Networks, Inc.**

1194 North Mathilda Avenue  
Sunnyvale, CA 94089

USA

408-745-2000

**[www.juniper.net](http://www.juniper.net)**

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, the Juniper Networks logo, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. JUNOS and JUNOSe are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*BXOS Software CLI Users Guide and Command Reference*

Release 4.0

Copyright © 2009, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Writing: Rose Leema P M, Beatrice P

Illustration: Rose Leema P M

Cover design: Edmonds Design

Revision History

13 July 2009—Revision 1.0

The information in this document is current as of the date listed in the revision history.

#### **Year 2000 Notice**

Juniper Networks hardware and software products are Year 2000 compliant. The JUNOS software has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## End User License Agreement

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

**1. The Parties.** The parties to this Agreement are Juniper Networks, Inc. and its subsidiaries (collectively "Juniper"), and the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

**2. The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, and updates and releases of such software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller. "Embedded Software" means Software which Juniper has embedded in the Juniper equipment.

**3. License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

a. Customer shall use the Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.

b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius software on multiple computers requires multiple licenses, regardless of whether such computers are physically contained on a single chassis.

c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.

d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.

e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

**4. Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use the Embedded Software on non-Juniper equipment; (j) use the Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

**5. Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

**6. Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

**7. Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

**8. Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

**9. Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

**10. Taxes.** All license fees for the Software are exclusive of taxes, withholdings, duties, or levies (collectively "Taxes"). Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software.

**11. Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

**12. Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14(ALT III) as applicable.

**13. Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

**14. Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

**15. Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentés confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

# Abbreviated Table of Contents

|                  |   |      |
|------------------|---|------|
|                  | <b>About This Guide</b>   | xvii |
| <b>Part 1</b>    | <b>Using the Command-line Interface</b>   |      |
| <b>Chapter 1</b> | <b>Introducing the CLI</b>  | 3    |
| <b>Chapter 2</b> | <b>Getting Started: A Quick Tour of the CLI</b>                                   | 7    |
| <b>Part 2</b>    | <b>Monitoring and Configuring the BX7000 Multi-Access Gateway</b>                 |      |
| <b>Chapter 3</b> | <b>Using Operational Mode Commands to Monitor the BX7000 Multi-Access Gateway</b> | 23   |
| <b>Chapter 4</b> | <b>Using Commands and Statements to Configure the BX7000 Multi-Access Gateway</b> | 29   |
| <b>Chapter 5</b> | <b>Managing Configurations</b>  | 37   |
| <b>Part 3</b>    | <b>CLI Command Summaries</b>  |      |
| <b>Chapter 6</b> | <b>Summary of Show Commands</b>   | 43   |
| <b>Chapter 7</b> | <b>Summary of CLI Environmental Mode Commands</b>                                 | 125  |
| <b>Chapter 8</b> | <b>Summary of CLI Operational Mode Commands</b>                                   | 129  |
| <b>Chapter 9</b> | <b>Summary of CLI Configuration Mode Statements</b>                               | 139  |

**Part 4**

**Index**

---

**Index of Commands and Statements..... 147**

**Index..... 149**

# Table of Contents

|                                      |             |
|--------------------------------------|-------------|
| <b>About This Guide</b>              | <b>xvii</b> |
| Objectives .....                     | xvii        |
| Audience .....                       | xvii        |
| Documentation Conventions .....      | xviii       |
| List of Technical Publications ..... | xix         |
| Obtaining Documentation .....        | xx          |
| Documentation Feedback .....         | xx          |
| Requesting Support .....             | xx          |

## Part 1

### Using the Command-line Interface

|                  |   |          |
|------------------|---|----------|
| <b>Chapter 1</b> | <b>Introducing the CLI</b>                                      | <b>3</b> |
|                  | BXOS Software Overview .....                                    | 3        |
|                  | CLI Overview .....  | 3        |
|                  | Key Features of the CLI .....                                   | 3        |
|                  | CLI Modes and Command and Statement Hierarchies .....           | 4        |
|                  | CLI Command Modes .....   | 4        |
|                  | Operational Command Hierarchy .....                             | 5        |
|                  | Configuration Statement Hierarchy .....                         | 5        |
| <b>Chapter 2</b> | <b>Getting Started: A Quick Tour of the CLI</b>                 | <b>7</b> |
|                  | Before You Start .....  | 7        |
|                  | Logging in to the Gateway .....                                 | 8        |
|                  | Changing the Password .....                                     | 8        |
|                  | CLI Elements .....  | 9        |
|                  | CLI Messages .....  | 10       |
|                  | Types of Commands and Statements .....                          | 11       |
|                  | Command Options .....   | 11       |
|                  | Configuration Statements and Identifiers .....                  | 12       |
|                  | Privilege Levels for Using Commands and Statements .....        | 12       |
|                  | Switching Between Operational Mode and Configuration Mode ..... | 12       |
|                  | Moving Among Hierarchy Levels .....                             | 13       |
|                  | Getting Help .....  | 13       |
|                  | Getting Help for Commands .....                                 | 14       |
|                  | Using CLI Command Completion .....                              | 15       |
|                  | Moving Around and Editing in the CLI .....                      | 15       |
|                  | Displaying Additional Output .....                              | 16       |
|                  | Copying Commands into a Text File .....                         | 17       |
|                  | Using CLI Help .....  | 17       |
|                  | Displaying the Command History .....                            | 18       |

Checking the Status of the Gateway ..... 18  
 Configuring and Deleting the Protocol Configuration ..... 19  
 Filtering Command Output ..... 20

**Part 2**

**Monitoring and Configuring the BX7000 Multi-Access Gateway**

---

**Chapter 3 Using Operational Mode Commands to Monitor the BX7000 Multi-Access Gateway 23**

CLI Operational Mode Commands ..... 23  
     CLI Command Categories ..... 23  
     Commonly Used Operational Mode Commands ..... 24  
 Using Operational Mode Commands ..... 25  
     Commands with Brief, Detail, or Extensive Options ..... 25  
     Controlling the Scope of a Command ..... 26  
 Monitoring Who Uses the CLI ..... 26  
 Interface Naming Conventions ..... 26  
     Physical Part of an Interface Name ..... 26  
     Logical Part of an Interface Name ..... 27  
 Viewing Files and Directories ..... 27  
     Listing Files and Directories ..... 27  
     Specifying Filenames and URLs ..... 28

**Chapter 4 Using Commands and Statements to Configure the BX7000 Multi-Access Gateway 29**

CLI Configuration Mode Commands ..... 29  
     Configuration Mode Commands ..... 29  
     Configuration Statements and Identifiers ..... 31  
     Configuration Statement Hierarchy ..... 31  
 Entering and Exiting the Configuration Mode ..... 32  
 Modifying the Configuration ..... 33  
     Displaying the Current Configuration ..... 33  
     Deleting a Statement from the Configuration ..... 34  
     Moving Up in the Hierarchy ..... 35

**Chapter 5 Managing Configurations 37**

Committing a Configuration ..... 37  
 Saving and Loading a Configuration File ..... 37  
 Deleting a Configuration ..... 38  
 Editing a Configuration ..... 38  
 Performing CLI File Operations ..... 39  
     Copying a Configuration File ..... 39  
     Deleting a Configuration File ..... 39  
     Renaming a Configuration File ..... 39  
     Displaying the Configuration File Contents ..... 40  
     Listing the Configuration Files ..... 40  
 CLI Configuration Input Types ..... 40

**Part 3****CLI Command Summaries**

|                  |   |           |
|------------------|---|-----------|
| <b>Chapter 6</b> | <b>Summary of Show Commands</b>                                   | <b>43</b> |
|                  | show arp .....  | 46        |
|                  | show atm-cross-connect.....                                       | 46        |
|                  | show atm-traffic-profiles .....                                   | 47        |
|                  | show ba-classifiers .....   | 47        |
|                  | show bfd-global.....  | 47        |
|                  | show bfd-session.....   | 48        |
|                  | show bfd-session address.....                                     | 48        |
|                  | show bfd-session tunnel-egress .....                              | 48        |
|                  | show bfd-session tunnel-ingress.....                              | 49        |
|                  | show bypass tunnel .....  | 49        |
|                  | show chassis alarms.....  | 50        |
|                  | show chassis eeprom .....   | 50        |
|                  | show chassis environment .....                                    | 51        |
|                  | show chassis flash.....   | 51        |
|                  | show chassis hardware .....                                       | 52        |
|                  | show chassis power .....  | 53        |
|                  | show chassis temperature .....                                    | 54        |
|                  | show cli.....   | 54        |
|                  | show clock-card input-clock-validity.....                         | 55        |
|                  | show clock-card pll.....  | 55        |
|                  | show clock-card status .....                                      | 55        |
|                  | show clock-card ptp-master-status .....                           | 56        |
|                  | show clock-card ptp-slave-statistics .....                        | 56        |
|                  | show clock-card ptp-status .....                                  | 57        |
|                  | show configuration .....  | 58        |
|                  | show date .....   | 61        |
|                  | show exception.....   | 62        |
|                  | show input-clocks-status .....                                    | 62        |
|                  | show interface .....  | 62        |
|                  | show ip tcp statistics.....                                       | 77        |
|                  | show ip traffic .....   | 78        |
|                  | show ip udp statistics.....                                       | 79        |
|                  | show isis adjacency.....  | 80        |
|                  | show isis database .....  | 80        |
|                  | show isis hostname.....   | 81        |
|                  | show isis interface .....   | 81        |
|                  | show l2circuit.....   | 82        |
|                  | show ldp interface.....   | 85        |
|                  | show ldp neighbor .....   | 85        |
|                  | show ldp overview .....   | 86        |
|                  | show log .....  | 86        |
|                  | show manual-mode .....  | 87        |
|                  | show memory detail .....  | 88        |
|                  | show mf-classifiers.....  | 89        |
|                  | show mpls tunnel.....   | 89        |
|                  | show mpls tunnel association .....                                | 90        |
|                  | show ntp associations .....                                       | 90        |
|                  | show ntp status.....  | 91        |
|                  | show oam-ethernet connectivity-fault-management interfaces .....  | 91        |
|                  | show oam-ethernet connectivity-fault-management mep-database..... | 91        |

|  |   |
|--|---|
| show oam-ethernet connectivity-fault-management path-database..... | 92  |
| show oam-ethernet link-fault-management.....                       | 93  |
| show ospf database.....  | 96  |
| show ospf interface.....   | 97  |
| show ospf neighbor.....  | 98  |
| show policy.....   | 99  |
| show ports.....  | 99  |
| show protocol.....   | 100   |
| show qos-profiles.....   | 105   |
| show qos-scheduler.....  | 106   |
| show qos-shaper.....   | 106   |
| show qos-statistics.....   | 107   |
| show radius-server.....  | 107   |
| show route.....  | 107   |
| show rsvp interface.....   | 108   |
| show rsvp session.....   | 108   |
| show snmp.....   | 109   |
| show snmpv3.....   | 110   |
| show source-filter.....  | 110   |
| show statistics classifier.....                                    | 111   |
| show statistics gre-tunnel.....                                    | 111   |
| show statistics ipv4.....  | 112   |
| show statistics l2circuit.....                                     | 113   |
| show statistics l2circuit.....                                     | 114   |
| show statistics rsvp-tunnel.....                                   | 115   |
| show syslog.....   | 116   |
| show system clock-card.....  | 117   |
| show system processes.....   | 117   |
| show system storage.....   | 122   |
| show system uptime.....  | 122   |
| show system users.....   | 122   |
| show system virtual-memory.....                                    | 123   |
| show tacplus-server.....   | 123   |
| show version.....  | 124   |
| show zerotouch.....  | 124   |
| <br>   |   |
| <b>Chapter 7</b>   | <b>Summary of CLI Environmental Mode Commands</b> |
|  | <b>125</b>  |
| set cli banner.....  | 125   |
| set cli hostname.....  | 126   |
| set cli prompt.....  | 126   |
| set cli screen-length.....   | 126   |
| set cli screen-width.....  | 127   |
| show cli.....  | 127   |
| <br>   |   |
| <b>Chapter 8</b>   | <b>Summary of CLI Operational Mode Commands</b>   |
|  | <b>129</b>  |
| clear.....   | 130   |
| configure.....   | 130   |
| exit.....  | 130   |
| file.....  | 131   |
| help.....  | 131   |
| history.....   | 131   |
| monitor.....   | 132   |
| ping.....  | 132   |

|                            |     |
|----------------------------|-----|
| ping-mpls.....             | 133 |
| request system reboot..... | 133 |
| set.....                   | 134 |
| show.....                  | 134 |
| ssh.....                   | 136 |
| traceroute.....            | 137 |

**Chapter 9 Summary of CLI Configuration Mode Statements 139**

---

|                              |     |
|------------------------------|-----|
| commit.....                  | 140 |
| debug.....                   | 140 |
| delete.....                  | 140 |
| edit.....                    | 141 |
| exit.....                    | 141 |
| load.....                    | 142 |
| lock.....                    | 142 |
| request system snapshot..... | 142 |
| restart ima-group.....       | 142 |
| save.....                    | 143 |
| set.....                     | 143 |
| top.....                     | 143 |
| unlock.....                  | 143 |
| up.....                      | 144 |

**Part 4**

**Index**

---

|  |            |
|--|------------|
| <b>Index of Commands and Statements.....</b> | <b>147</b> |
| <b>Index.....</b>                            | <b>149</b> |



# List of Figures

|   |    |
|---|----|
| Figure 1: Committing a Configuration.....                 | 4  |
| Figure 2: Command Hierarchy Example.....                  | 5  |
| Figure 3: Configuration Statement Hierarchy Example ..... | 5  |
| Figure 4: Elements of CLI .....                           | 9  |
| Figure 5: Command Prompt in Configuration Mode .....      | 9  |
| Figure 6: Hierarchy Level Banner.....                     | 10 |
| Figure 7: Command Options .....                           | 11 |
| Figure 8: The --More--(percentage) Prompt .....           | 16 |



# List of Tables

|  |       |
|--|-------|
| Table 1: Notice Icons.....   | xviii |
| Table 2: Text and Syntax Conventions .....                         | xviii |
| Table 3: BX7000 Multi-Access Gateway Documentation.....            | xix   |
| Table 4: CLI Configuration Mode Navigation Commands.....           | 13    |
| Table 5: CLI Keyboard Sequences .....                              | 15    |
| Table 6: The ---More---(percentage) Prompt Keyboard Sequences..... | 16    |
| Table 7: Commonly Used Operational Mode Commands .....             | 24    |
| Table 8: Configuration Mode Commands .....                         | 29    |
| Table 9: Configuration Mode Top Level Statements.....              | 31    |
| Table 10: CLI Configuration Input Types .....                      | 40    |
| Table 11: BXOS Show Commands.....                                  | 43    |
| Table 12: show atm-cross-connect Output Field Details .....        | 46    |
| Table 13: show chassis alarms Output Field Details .....           | 50    |
| Table 14: show chassis environment Output Field Details.....       | 51    |
| Table 15: show chassis hardware Output Field Details .....         | 52    |
| Table 16: show chassis power Output Field Details .....            | 53    |
| Table 17: show chassis temperature Output Field Details.....       | 54    |
| Table 18: show cli Output Field Details .....                      | 54    |
| Table 19: show ip traffic Output Field Details.....                | 78    |
| Table 20: show memory detail Output Field Details .....            | 88    |
| Table 21: show statistics gre-tunnel Output Field Details.....     | 111   |
| Table 22: show statistics ipv4 Output Field Details.....           | 112   |
| Table 23: show statistics l2circuit Output Field Details .....     | 113   |
| Table 24: show statistics rsvp-tunnel Output Field Details .....   | 116   |
| Table 25: BXOS Environmental Mode Commands .....                   | 125   |
| Table 26: BXOS Operational Mode Commands .....                     | 129   |
| Table 27: BXOS Configuration Mode Statements.....                  | 139   |



# About This Guide

This preface provides the following guidelines for using the *BXOS CLI Users Guide and Command Reference*:

- Objectives on page xvii
- Audience on page xvii
- Documentation Conventions on page xviii
- List of Technical Publications on page xix
- Obtaining Documentation on page xx
- Documentation Feedback on page xx
- Requesting Support on page xx

## Objectives

---

This guide describes how to use the BX operating system (BXOS) command-line interface (CLI) to configure, monitor, and manage the BX7000 Multi-Access Gateway.



This manual documents the release 4.0 BXOS software. For additional information about the BXOS software—either corrections to or information that might have been omitted from this guide—see the software release notes at <http://www.juniper.net/>

---

## Audience

---

This guide is designed for network administrators who set up, configure, monitor, or administer the gateway software through the CLI. This guide is intended for the following audience:

- Customers with technical knowledge and experience with networks and network security, the Internet, and Internet routing protocols.
- Network administrators who install, configure, and manage the Internet.

Personnel operating the equipment must be trained and competent; must not conduct themselves in a careless, willfully negligent, or hostile manner; and must abide by the instructions provided in the documentation.

## Documentation Conventions

Table 1 on page xviii defines the notice icons used in this guide.

**Table 1: Notice Icons**




| Icon  | Meaning          | Description   |
|---|------------------|---|
|  | Information Note | Indicates important features or instructions.                               |
|  | Caution          | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning          | Alerts you to the risk of personal injury or death.                         |

Table 2 on page xviii defines the text and syntax conventions used in this guide.

**Table 2: Text and Syntax Conventions**

| Convention                        | Description  | Examples   |
|-----------------------------------|--|--|
| <b>Bold sans serif typeface</b>   | Represents text that you type.   | To enter configuration mode, type the configure command:<br>cli@BX7000> <b>configure</b>   |
| Fixed-width typeface              | Represents output on the terminal screen.  | cli@BX7000> <b>show chassis alarms</b><br>No alarms currently active   |
| <i>Italic typeface</i>            | <ul style="list-style-type: none"> <li>■ Introduces important new terms.</li> <li>■ Identifies book names.</li> <li>■ Identifies RFC and Internet draft titles.</li> </ul> | <ul style="list-style-type: none"> <li>■ A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li>■ <i>BXOS CLI Users Guide and Command Reference</i>.</li> <li>■ RFC 1997, <i>BGP Communities Attribute</i></li> </ul> |
| <i>Italic sans serif typeface</i> | Represents variables (options for which you substitute a value) in commands or configuration statements.   | Configure the gateway as a DHCP relay agent:<br>[edit]<br>cli@BX7000# <b>set dhcp-relay</b><br><i>ip-address</i> ;   |
| Sans serif typeface               | Represents names of configuration statements, commands, files, and directories; IP addresses; configuration hierarchy levels; or labels on gateway components.             | <ul style="list-style-type: none"> <li>■ To configure the buildout value of the T1 interface, include the buildout statement at the [edit interface <i>interface-name</i>] hierarchy level.</li> <li>■ The console port is labeled CONSOLE.</li> </ul>       |
| ( ) (parentheses)                 | Enclose optional keywords or variables.  | set cell-scrambling (enable   disable);  |
| (pipe symbol)                     | Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.     | [edit interface <i>interface-name</i> ]<br>set loopback (local   remote   none);   |

| Convention                    | Description  | Examples  |
|-------------------------------|--|---|
| # (pound sign)                | Indicates a comment specified on the same line as the configuration statement to which it applies.                   | rsvp {# Required for dynamic MPLS only}   |
| [ ] (square brackets)         | Identify a level in the configuration hierarchy.   | [edit]  |
| Indentation and braces ( {} ) | Enclose a keyword and variable at specific hierarchy levels. You can substitute one or more values for the variable. | <pre> protocols {   ospf {     area 1.1.1.1 {       interface ge-1/0/1 {         admin-state enable;       }     }   } } </pre> |
| ;(semicolon)                  | Identifies a leaf statement at a configuration hierarchy level.0   |   |
| gateway                       | BX7000 Multi-Access Gateway  |   |

## List of Technical Publications

Table 3 on page xix lists the BX7000 Multi-Access Gateway manuals.

To configure and operate the BXOS software, you must also use the configuration statements and operational mode commands documented in the *BXOS Configuration Guide* and *BXOS CLI Users Guide and Command Reference*.

**Table 3: BX7000 Multi-Access Gateway Documentation**

| Document   | Description  |
|--|--|
| <i>BX7000 Multi-Access Gateway Hardware Guide</i>        | <p>Provides a detailed hardware description of the gateway. This guide:</p> <ul style="list-style-type: none"> <li>■ Explains how to unpack, install, mount, access, and maintain the gateway.</li> <li>■ Explains the various hardware components such as power supply, chassis, and ports.</li> <li>■ Provides troubleshooting of the hardware-related issues.</li> </ul>  |
| <i>BXOS Configuration Guide</i>                          | <p>Provides a detailed software description of the BXOS software. This guide:</p> <ul style="list-style-type: none"> <li>■ Explains the configuration statements used to configure various properties of the gateway.</li> <li>■ Describes how to configure the basic system properties, protocols, interfaces, pseudowires, and tunnels.</li> <li>■ Explains statement hierarchies and parameters used in configuration.</li> </ul> |
| <i>BXOS CLI Users Guide and Command Reference</i>        | <p>Provides a detailed description of all the configuration mode and operational mode commands. This guide:</p> <ul style="list-style-type: none"> <li>■ Explains how to start the CLI and the components of the CLI.</li> <li>■ Contains information about the commands used to set the gateway properties (set commands) and the commands used to view the outputs (show commands).</li> </ul>                                     |
| <i>BX7000 Multi-Access Gateway Getting Started Guide</i> | <p>Provides an overview on installing the gateway. This guide:</p> <ul style="list-style-type: none"> <li>■ Explains how to quickly set up the gateway.</li> <li>■ Contains the basic steps to install the gateway and establish the basic gateway connectivity.</li> </ul>  |

## Obtaining Documentation

---

To obtain the most current version of all Juniper Networks technical documentation, see the products documentation page on the Juniper Networks Web site at <http://www.juniper.net/>.

To order a documentation CD, which contains this guide and other Juniper Networks technical documents, contact your sales representative.

Copies of the Management Information Bases (MIBs) available in a software release are included on the documentation CDs and at <http://www.juniper.net/>.

## Documentation Feedback

---

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document name
- Document part number
- Page number
- Software release version (not required for *Network Operations Guides [NOGs]*)

## Requesting Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need postsales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the JTAC User Guide located at <http://www.juniper.net/customers/support/downloads/710059.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC Hours of Operation —The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

### Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

Find CSC offerings: <http://www.juniper.net/customers/support/>

- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base:  
<http://kb.juniper.net/>
- Download the latest versions of software and review release notes:  
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:  
<https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool:  
<http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool located at <https://tools.juniper.net/SerialNumberEntitlementSearch/>.

### **Opening a Case with JTAC**

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, visit us at <http://www.juniper.net/support/requesting-support.html>.



## Part 1

# Using the Command-line Interface

- Introducing the CLI on page 3
- Getting Started: A Quick Tour of the CLI on page 7



## Chapter 1

# Introducing the CLI

This chapter provides an overview of the command-line interface (CLI) for the BX operating system (BXOS) software:

- BXOS Software Overview on page 3
- CLI Overview on page 3
- CLI Modes and Command and Statement Hierarchies on page 4

## **BXOS Software Overview**

---

The BXOS software loads all the software components through a boot flash. The first sector of the flash contains configuration information, which is used by the processor during the booting. The BXOS image is embedded with a compressed root file system, which includes the standard libraries and executables for basic operation of the BX7000 Multi-Access Gateway. The configuration and log files are stored in the journal flash file system. In case of system crash, the kernel writes the kernel stack information in the crash dump partition. This crash information is recovered during the next boot for analysis.

## **CLI Overview**

---

The BXOS CLI runs on the gateway. The BXOS CLI provides a set of operational commands and configuration statements that you can use to monitor and configure a gateway.

## **Key Features of the CLI**

The hierarchical organization of statements simplifies the CLI usage and provides a regular syntax for all the commands:

- Consistent command names—Commands that provide the same function have similar names, regardless of the software portion on which they are operating. For example, all `show` commands display the software information and statistics, while all `clear` commands erase the system counters.
- List short description of available commands—The CLI provides information about available commands at each level of the hierarchy. To see a list of the available commands along with a short description, type a question mark (?) at any hierarchy level.

- Command completion—At each hierarchy level, command completion for command names (keywords) is available. You can press either the Tab key or the Spacebar to complete a command or an option that you have partially typed. The complete command name appears if partially typed letters begin with a string that uniquely identifies a command. Otherwise, the CLI displays all its possible completions.

## CLI Modes and Command and Statement Hierarchies

The CLI operational commands and configuration statements are organized under two command modes and various hierarchies. The following sections provide you with an overview of the CLI command modes and command and statements hierarchies:

- CLI Command Modes on page 4
- Operational Command Hierarchy on page 5
- Configuration Statement Hierarchy on page 5


### CLI Command Modes

The BXOS CLI provides various commands for configuring and monitoring the gateway. The CLI provides configuration and status monitoring functionality through SSH through any reachable network. The CLI operates in two different command modes:

- Operational mode—Use this mode to view, monitor, and troubleshoot the BXOS software settings.
- Configuration mode—Use this mode to configure the properties of the BXOS software, including general routing information, routing protocols, user access, interfaces, and other system properties. The configuration is stored as a hierarchy of statements.

In configuration mode, you can view a local file stored in the CLI database. You can alter the running configuration without potentially damaging the current network operations. The gateway does not implement the configuration changes until you commit them using the commit command. (See Figure 1 on page 4.)

 **Figure 1: Committing a Configuration**

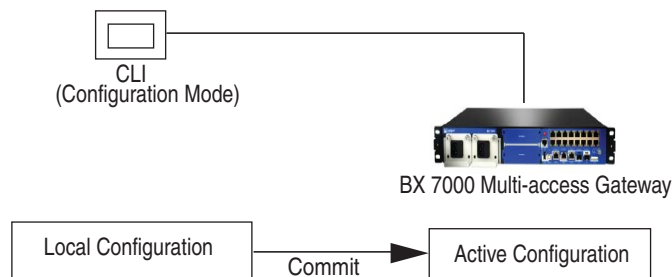


g002925

## Operational Command Hierarchy

The operational commands are organized in a hierarchy. Commands that perform similar functions are grouped together under the same level of hierarchy. For example, the commands displaying information about the configured interfaces are grouped under the `show interface interface-name` command, and the commands displaying OSPF parameters are grouped under the `show ospf` command.

To execute a command, you enter the full command name starting from the top level of a hierarchy. For example, to display a brief view of an interface configured on the gateway, use the `show interface brief` command. (See Figure 2 on page 5.)

 **Figure 2: Command Hierarchy Example**

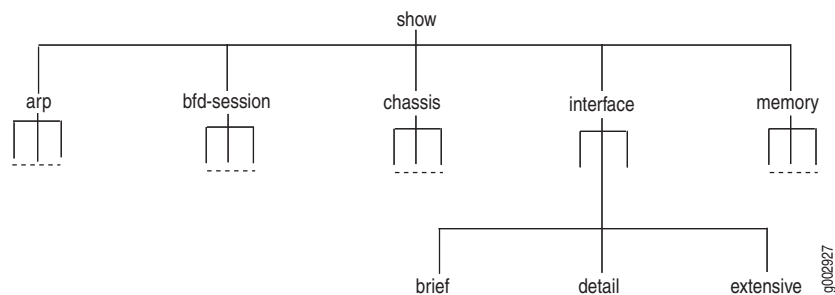


## Configuration Statement Hierarchy

The configuration statement hierarchy contains two types of statements:

- Container statements—These are statements that contain substatements within them.
- Leaf statements—These are standalone statements that do not contain any substatements.

The container and leaf statements together form the configuration hierarchy. (See Figure 3 on page 5.)

 **Figure 3: Configuration Statement Hierarchy Example**

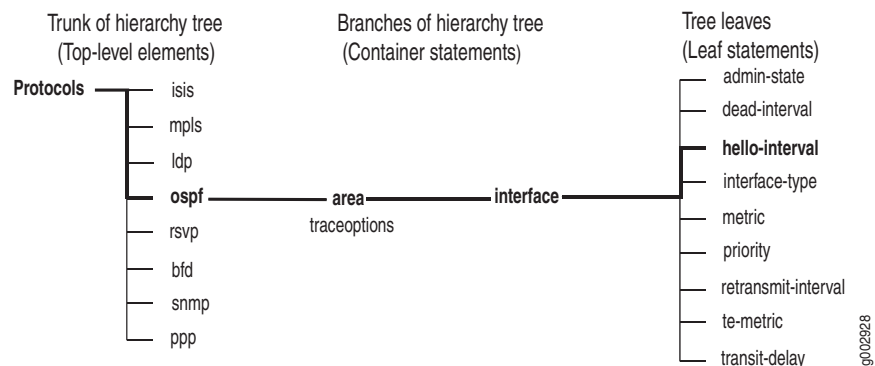



## Chapter 2

# Getting Started: A Quick Tour of the CLI

This chapter describes how to start the BX operating system (BXOS) command-line interface (CLI), view the command hierarchy, and edit the BX7000 Multi-Access Gateway configuration. The detailed information about using the CLI appears in subsequent chapters.

This chapter includes the following topics:

- Before You Start on page 7
- Logging in to the Gateway on page 8
- Changing the Password on page 8
- CLI Elements on page 9
- CLI Messages on page 10
- Types of Commands and Statements on page 11
- Privilege Levels for Using Commands and Statements on page 12
- Switching Between Operational Mode and Configuration Mode on page 12
- Moving Among Hierarchy Levels on page 13
- Getting Help on page 13
- Checking the Status of the Gateway on page 18
- Configuring and Deleting the Protocol Configuration on page 19
- Filtering Command Output on page 20

### Before You Start

---

Ensure that the gateway is properly set up and the BXOS software is installed. To access the BXOS CLI, you should have a direct console connection to the gateway or you can connect the gateway through a remote console with network access using SSH. If the gateway is not set up, follow the installation instructions provided with the gateway before proceeding. For more information, see the *BX7000 Multi-Access Gateway Hardware Guide*.

## Logging in to the Gateway

---

You can access the gateway using the root account or CLI user privileges.

When the gateway starts, it prompts for a username and password.

- To log in as a root user, type `root` at the system prompt for a username:

```
login as: root
Password: root
```

The root login account has superuser privileges. The root user can invoke the CLI to execute all the commands and statements.

- To log in as a CLI user, access the gateway and type `cli` at the root prompt:

```
root@BX7000> cli
cli@BX7000>
```

The `>` symbol shows that currently you are in operational mode. When you log in to the gateway and start the CLI, by default you are in operational mode. To enter configuration mode, type `configure` at the command prompt. The command prompt changes to `#` to show that you are in configuration mode.

## Changing the Password

---

For changing the password for the root user, type `passwd` at the root prompt:

```
root@BX7000# passwd

Changing password for root
New password: <<< hidden
Retype password: <<< hidden
Password for root changed by root
root@BX7000#
```

For changing the password for the CLI user, type `passwd cli` at the root prompt:

```
root@BX7000# passwd cli

Changing password for cli
New password: <<< hidden
Retype password: <<< hidden
Password for cli changed by root
root@BX7000#
```



**NOTE:** The password modified is stored across reboot, except during the system crash.

---

## CLI Elements

Figure 4 on page 9 shows the elements of the CLI in operational mode.

**Figure 4: Elements of CLI**

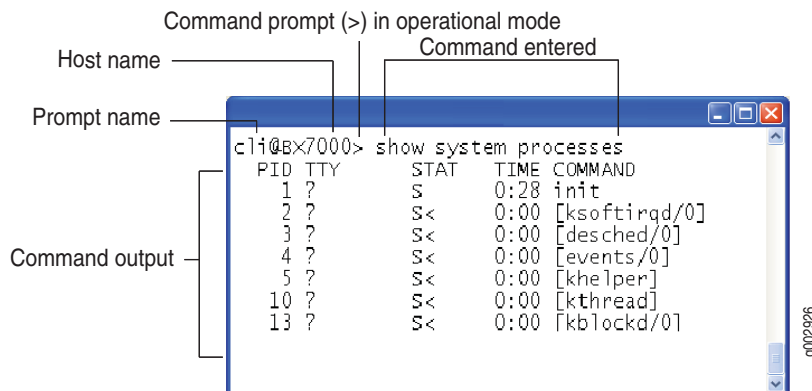 


Figure 5 on page 9 shows the elements of the command prompt in configuration mode. When you enter configuration mode using the configure command, the command prompt changes from cli@BX7000> to cli@BX7000# and the CLI displays a list of currently active users. The CLI also displays a banner at the top of the command prompt to show the hierarchy level.

**Figure 5: Command Prompt in Configuration Mode**


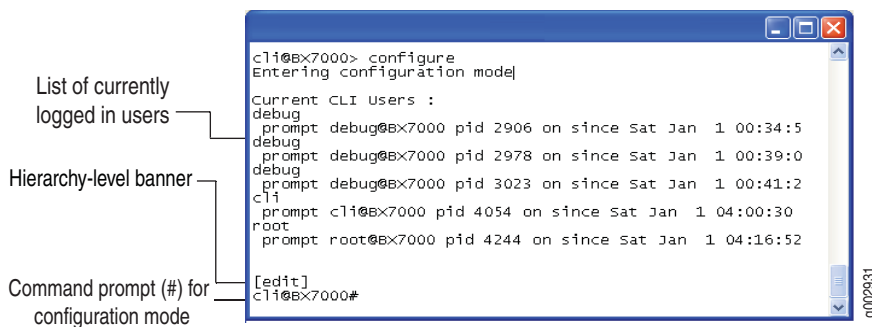 


Figure 6 on page 10 shows the hierarchy-level banner for a configuration command entered in configuration mode. The hierarchy banner indicates that you are in configuration mode and displays your current location in the statement hierarchy.

 **Figure 6: Hierarchy Level Banner**

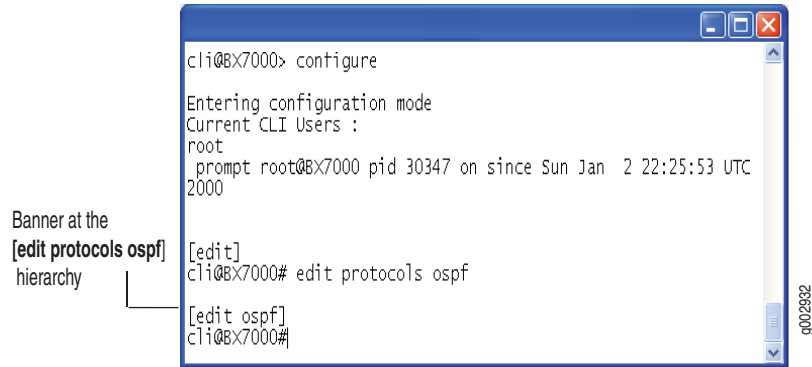

## CLI Messages

The CLI displays messages for the following events:

- Entering and exiting configuration and operational command modes
- Successful completion of certain commands
- Usage of invalid string or value in a command
- Status messages while committing a command
- Occurrence of errors while working in the CLI

For example, if you type the name of a command or statement that does not exist, the CLI displays the message “Unsupported argument”.

```
cli@BX7000> filefile
Error: Unsupported command 'filefile'
cli@BX7000> file archive ?
Error: Unsupported argument 'archive'
```

When you commit a configuration, the status message will be displayed.

```
[edit]
cli@BX7000# edit protocols ospf
[edit ospf]
cli@BX7000# set admin-state disable
[edit ospf]
cli@BX7000# up
[edit]
cli@BX7000# commit
Commit in progress...
Commit completed [Elapsed time: 1 seconds 148515 microseconds]
```

## Types of Commands and Statements


The CLI supports the following types of commands and statements:

- Operational mode commands—You use the operational mode to enter the commands that monitor the gateway operation. For detailed information, see “Summary of CLI Operational Mode Commands” on page 129.
- Environmental commands—Environmental commands are configuration mode commands that control the CLI environment. For example, you can set a banner on the CLI screen. For detailed information, see “Summary of CLI Environmental Mode Commands” on page 125.
- Configuration mode commands—Configuration mode commands perform general configuration functions. For example, committing a configuration, copying statements, navigating the hierarchy, and managing configuration files.
- Configuration statements—Configuration statements define the gateway configuration. Your location in the configuration hierarchy determines which configuration statements are available. For example, the [edit interface *interface-name*] hierarchy level includes statements to configure the routing interfaces. For more information, see “Configuration Statements and Identifiers” on page 31.

### Command Options

You must follow specific CLI syntax rules while working with the BXOS CLI. Some simple commands require a single word to run, while others require options that you enter to complete the command. Certain commands have options that are not mandatory. These options change how the command is executed and modify the type of command output generated. Figure 7 on page 11 shows an example displaying the options available for the file command.

 **Figure 7: Command Options**

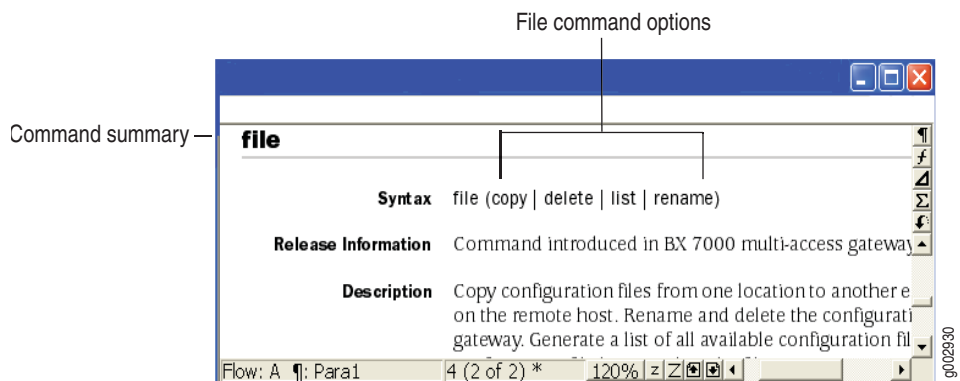

## Configuration Statements and Identifiers

To configure the properties of the BXOS software, you include relevant statements in the configuration. A statement contains fixed text, called the keyword, and an optional identifier. An identifier is an identifying name, that you define, such as the name of an interface or a username. For example, the `set` command has the following options that you can set:

```
[edit]
cli@BX7000# set ?
cli          CLI settings
date        Date Services
```

## Privilege Levels for Using Commands and Statements

---

Each CLI command and configuration statement has an associated privilege level. You can execute, configure, and view only those statements for which you have access privileges. For example, you can use the `configure` command to enter configuration mode only if you have configuration permission. The root login account has superuser privileges with which you can access all the commands and statements.

## Switching Between Operational Mode and Configuration Mode

---

When you monitor and configure the gateway, you may need to switch between operational and configuration modes. The command prompt changes when you enter configuration mode. The command prompt is a right angle bracket (>) for operational mode and a pound symbol (#) for configuration mode.

When you log in to the gateway, by default you are in operational mode. To enter configuration mode, type the `configure` command at the CLI operational mode prompt:

```
cli@BX7000> configure
Entering the configuration mode
Current CLI Users :
cli console      -          00:01   1:09m  0.00s  1.05s  -cli
[edit]
cli@BX7000#
```

The CLI prompt changes from `cli@BX7000>` to `cli@BX7000#` indicating the change in the mode. It also displays a list of other users who are currently working on the CLI. You can use any of the configuration commands in this mode.

To return to operational mode, do either of the following:

- Commit the configuration and exit:

```
[edit]
cli@BX7000# commit
commit complete
[edit]
cli@BX7000# exit
Exiting the configuration mode
cli@BX7000>
```

- Exit without committing the configuration:

```
[edit]
cli@BX7000# exit
Exiting the configuration mode without committing (Yes/No) Yes
cli@BX7000>
```

When you exit configuration mode, the CLI prompt changes from `cli@BX7000#` to `cli@BX7000>` and the banner no longer appears. Your changes are not applied when you quit without committing the configuration. For more information, see “Entering and Exiting the Configuration Mode” on page 32.

## Moving Among Hierarchy Levels

---

Table 4 on page 13 lists the CLI commands you can use to navigate among the different levels of the configuration statement hierarchy.

**Table 4: CLI Configuration Mode Navigation Commands**

| Command                           | Description  |
|-----------------------------------|--|
| <code>edit hierarchy-level</code> | Moves to an existing configuration statement hierarchy or creates the defined hierarchy and moves to that level. |
| <code>up</code>                   | Moves up the hierarchy one level at a time.  |
| <code>top</code>                  | Moves to the highest level in the hierarchy.   |

## Getting Help

---

The CLI provides online help. You can get help for commands for which you do not know the complete syntax. The CLI provides the possible completions for partially typed commands. This section includes the following topics:

- Getting Help for Commands on page 14
- Using CLI Command Completion on page 15
- Moving Around and Editing in the CLI on page 15
- Displaying Additional Output on page 16
- Copying Commands into a Text File on page 17
- Using CLI Help on page 17
- Displaying the Command History on page 18

## Getting Help for Commands

To get information about commands at each level of the CLI command hierarchy, perform one of the following:

- To view a list of CLI commands and options, type a question mark (?) at the command-line prompt. For example, type a question mark at the command-line prompt to view a list of top-level operational mode commands.

```
cli@BX7000> ?
clear                Clear information in the system
configure            Manipulate software configuration information
exit                Exit from this level
file                Perform file operations
help                Provide help information
history             Show a list of previously run commands
monitor             Monitor Files
ping                Ping remote target
ping-mpls           Ping remote target over mpls
request             Make system-level requests
set                 Set CLI properties
show                Show system configuration
ssh                 Set System SSH Services
traceroute          Trace route to remote host
```

- To view a list of CLI commands and options available for a command, type question mark (?) after that command or command option.

```
cli@BX7000> clear ?
commit              Clear all the config data.
counters            Clear counters entries.
history             Clear CLI Commands History.
isis                Clear ISIS information.
log                 Clear contents of log file.
mpls                Clear mpls information.
ospf                Clear Open Shortest Path First information.
```

- To view a list of all available commands, type help.

```
cli@BX7000> help
clear                Clear information in the system
configure            Manipulate software configuration information
exit                Exit from this level
file                Perform file operations
help                Provide help information
history             Show a list of previously run commands
monitor             Monitor Files
ping                Ping remote target
ping-mpls           Ping remote target over mpls
request             Make system-level requests
set                 Set CLI properties
show                Show system configuration
ssh                 Set System SSH Services
traceroute          Trace route to remote host
```

## Using CLI Command Completion

You do not need to type the full command or option name for the CLI to recognize it:

- To display all possible command or option completion, type the partial command followed by a question mark.

```
cli@BX7000> pi?
ping                Ping remote target
ping-mps           Ping remote target over mpls
```

- To complete a command or an option that you have partially typed, press either the Tab or the Spacebar key. If the partially typed letters begin with a string that uniquely identifies a command, the complete command name appears on the CLI.

```
cli@BX7000> s
's' is ambiguous.
Possible completions:
ssh                Connect to remote host
show              Show system configuration
set               Set a parameter
```



**NOTE:** For additional information, see “Using CLI Help” on page 17

## Moving Around and Editing in the CLI

You can use keyboard sequences to edit and view a list of recently executed commands. Table 5 on page 15 lists some of the keyboard shortcuts available in the BXOS software.

**Table 5: CLI Keyboard Sequences**

| Category                          | Action  | Keyboard Sequence              |
|-----------------------------------|---|--------------------------------|
| Move the Cursor                   | Move the cursor back one character.                                       | Ctrl+ b                        |
|                                   | Move the cursor forward one character.                                    | Ctrl+ f                        |
|                                   | Move the cursor to the beginning of the command line.                     | Ctrl+ a                        |
|                                   | Move the cursor to the end of the command line.                           | Ctrl+ e                        |
| Delete Characters                 | Delete the character before the cursor.                                   | Ctrl+ h or Delete or Backspace |
|                                   | Delete all the characters from the cursor to the end of the command line. | Ctrl+ k                        |
|                                   | Delete all the characters on the command line.                            | Ctrl+ u                        |
|                                   | Delete the word before the cursor.  | Ctrl+ w                        |
| Display the previous command line | Scroll backward through the list of recently executed commands.           | Ctrl+ p                        |
|                                   | Scroll forward through the list of recently executed commands.            | Ctrl+ n                        |
| Redraw                            | Redraw the current line.  | Ctrl+ l                        |

## Displaying Additional Output

If the output from a command is extensive and goes beyond the length of the screen, the CLI displays the output one page at a time. The `--More--(percentage)` prompt displayed at the bottom of page indicates that more output is available. This format helps you scroll and search through the entire output. You can also use the mouse scrolling button, up arrow, down arrow, and Spacebar keys to navigate through the output.

For example, if you type the help command, the `--More--(percentage)` prompt indicates the output percentage covered by the current page. (See Figure 8 on page 16.)

**Figure 8: The `--More--(percentage)` Prompt**



The `--More--(percentage)` Prompt—

Table 6 on page 16 lists the keyboard sequences that you can use at the `--More--(percentage)` prompt.

**Table 6: The `--More--(percentage)` Prompt Keyboard Sequences**

| Category                         | Action   | Keyboard Sequence |
|----------------------------------|--|-------------------|
| Get Help                         | Display information about all keyboard sequences that you can use at the <code>--More--(percentage)</code> prompt. | h                 |
| Scroll down                      | Display next x lines of text, where x is the screen size.  | z or Spacebar     |
|                                  | Scroll down one line.  | Enter             |
|                                  | Scroll down x lines, where x depends on the current scroll size.   | d or Ctrl+ D      |
| Skip                             | Skip forward one line.   | s                 |
|                                  | Skip forward x lines of text, where x is the screen length.  | f                 |
|                                  | Skip backwards x screens full of text, where x is the screen length.   | b or Ctrl+ B      |
| Display line number and filename | Display the current line number.   | =                 |
|                                  | Display the current filename and line number.  | :f                |

| Category                 | Action   | Keyboard Sequence             |
|--------------------------|--|-------------------------------|
| Exit, redraw, and repeat | Quit the output and return to command prompt.  | q or Q                        |
|                          | Redraw the screen.   | Ctrl+ L                       |
|                          | Repeat the previous command.   | .                             |
| Search                   | Search through regular expressions, or search for the first occurrence of character. | /< regular expression>        |
|                          | Search for the first occurrence of the last entered regular expression.              | n                             |
|                          | Go to the place where previous search was initiated.                                 | '                             |
| Execute command          | Execute the command in a subshell.   | !<br>!< cmd> or :!<br>:< cmd> |
|                          | Start up /usr/bin/vi at the current line.  | v                             |
| Move to file             | Go to next file.   | :n                            |
|                          | Go to previous file.   | :p                            |

### ***Copying Commands into a Text File***

You can copy the outputs generated by all commands and statements executed on the CLI terminal into a Notepad or Microsoft Word file. To copy the commands, select the text you want to copy, open the destination file, and paste the text.

### ***Using CLI Help***

To get information about all commands available in both operational and configuration mode, type the `help` command. The `help` command lists the names and descriptions of all available commands. The `help` command cannot be used at the middle or end of a command to get more information about the command, its parameters, and usage.

```
cli@BX7000# help
Commands available:
  clear          Clear information in the system
  configure      Manipulate software configuration information
  exit           Exit from this level
  file           Perform file operations
  help           Provide help information
  history        Show a list of previously run commands
  monitor        Monitor Files
  ping           Ping remote target
  ping-mpls     Ping remote target over mpls
  request        Make system-level requests
  set            Set CLI properties
  show           Show system configuration
  ssh           Set System SSH Services
  traceroute     Trace route to remote host
```

## Displaying the Command History

You can view a record of all recently executed commands by using the history command. This command lists all commands or statements executed in a particular session. For example:

```
cli@BX7000> history
Command history:
 0. show version
 1. show memory
 2. show memory detail
 3. show cli prompt
 4. show cli
 5. history
```



**NOTE:** You can use either the up arrow or down arrow to scroll through the list of recently executed commands directly on the command line.

## Checking the Status of the Gateway

You can also use the show command to display the list of command options that can be used to monitor the gateway.

```
cli@BX7000> show ?
arp                Show system Address Resolution Protocol table entries
atm-cross-connect  Show ATM cross connection information
atm-traffic-profiles Show ATM traffic profile information
ba-classifiers     Show Behavioral Aggregate classifier information
bfd-global         Show BFD global parameter
bfd-session        Show Bidirectional Forwarding Detection information
bypass            Show bypass tunnel information
chassis           Show chassis information
cli               Show command-line interface settings
configuration      Show current configuration
date              show system date
exception          Show system exception information
interface         Show interface information
ip                Show IP information
isis              Show Intermediate System-to-Intermediate System
l2circuit         Show Layer 2 circuit information
ldp               Show Label Distribution Protocol information
log               Show contents of log file
manual-mode       Show the manual mode
memory            Show system memory usage information
mf-classifiers    Show Multi-field classifier information
mpls              Show MPLS information
ntp               Show Network Time Protocol information
ospf              Show Open Shortest Path First information
policy            Show routing policy information
ports             Show Ports
protocols         Show routing protocols
qos-profiles      Show QoS profile information
qos-statistics    Show QOS statistics
radius-server     Show RADIUS authentication server information
route             Show routing table information
rsvp              Show Resource Reservation Protocol information
snmp              Show Simple Network Management Protocol information
source-filter     Show MAC filters
statistics        Show statistics for protocol
```

```

syslog                Syslog configuration details
system               Show system information
tacplus-server       Show TACACS+ authentication server information
version              Show software process revision levels
zerotouch            Show the zerotouch mode

```

To view the properties under a command option, use `show <command options>`. The following example displays the chassis properties:

```

cli@BX7000> show chassis ?
alarms                Show the chassis alarms
eeprom                Show the syrah eeprom details
environment           Show the chassis power and temperature details
flash                 Show the flash details
hardware              Show the syrah hardware details
power                 Show the chassis power details
temperature           Show the chassis temperature

```

## Configuring and Deleting the Protocol Configuration

You can configure a routing protocol using the `edit` command. You can also use this command to change the configuration of the routing protocol by modifying, deleting, or re-creating the statements. The following examples show how to edit a protocol configuration:

- To edit the dead and hello intervals of the OSPF protocol, enter the hierarchy path of the statements:

```

[edit]
cli@BX7000# edit protocols ospf
[edit ospf]
cli@BX7000# edit area 0.0.0.0
[edit ospf area 0.0.0.0]
cli@BX7000# edit interface ge-1/0/0
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# set hello-interval 7
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# set dead-interval 28
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# top
[edit]
cli@BX7000#

```

- If you do not want to run OSPF on the first interface, you can delete a statement:

```

[edit]
cli@BX7000# edit protocols ospf
[edit ospf]
cli@BX7000# edit area 0.0.0.0
[edit ospf area 0.0.0.0]
cli@BX7000# delete interface ge-1/0/0
[edit ospf area 0.0.0.0]
cli@BX7000# top
[edit]
cli@BX7000#

```

- If you want OSPF to run on an interface with the default values for the hello and dead intervals, delete the existing hello and dead interval timers:

```
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# delete hello-interval
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# delete dead-interval
```

- You can set multiple statements that belong to the same hierarchy. This reduces the number of commands you use to set each statement. For example, you can set the hello interval and the dead interval that belong to the same hierarchy level.

Get the original hello and dead interval timers on the interface, and then set the statements:

```
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# set hello-interval 5
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# set dead-interval 20
[edit ospf area 0.0.0.0 interface ge-1/0/0]
cli@BX7000# exit
cli@BX7000>
```

## Filtering Command Output

---

You can filter the output of the BXOS CLI commands.

The CLI supports the pipe (|) symbol followed by the match filter to filter the output of the commands. This filter can be used in configuration and operational modes. The filter can be used to display only the lines, which matches a pattern. You can also filter the error messages displayed when executing the configuration commands.

The following example displays all lines in the output of the show interface command that matches the pattern “physical”.

```
cli@BX7000> show interface | match physical
Physical interface :ge-1/0/0, Enabled, Physical Link : Up
    Physical Address : 00:1f:12:80:19:80
Physical interface :ge-1/0/1, Enabled, Physical Link : Up
    Physical Address : 00:1f:12:80:19:81
```

## Part 2

# Monitoring and Configuring the BX7000 Multi-Access Gateway

- Using Operational Mode Commands to Monitor the BX7000 Multi-Access Gateway on page 23
- Using Commands and Statements to Configure the BX7000 Multi-Access Gateway on page 29
- Managing Configurations on page 37



## Chapter 3

# Using Operational Mode Commands to Monitor the BX7000 Multi-Access Gateway

Use the BX operating system (BXOS) command-line interface (CLI) operational mode commands to monitor, modify, and troubleshoot the BX7000 Multi-Access Gateway settings. This chapter includes the following sections, which provide information on the CLI operational commands:

- CLI Operational Mode Commands on page 23
- Using Operational Mode Commands on page 25
- Monitoring Who Uses the CLI on page 26
- Interface Naming Conventions on page 26
- Viewing Files and Directories on page 27

## CLI Operational Mode Commands

---

This section includes the following topics:

- CLI Command Categories on page 23
- Commonly Used Operational Mode Commands on page 24

### *CLI Command Categories*

A variety of commands are available when you log in to the gateway and launch the CLI. These can be categorized as follows:

- Controlling the CLI environment—These commands configure the banner on the CLI display screen and the CLI hostname. For a detailed description of these commands, see “Summary of CLI Environmental Mode Commands” on page 125.

- **clear**—Clears the CLI screen, log, history, counters, statistics, and protocol database information for the BXOS software.
  - **monitor**—Performs real-time debugging of the various components of the gateway, including the protocols and interfaces.
  - **ping**—Determines the reachability of a remote network host.
  - **show**—Displays the current configuration and information about chassis, interfaces, routing protocols, routing tables, routing policy filters, system processes, system statistics, and system memory.
  - **traceroute**—Traces the route to a remote network host.
- **Rebooting and restarting the software**—The **request** command performs system-level operations, including stopping and rebooting the gateway and loading the BXOS software images. This command also performs the snapshot operation by copying the current image into backup.
- **Connecting to other network systems**—The **ssh** command opens the secure shell connections.
- **Copying files**—The **copy** command copies files from one location to another on the same gateway.
- **Entering configuration mode**—The **configure** command provides a series of commands to configure the BXOS software and the gateway properties. These commands include ATM and TDM-related services or system services to configure routing protocols, interfaces, and network management features.
- **Exiting configuration mode**—The **exit** command takes you out of configuration mode.



**NOTE:** For more detailed information about the operational mode commands, see “Summary of CLI Operational Mode Commands” on page 129.

### Commonly Used Operational Mode Commands

Table 7 on page 24 lists some of the operational commands that you can use to monitor the gateway operation.

**Table 7: Commonly Used Operational Mode Commands**

| Category         | Command                    | Description  |
|------------------|----------------------------|--|
| Software version | show version               | Displays the version of the software running on the gateway. |
| Remote systems   | ping                       | Determines the host reachability and network connectivity.   |
|                  | traceroute                 | Shows the route to a network system.                         |
| System memory    | show system virtual-memory | Displays the current BXOS memory details.                    |

| Category                  | Command                  | Description  |
|---------------------------|--------------------------|--|
| File manipulation         | file list                | Displays a list of files and directories on the BX7000 Multi-Access Gateway. |
|                           | file show                | Shows the contents of a file.  |
|                           | file delete              | Deletes a file.  |
| Interface information     | show interface           | Displays detailed information about interfaces.                              |
| Chassis                   | show chassis alarms      | Displays chassis alarm status.   |
|                           | show chassis eeprom      | Displays the BX7000 Multi-Access Gateway eeprom details.                     |
|                           | show chassis environment | Displays gateway environment information.                                    |
|                           | show chassis flash       | Displays flash details.  |
|                           | show chassis hardware    | Displays hardware inventory.   |
|                           | show chassis power       | Displays chassis power details.  |
|                           | show chassis temperature | Displays chassis temperature.  |
| Routing table information | show route               | Displays information about entries in the routing tables.                    |
| IS-IS                     | show isis adjacency      | Displays adjacent gateways.  |
| OSPF                      | show ospf neighbor       | Displays standard information about the OSPF neighbors.                      |
| RSVP                      | show rsvp interface      | Shows the status of interfaces on which RSVP is running.                     |
|                           | show rsvp session        | Lists currently active RSVP sessions.  |

## Using Operational Mode Commands

This section includes the following topics, which describe the general features of the CLI operational commands:

- Commands with Brief, Detail, or Extensive Options on page 25
- Controlling the Scope of a Command on page 26

### Commands with Brief, Detail, or Extensive Options

You can control the amount of information displayed in the output of the show command using the *brief*, *detail*, or *extensive* option. To list the options available for any command, type *?* after the command. For example:

```
cli@BX7000> show interface ge-1/0/0 ?
brief          Display brief output
detail        Display detailed output
extensive      Display extensive output
```

## Controlling the Scope of a Command

The commands provide options that you can use to identify specific components on the gateway. For example:

To display information about a specific interface, type the interface name as a command option:

```
cli@BX7000> show interface ge-1/0/0
Physical interface :ge-1/0/0, Enabled, Physical Link : Up
Logical interface :ge-1/0/0.0, Interface index:3
Link-level type: Ethernet, MTU: 1500
Speed :100 Mbps,          Interface Operational state is Enabled
Vlan Tagging      : Disabled
Auto negotiation : Enabled , Source filtering : Disabled
Local address   : 192.168.1.110   Network address : 192.168.1.0
Prefix length   : 24
Physical Address : 00:00:01:02:04:0d
Description :
```

## Monitoring Who Uses the CLI

---

A maximum of four users can simultaneously log in to the gateway and use the CLI to configure or modify the operating system software configuration. When you enter configuration mode and another user is also working, the CLI displays a notification message with the name of the user. SSH shows an error message when the fifth user tries to connect to the gateway.

## Interface Naming Conventions

---

This section describes the following naming conventions used in operational mode:

- Physical Part of an Interface Name on page 26
- Logical Part of an Interface Name on page 27

### Physical Part of an Interface Name

The physical part of an interface name contains the interface type, interface group, a reserved value which is always set to 0, and port number. In the physical part of an interface, a hyphen (-) separates the interface type from the interface group, and a slash (/) separates the interface group, reserved value, and port number.

*type-interface group/0/port*

- The type is the name of the interface. The gateway supports the following interfaces:
  - ge—Gigabit Ethernet interface
  - t1—T1 interface
  - e1—E1 interface

- The interface group specifies a group of interfaces. The gateway supports the following group of interfaces:
  - 0—T1 or E1 interface
  - 1—Gigabit Ethernet interface

The BX7000 Multi-Access Gateway has 16 T1 or E1 interfaces denoted as t1-0/0/0 through t1-0/0/15 or e1-0/0/0 through e1-0/0/15, three copper Ethernet interfaces denoted as ge-1/0/0 through ge-1/0/2, and two fiber-optic Ethernet interfaces denoted as ge-1/0/1 and ge-1/0/2.

- The second part is always denoted as 0 for the T1, E1, and Gigabit Ethernet interfaces.
- The third part identifies the specific interface within the group. The gateway has 16 T1 or E1 ports (0 through 15), and three copper Ethernet ports (0 through 2).

### Logical Part of an Interface Name

The logical unit part of an interface name corresponds to the logical unit number to be configured on a T1, E1, or Ethernet interface. For the Ethernet interface, the unit number ranges from 0 through 31. For other interfaces that support logical interfaces, the unit number ranges from 0 through 65,534.

A period (.) separates the interface name and the logical unit number. The logical number forms the virtual part of an interface.

```
type-interface-group/0/port.logical
```

## Viewing Files and Directories

---

The BXOS software stores information in various files, including configuration files, log files, and gateway software files. You use CLI operational mode commands to view files and directories.

This section includes the following topics:

- Listing Files and Directories on page 27
- Specifying Filenames and URLs on page 28

### Listing Files and Directories

To view the directory structure of the BXOS software and the individual files, use the file command in operational mode:

- To get help about the file command, type ?:

```
cli@BX7000> file ?
copy                Copy files
delete              Delete files from the system
list                List file information
```

|        |                    |
|--------|--------------------|
| rename | Rename files       |
| show   | Show file contents |

- To view a list of files located in the home directory, type the list command:

```
cli@BX7000> file list
```

The default directory for the list command is the home directory of the user logged in to the gateway.

- To view the contents of other files and directories, specify a location:

```
cli@BX7000> file list /config
```




---

**NOTE:** For more information about the file operations, see “file” on page 131 and “Performing CLI File Operations” on page 39.

---

### Specifying Filenames and URLs

Some of the CLI commands, such as file copy, file delete, file rename, and file show, require a filename. You can specify a filename or URL to perform these actions.

- *filename*—Refers to a file in the current directory on the local flash drive.
- *path/ filename*—Refers to a file on the local flash disk.

To run a copy command, specify the source filename as well as the destination filename:

```
cli@BX7000> file copy source-file target-file
```

To delete a file, specify the file path if it is present in the current directory:

```
cli@BX7000> file delete /tmp/a.txt
```

## Chapter 4

# Using Commands and Statements to Configure the BX7000 Multi-Access Gateway

This chapter describes how to use the BX operating system (BXOS) command-line interface (CLI) to configure the BX7000 Multi-Access Gateway. This chapter contains the following sections:

- CLI Configuration Mode Commands on page 29
- Entering and Exiting the Configuration Mode on page 32
- Modifying the Configuration on page 33

## CLI Configuration Mode Commands

---

You can configure all properties of the BXOS, including interfaces, general routing information, routing protocols, and system hardware. The gateway configuration is stored as a hierarchy of statements. In configuration mode, you can create a specific hierarchy of the configuration statements that you want to use. A set of configuration commands is activated on the gateway only after you commit the configuration commands. You can create the hierarchy interactively or you can create an ASCII text file that is loaded onto the gateway and then commit it.

### *Configuration Mode Commands*

Table 8 on page 29 lists the configuration mode commands.

**Table 8: Configuration Mode Commands**

| Command   | Description  |
|-----------|--|
| clear     | Clears statistics and protocol data information in the gateway.  |
| commit    | Commits the set of configuration changes to the gateway database and activates the configuration on the gateway. |
| configure | Enters the configuration mode.   |
| debug     | Debugs command.  |

**Table 8: Configuration Mode Commands**

| Command    | Description   |
|------------|---|
| delete     | Deletes a statement or an identifier. This command deletes all subordinate statements and identifiers contained within the specified statement path.                      |
| edit       | Moves to the specified statement hierarchy. This statement creates the specified hierarchy level if it does not exist.  |
| exit       | Exits the current level of the statement hierarchy, returning to the level prior to the last edit command. This command can also be used to exit from configuration mode. |
| file       | Makes a copy of the existing statement in the configuration file.   |
| help       | Displays help about the available configuration statements.   |
| history    | Displays the list of recently used commands.  |
| load       | Loads a set of CLI commands, which are saved in a file.   |
| lock       | Locks configuration mode to execute privileged commands and configurations.   |
| monitor    | Monitors the files.   |
| ping       | Pings a remote target.  |
| ping-mpls  | Pings a remote target over MPLS.  |
| request    | Makes a system-level request.   |
| restart    | Restarts the interface command.   |
| save       | Saves a set of CLI commands executed in a session.  |
| set        | Creates a statement hierarchy and sets the identifier values. This is similar to the edit command except that your current level in the hierarchy does not change.        |
| show       | Displays the current configuration.   |
| ssh        | Sets system SSH services.   |
| top        | Returns to the top level of configuration command mode, is indicated by the [edit] banner.  |
| traceroute | Traces a route to the remote host.  |
| unlock     | Unlocks the configuration mode.   |
| up         | Exits the current level of the statement hierarchy, returning to the level prior to the last edit command.  |

## Configuration Statements and Identifiers

You can configure all gateway properties by including statements in the configuration. A statement consists of a keyword, which is fixed text, and an optional identifier. An identifier is an identifying name that you define, such as the name of an interface, or a username. Table 9 on page 31 shows the top level CLI configuration mode statements.

**Table 9: Configuration Mode Top Level Statements**

| Statement      | Description   |
|----------------|---|
| atm-profile    | Configures the ATM interface traffic profiles.  |
| chassis        | Configures properties of the gateway chassis, such as conditions that activate alarms and concatenation properties.   |
| connection     | Configures the cross-connection between two links.  |
| interface      | Configures interface information, such as encapsulation, interfaces, virtual channel identifiers (VCIs), and data-link connection identifiers (DLCIs).  |
| policy-options | Defines routing policies that can be used to filter and set properties in incoming and outgoing gateways.   |
| protocols      | Configures routing protocols such as IS-IS, LDP, MPLS, OSPF, and RSVP.  |
| rmon           | Configures the Remote Monitoring (RMON) details, which enable the network monitor and console systems to exchange network monitoring data.  |
| static-route   | Configures the static route details.  |
| syslog         | Configures the system log details.  |
| system         | Configures system-wide properties, including the hostname, domain name, Domain Name System (DNS) server, user logins and permissions, mappings between hostnames and addresses, and software processes. |

## Configuration Statement Hierarchy

The gateway configuration hierarchy statements are structured in a tree form as container and leaf elements. Each statement at the top level of the configuration hierarchy resides at the trunk (or root level) of a hierarchy tree. The top level statements are container statements that include other statements that form the tree branches. The leaf statements are the leaves of the hierarchy tree. An individual hierarchy of statements, which starts at the trunk of the hierarchy tree, is called a statement path.

## Entering and Exiting the Configuration Mode

---

You can configure the BXOS software by entering configuration mode and creating a hierarchy of configuration statements.

To enter configuration mode, use the `configure` command:

```
cli@BX7000> configure
Entering the configuration mode
Current CLI Users :
cli      console  -           00:01    1:09m  0.00s  1.05s  -cli

[edit]
cli@BX7000#?
baseline      Baseline IP Configurations
clear         Clear information in the system
commit        Commit current set of changes
configure     Manipulate software configuration information
debug         Debug command
delete        Delete a data element
edit          Edit a sub-element
exit          Exit from this level
file          Perform file operations
help          Provide help information
history       Show a list of previously run commands
load          Load configuration commands from a file to console
lock          Lock the Configuration mode
monitor       Monitor Files
ping          Ping remote target
ping-mpls     Ping remote target over mpls
request       Make system-level requests
restart       Restart interface command
save          Save the configuration commands to a file
set           Set CLI properties
show          Show a parameter
ssh           Set System SSH Services
top           Exit to top level of configuration
traceroute    Trace route to remote host
unlock        Unlock the configuration mode
up            Exit one level of configuration
```

If multiple users are accessing configuration mode, the name of all users and the part of the configuration they are viewing or editing is displayed. The BXOS software permits up to four users to use the configuration mode simultaneously. For example:

```
cli@BX7000> configure
Entering configuration mode
Current CLI Users :
cli console - 00:01 6:57 0.00s 0.21s -cli
```

To exit the configuration mode, use the `exit` command:

```
cli@BX7000# exit
exiting configuration mode
cli@BX7000>
```

If you exit from configuration mode using the `exit` command and the configuration changes have not been committed, the CLI displays a warning message.



**NOTE:** For more information, see “Switching Between Operational Mode and Configuration Mode” on page 12.

## Modifying the Configuration

To configure the gateway or modify an existing gateway configuration, add statements to the current configuration. For each statement hierarchy, create the hierarchy starting with a statement at the top level, and continue with the statements that are progressively lower in the hierarchy.

To modify the hierarchy, use the following configuration mode commands:

- `edit`—Use this command to move to a particular hierarchy level. The `edit` command creates the hierarchy, if the hierarchy level does not exist.

```
edit <statement-path>
```

For more detailed information, see “Editing a Configuration” on page 38.

- `set`—Use this command to set the CLI and date. You remain at the same level in the hierarchy even after you issue the `set` command.

```
set statement <identifier>
set cli hostname string
```

Where:

- *statement*—The configuration statement itself.
- *identifier*—A string that identifies an instance of a statement.

## Displaying the Current Configuration

To display the current configuration, use the `show configuration` command. This command displays the configuration at the current hierarchy level or at the specified level.

When you display a configuration, a timestamp at the top of the configuration indicates the date and time when the configuration was last changed. For example, to configure an OSPF protocol, use the `edit` command in configuration mode, and to view the configured properties, use the `show` command in configuration mode.

Configure and display a particular hierarchy in the configuration:

```
cli@BX7000# edit protocols ospf

[edit ospf]
cli@BX7000# edit area 1.1.1.1

[edit ospf area 1.1.1.1]
cli@BX7000# edit interface ge-1/0/1
```

```
[edit ospf area 1.1.1.1 interface ge-1/0/1]
cli@BX7000# set admin-state enable

[edit ospf area 1.1.1.1 interface ge-1/0/1]
cli@BX7000# show ospf interface brief
Interface          State          Area          DR ID
BDR ID
ge-1/0/1          BDR           1. 1. 1. 1    11. 11. 11. 2
11. 11. 11. 1
```

### ***Deleting a Statement from the Configuration***

To delete a configuration statement or identifier, use the `delete` configuration mode command. Deleting a statement or an identifier effectively unconfigures the functionality associated with that statement or identifier, returning that functionality to its default condition.

When you delete a statement, the statement and all its subordinate statements and identifiers are deleted from the configuration. For statements with multiple identifiers, an identifier is not automatically deleted unless you manually delete it.

To delete the entire hierarchy starting at the current hierarchy level, do not specify a statement or an identifier in the `delete` command.

- To delete a term for a specified property for the OSPF protocol, use the following CLI commands:

```
cli@BX7000> configure
cli@BX7000# edit protocols ospf
[edit ospf]
cli@BX7000# delete policy-statement policy-name term policy-term-name
[edit ospf]
cli@BX7000# up
cli@BX7000# commit
```

- To unconfigure a particular property, use the following CLI commands:

```
cli@BX7000# edit interface ge-1/0/1
[edit interface ge-1/0/1]
cli@BX7000# set speed 100

[edit interface ge-1/0/1]
cli@BX7000# delete speed
```

---

**NOTE:** For more information, see “Deleting a Configuration” on page 38.

---

### *Moving Up in the Hierarchy*

You can move to the top level of the hierarchy and a level above the current configuration using the `top` and `up` command respectively:

```
[edit syslog archive]
cli@BX7000# top
[edit]
cli@BX7000#
```

```
[edit syslog archive]
cli@BX7000# up
[edit syslog]
cli@BX7000#
```



## Chapter 5

# Managing Configurations

This chapter describes how to use the BX operating system (BXOS) command-line interface (CLI) to manage the BX7000 Multi-Access Gateway configurations. This chapter includes the following topics:

- Committing a Configuration on page 37
- Saving and Loading a Configuration File on page 37
- Deleting a Configuration on page 38
- Editing a Configuration on page 38
- Performing CLI File Operations on page 39
- CLI Configuration Input Types on page 40

### Committing a Configuration

---

When you edit a configuration, the CLI maintains a local copy of the configuration. The CLI immediately shows the changes made to the active configuration.

To apply the changes, you use the commit command. After committing, the CLI checks the local replica for the proper syntax, activates it, and marks it as the current operational software configuration file.

### Saving and Loading a Configuration File

---

To save a set of CLI commands executed in a session, use the `save commands` configuration mode command. This command saves all the commands that you have committed since logging in to your account.

```
cli@BX7000# save commands filename
```

To load a set of CLI commands from an already saved file, which is located on the gateway, use the `load` configuration mode command:

```
cli@BX7000# load filename
```

## Deleting a Configuration

---

To delete an existing configuration, parameter, or value, use the `delete` configuration mode command:

```
cli@BX7000# delete parameter-name
```

To delete a particular configuration, first delete all the configured parameters set while configuring the feature. The CLI automatically deletes the parameter value when the parameter is deleted.

To delete configured parameters, you must enter the hierarchy using the `edit` command. For example, to delete the TACPLUS server parameters, the commands are as follows:

```
[edit]
cli@BX7000# edit system
[edit system]
cli@BX7000# edit tacplus-server 1.1.1.1
[edit system 1.1.1.1]
cli@BX7000# delete port
[edit system 1.1.1.1]
cli@BX7000# delete secret
[edit system 1.1.1.1]
cli@BX7000# delete timeout
[edit system 1.1.1.1]
cli@BX7000# up
[edit system]
cli@BX7000# up
cli@BX7000# commit
```



**NOTE:** For additional information, see “Deleting a Statement from the Configuration” on page 34.

---

## Editing a Configuration

---

To edit a configuration at any level in the hierarchy, use the `edit` command. You can also use this command to set the new parameters at various levels in the hierarchy.

```
[edit]
cli@BX7000# edit command-name
```

For example:

```
[edit]
cli@BX7000# edit system
[edit system]
cli@BX7000# edit tacplus-server 1.1.1.1
[edit system 1.1.1.1]
cli@BX7000# set port 5
```

The CLI configuration mode provides the following default options after you enter a hierarchy level:

```
cli@BX7000# edit system
[edit system]
cli@BX7000# ?
  delete      Delete a data element
  edit        Edit a sub-element
  exit        Exit from this level
  help        Provide help information
  history     Show a list of previously run commands
  set         Set a system settings parameter
  show        Show system configuration
  top         Exit to top level of configuration
  up          Exit one level of configuration
```

## Performing CLI File Operations

---

The BXOS software supports the following file operations:

- Copying a Configuration File on page 39
- Deleting a Configuration File on page 39
- Renaming a Configuration File on page 39
- Displaying the Configuration File Contents on page 40
- Listing the Configuration Files on page 40

### Copying a Configuration File

You can copy the contents of an existing configuration file into the same file or into a new file, as well as append the contents to an existing configuration file by using the following file configuration mode command:

```
cli@BX7000# file copy source-file target-file
cli@BX7000# file copy /config/startup.cfg /config/backup.cfg
```

### Deleting a Configuration File

You can delete a configuration file by using the following file configuration mode command:

```
cli@BX7000# file delete file-name
cli@BX7000# file delete a.txt
```

### Renaming a Configuration File

You can rename a configuration file by using the following file configuration mode command:

```
cli@BX7000# file rename source-filename target-filename
cli@BX7000# file rename a.txt b.txt
```

## Displaying the Configuration File Contents

You can directly view the contents of a configuration file by using the following file configuration mode command:

```
cli@BX7000# file show file-name
cli@BX7000# file show a.txt
```

## Listing the Configuration Files

You can also view a list of saved configuration files from the current directory by using the following file configuration mode command:

```
cli@BX7000# file list
```



**NOTE:** For more detailed information on how to use the file configuration mode commands, see “file” on page 131.

## CLI Configuration Input Types

The CLI performs type checking to verify the correct format for the data that contains the identifier and values. For example, if you are specifying an IP address in the statement, you must type the address in a valid format. If you specify the address in a wrong format, an error message prompts you to type the required valid format. Table 10 on page 40 lists the data types that the CLI checks.

**Table 10: CLI Configuration Input Types**

| Data Type  | Format  | Examples  |
|--|---|---|
| Physical interface name included in [edit interface] hierarchy | <i>type-interface group/0/port</i>  | Correct: <i>ge-1/0/0</i><br>Incorrect: <i>ge-1</i>  |
| Interface name with a logical number                           | <i>type-interface group/0/port.logical unit number</i>  | Correct: <i>ge-1/0/0.1</i>  |
| IP address   | <i>Oxhex-bytesoctet&lt;.octet&lt;.octet&lt;.octet&gt;&gt;&gt;</i>                               | Correct: <i>1.2.3.4</i>   |
| IP address (destination prefix) and prefix length              | <i>Oxhex-bytes&lt;/length&gt;octet&lt;.octet&lt;.octet&lt;.octet&gt;&gt;&gt;&lt;/length&gt;</i> | Correct: <i>1.2.3.4/32</i>  |
| OSPF area identifier (ID)                                      | <i>Oxhex-bytesoctet&lt;.octet&lt;.octet&lt;.octet&gt;&gt;&gt;</i>                               | Correct: <i>54, 0.0.0.54, 1.2.3.4</i><br>Sample translations:<br><i>54 becomes 0.0.0.54</i><br><i>257 becomes 0.0.1.1</i> |

## Part 3

# CLI Command Summaries

- Summary of Show Commands on page 43
- Summary of CLI Environmental Mode Commands on page 125
- Summary of CLI Operational Mode Commands on page 129
- Summary of CLI Configuration Mode Statements on page 139



## Chapter 6

# Summary of Show Commands

This chapter presents the show operational commands available in the BX operating system (BXOS) software. Use the show commands to view information such as configuration details, status, and statistics of interfaces, ports, tunnels, and pseudowires. You can also use the show commands to verify the validity of your configurations and monitor the gateway operation. Commands are listed in alphabetical order.

Table 11 on page 43 summarizes the command-line interface (CLI) show commands.

**Table 11: BXOS Show Commands**

| Task   | Command   |
|--|---|
| Display ARP properties.                              | show arp on page 46                             |
| Display ATM cross-connection details.                | show atm-cross-connect on page 46               |
| Display configured ATM traffic profiles.             | show atm-traffic-profiles on page 47            |
| Display behavioral aggregate classifier information. | show ba-classifiers on page 47                  |
| Display BFD global parameters.                       | show bfd-global on page 47                      |
| Display BFD sessions information.                    | show bfd-session on page 48                     |
| Display BFD session between two nodes.               | show bfd-session address on page 48             |
| Display BFD session egress tunnel details.           | show bfd-session tunnel-egress on page 48       |
| Display BFD session ingress tunnel details.          | show bfd-session tunnel-ingress on page 49      |
| Display bypass tunnel details.                       | show bypass tunnel on page 49                   |
| Display chassis alarms details.                      | show chassis alarms on page 50                  |
| Display chassis EEPROM details.                      | show chassis eeprom on page 50                  |
| Display chassis environment details.                 | show chassis environment on page 51             |
| Display chassis flash details.                       | show chassis flash on page 51                   |
| Display chassis hardware details.                    | show chassis hardware on page 52                |
| Display chassis power details.                       | show chassis power on page 53                   |
| Display chassis environment details.                 | show chassis temperature on page 54             |
| Display CLI details.                                 | show cli on page 54                             |
| Display the input clock validity.                    | show clock-card input-clock-validity on page 55 |
| Display the phase locked loop status.                | show clock-card pll on page 55                  |

| <b>Task</b>  | <b>Command</b>   |
|--|--|
| Display the clock card status.                           | show clock-card status on page 55  |
| Display the Precision Time Protocol (PTP) master status. | show clock-card ptp-master-status on page 56                                   |
| Display the PTP slave statistics.                        | show clock-card ptp-slave-statistics on page 56                                |
| Display the PTP status.                                  | show clock-card ptp-status on page 57  |
| Display gateway configuration details.                   | show configuration on page 58  |
| Display system date and time.                            | show date on page 61   |
| Display exception command details.                       | show exception on page 62  |
| Display the input reference clock details.               | show input-clocks-status on page 62  |
| Display interface details.                               | show interface on page 62  |
| Display IP TCP details.                                  | show ip tcp statistics on page 77  |
| Display IP traffic details.                              | show ip traffic on page 78   |
| Display IP UDP statistics details.                       | show ip udp statistics on page 79  |
| Display IS-IS adjacency details.                         | show isis adjacency on page 80   |
| Display IS-IS database details.                          | show isis database on page 80  |
| Display IS-IS hostname details.                          | show isis hostname on page 81  |
| Display IS-IS interface details.                         | show isis interface on page 81   |
| Display L2circuit details.                               | show l2circuit on page 82  |
| Display LDP interface details.                           | show ldp interface on page 85  |
| Display LDP neighbor details.                            | show ldp neighbor on page 85   |
| Display LDP overview details.                            | show ldp overview on page 86   |
| Display log details.                                     | show log on page 86  |
| Display details about manual mode.                       | show manual-mode on page 87  |
| Display system memory details.                           | show memory detail on page 88  |
| Display multifield classifier details.                   | show mf-classifiers on page 89   |
| Display MPLS tunnel details.                             | show mpls tunnel on page 89  |
| Display MPLS tunnel association details.                 | show mpls tunnel association on page 90  |
| Display NTP association details.                         | show ntp associations on page 90   |
| Display NTP status details.                              | show ntp status on page 91   |
| Display interfaces of the Ethernet CFM.                  | show oam-ethernet<br>connectivity-fault-management interfaces on<br>page 91    |
| Display MEP database information.                        | show oam-ethernet<br>connectivity-fault-management mep-database<br>on page 91  |
| Display path database information of MEP.                | show oam-ethernet<br>connectivity-fault-management path-database<br>on page 92 |
| Display OAM link-fault management information.           | show oam-ethernet link-fault-management on<br>page 93                          |
| Display OSPF database details.                           | show ospf database on page 96  |
| Display OSPF interface details.                          | show ospf interface on page 97   |

| Task  | Command                                 |
|---|---|
| Display OSPF neighbor details.                | show ospf neighbor on page 98           |
| Display system policy.                        | show policy on page 99                  |
| Display ports.                                | show ports on page 99                   |
| Display the configured protocols.             | show protocol on page 100               |
| Display QoS profile.                          | show qos-profiles on page 105           |
| Display QoS scheduler.                        | show qos-scheduler on page 106          |
| Display QoS shaper.                           | show qos-shaper on page 106             |
| Display QoS statistics.                       | show qos-statistics on page 107         |
| Display RADIUS server details.                | show radius-server on page 107          |
| Display complete gateway routing information. | show route on page 107                  |
| Display RSVP interface details.               | show rsvp interface on page 108         |
| Display RSVP session details.                 | show rsvp session on page 108           |
| Display SNMPv3 details.                       | show snmp on page 109                   |
| Display MAC filters.                          | show source-filter on page 110          |
| Display BA classifier statistics              | show statistics classifier on page 111  |
| Display GRE tunnel statistics.                | show statistics gre-tunnel on page 111  |
| Display IPv4 statistics.                      | show statistics ipv4 on page 112        |
| Display pseudowire statistics.                | show statistics l2circuit on page 113   |
| Display RSVP tunnel statistics.               | show statistics rsvp-tunnel on page 115 |
| Display syslog configuration details.         | show syslog on page 116                 |
| Display the clock card configuration.         | show system clock-card on page 117      |
| Display system processes.                     | show system processes on page 117       |
| Display the local storage data.               | show system storage on page 122         |
| Display system uptime.                        | show system uptime on page 122          |
| Display logged in users.                      | show system users on page 122           |
| Display system virtual memory details.        | show system virtual-memory on page 123  |
| Display TACACS+ server details.               | show tacplus-server on page 123         |
| Display version.                              | show version on page 124                |
| Display zerotouch mode.                       | show zerotouch on page 124              |

## show arp

**Syntax** show arp

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the current state of the Address Resolution Protocol (ARP).

**Additional Information** See the *BXOS Configuration Guide*.

```
cli@BX7000> show arp
Address          HWtype HWaddress          Flags Mask  Iface
```

```

192.168.1.1 ether 00:80:48:E7:B4:DB C ge-1-0-0
10.100.65.44 ether 00:13:D3:60:DF:87 C ge-1-0-0
11.11.11.1 ether 00:00:00:02:00:03 C ge-1-0-2
10.100.65.62 ether 00:11:D8:05:40:EE C ge-1-0-0
    
```

## show atm-cross-connect

**Syntax** show atm-cross-connect

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details of all the Asynchronous Transfer Mode (ATM) cross-connection. This command connects two or more links through ATM and also displays the IMA cross-connection. To view the details of a particular connection, provide the connection name.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Details** Table 12 on page 46 lists the output fields for the show atm-cross-connect command. The output fields are listed in the order in which they appear.

**Table 12: show atm-cross-connect Output Field Details**

| Field Name      | Field Description   |
|-----------------|---|
| Connection name | The name of the cross-connection.   |
| End-1-Interface | The starting point of the connection. The connection can be established between either T1 or E1 interfaces. |
| End-2-Interface | The final point of the connection.  |

**show atm-cross-connect**

```
cli@BX7000> show atm-cross-connect
```

```

Connection Name          End-1-Interface  End-2-Interface
test                     e1-0/0/0.1      e1-0/0/1.1
    
```

```
cli@BX7000# show atm-cross-connect test
```

```

Connection Name          End-1-Interface  End-2-Interface
Connection name: test   e1-0/0/0.1      e1-0/0/1.1
                        End1 vpi: 10         End2 vpi: 20
                        End1 vci: 100        End2 vci: 200
    
```

## show atm-traffic-profiles

**Syntax** show atm-traffic-profiles

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the information about the configured traffic profiles.

**Additional Information** See the *BXOS Configuration Guide*.

**show atm-traffic-profiles**

```
cli@BX7000> show atm-traffic-profiles
Configured atm traffic profiles: 1
```

```
cli@BX7000> show atm-traffic-profiles 1
ATM Traffic Profile Name: 1
Tm-ts-mode:cbr
discard-mode:enable
Tag-cells: enable
Peak-rate: 4528
Sustained-rate: 100
Burst-length: 100
statistics:enable
```

---

## show ba-classifiers

**Syntax** show ba-classifiers

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the behavioral aggregate classifier information.

**Additional Information** See the *BXOS Configuration Guide*.

**show ba-classifiers**

```
cli@BX7000> show ba-classifiers
Interface name: ge-1/0/1
Classifier name: c
DSCP Value: 4
Match Action : forward
Policer name: pp
```

---

## show bfd-global

**Syntax** show bfd-global

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the Bidirectional Forwarding Detection (BFD) parameters.

**Additional Information** See the *BXOS Configuration Guide*.

**show bfd-global**

```
cli@BX7000> show bfd-global
Bfd global parameter
-----
Transmit interval(msec) : 2000
Receive interval(msec) : 2000
Multiplier : 3
Promiscuous is Disabled
```

---

## show bfd-session

**Syntax** show bfd-session

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the BFD sessions information established between the gateways.

**Additional Information** See the *BXOS Configuration Guide*.

```

show bfd-session cli@BX7000> show bfd-session
Address State Detect(msec) Interval(msec) Multiplier Interface/Tunnel
20.20.20.2 Up 6000 2000 3 ge-1/0/1
Total number of bfd sessions: 1
    
```

## show bfd-session address

---

**Syntax** show bfd-session address *ip-address*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the failure between two nodes. BFD is a keepalive protocol and runs over an IP or MPLS tunnel.

**Options** *ip-address*—IP address on which the BFD protocol runs.

**Additional Information** See the *BXOS Configuration Guide*.

```

show bfd-session cli@BX7000> show bfd-session address 25.25.25.1
address 25.25.25.1 Address      State      Detect(msec)  Interval(msec) Multiplier
                    Interface/Tunnel
-----
25.25.25.1         Up          15000        3000          5
ge-1/0/1
Client ISIS, TX interval(msec) 3000, RX interval(msec) 3000, multiplier 5
Local diagnostic None, Remote diagnostic None
Local min tx interval(msec) 3000, min rx interval(msec) 3000 , multiplier 5
Remote min tx interval(msec) 3000, min rx interval(msec) 3000 , multiplier 5
Local discriminator 1, Remote discriminator 19

Total number of bfd sessions : 1
    
```

## show bfd-session tunnel-egress

---

**Syntax** show bfd-session tunnel-egress

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the egress tunnel details for a BFD session.

**Additional Information** See the *BXOS Configuration Guide*.

```

show bfd-session cli@BX7000> show bfd-session tunnel-egress
tunnel-egress Address      State      Detect(msec)  Interval(msec) Multiplier
                    Interface/Tunnel
-----
11.1.1.2           Up          22000        5000          3
Client RSVP Tunnel, TX interval(msec) 2000, RX interval(msec) 2000, multiplier 3
Local diagnostic None, Remote diagnostic None
Local min tx interval(msec) 2000, min rx interval(msec) 2000 , multiplier 3
Remote min tx interval(msec) 1000, min rx interval(msec) 5000 , multiplier 11
Local discriminator 2, Remote discriminator 2
Tunnel end point address :11.1.1.1
Tunnel sender address   :11.1.1.2
Tunnel id                :47284
Extended tunnel id      :11.1.1.2
    
```

```

LSP id                :1
Total number of bfd sessions : 1

```

## show bfd-session tunnel-ingress

---

**Syntax** show bfd-session tunnel-ingress

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the ingress tunnel details for a BFD session.

**Additional Information** See the *BXOS Configuration Guide*.

```

show bfd-session cli@BX7000> show bfd-session tunnel-ingress
tunnel-ingress Address          State      Detect(msec)  Interval(msec)  Multiplier
                  Interface/Tunnel
-----
11.1.1.2          Up         150          50              5 path1
Client RSVP Tunnel, TX interval(msec) 10, RX interval(msec) 10, multiplier 5
Local diagnostic None, Remote diagnostic None
Local min tx interval(msec) 10, min rx interval(msec) 10 , multiplier 5
Remote min tx interval(msec) 50, min rx interval(msec) 50 , multiplier 3
Local discriminator 1, Remote discriminator 1
Tunnel end point address :11.1.1.2
Tunnel sender address   :11.1.1.1
Tunnel id                :1
Extended tunnel id      :11.1.1.1
LSP id                   :1
Total number of bfd sessions : 1

```

## show bypass tunnel

---

**Syntax** show bypass tunnel *tunnel-name*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the bypass tunnel details.

**Options** *tunnel-name*—Name of the bypass tunnel.

**Additional Information** See the *BXOS Configuration Guide*.

```

show bypass tunnel by cli@BX7000> show bypass tunnel by
Bypass Tunnel name      : by
Outgoing interface      : ge-1/0/2
Outgoing label          : 0
No of backup running    : 1

```

## show chassis alarms

---

- Syntax** show chassis alarms
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the status of the configured alarm, the chassis, and the interface conditions that trigger either a red or yellow alarm. The chassis alarm indicates a failure associated with the gateway. The chassis alarm conditions are not configurable. The alarms can be DS1, Ethernet, and power alarms.
- Additional Information** See the *BXOS Configuration Guide* and the *BX7000 Multi-Access Gateway Hardware Guide*.
- Output Fields** Table 13 on page 50 lists the output fields for the show chassis alarms command. The output fields are listed in the order in which they appear.

**Table 13: show chassis alarms Output Field Details**

| Field Name  | Field Description   |
|-------------|---|
| Alarm time  | The date and time when the first alarm is recorded.                   |
| Class       | The severity class of the alarm, which can be minor, major, or other. |
| Description | Information about the alarm.  |

```

show chassis alarms cli@BX7000> show chassis alarms

3 alarms are currently active
Alarm time      Class      Description
2000-01-01 00:19:09 UTC Other      t1-0/0 : Loss of Signal
2000-01-01 00:00:34 UTC Major      Pwr - 0 : Power Supply Failed
2000-01-01 00:00:34 UTC Major      Pwr - 0 : Power Supply Removed
    
```

## show chassis eeprom

---

- Syntax** show chassis eeprom
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the data content in EEPROM.
- Additional Information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

```

show chassis eeprom cli@BX7000> show chassis eeprom
Card Description :BX7000 Multi-Access Gateway
Card Revision    :5
Card CLEI       :DSTCLEIP3D
Card Serial Number:520-000581-444
    
```

## show chassis environment

---

- Syntax** show chassis environment

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the chassis environment details.

**Additional Information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

**Output Fields** Table 14 on page 51 lists the output fields for the show chassis environment command. The output fields are listed in the order in which they appear.

**Table 14: show chassis environment Output Field Details**

| Field Name  | Field Description   |
|-------------|---|
| power       | The power supply conditions for the two power supplies in the chassis: <ul style="list-style-type: none"> <li>■ Power_Module—Shows the power supply instance.</li> <li>■ power_status—Shows the current status of the power supply (ON/OFF) for a power supply instance.</li> </ul> |
| Temperature | The temperature of the processor. If the system temperature exceeds its permissible value, an alarm is raised. <ul style="list-style-type: none"> <li>■ Instance—One of the temperature sensors.</li> <li>■ Current Temperature—Shows the temperature, in Celsius.</li> </ul>       |

**show chassis environment**

```
cli@BX7000> show chassis environment
Power
Power Module :1 Power_status : ON
Power Module :2 Power_status : ON

Temperature

BX-7000
Instance:1 Current Temperature(in Celcius) : 46
Instance:2 Current Temperature(in Celcius) : 46

Expansion Card
Instance :3 Current Temperature(in Celcius) : 39

Clock Card
Instance :4 Current Temperature (in Celcius) :47
```

## show chassis flash

**Syntax** show chassis flash

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details for the system flash device driver which can be mapped with the system flash partition.

**Additional Information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

**show chassis flash**

```
cli@BX7000> show chassis flash
Flash Information
-----

Flash Total Size      : 256 MBytes
```

```

Partition Type      : Primary - Active
Image name          : bxos-install-3.0B3.2
Image size          : 33 MBytes

Partition Type      : Secondary - Backup
Image name          : No image information found

Partition Type      : SIDX - Bootloader
Image name          : bxboot-install-3.0B3.1
Image size          : 581 KBytes
    
```

## show chassis hardware

---

**Syntax** show chassis hardware

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the BX7000 Multi-Access Gateway chassis hardware details.

**Additional information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

**Output Fields** Table 15 on page 52 lists the output fields for the show chassis hardware command. The output fields are listed in the order in which they appear.

**Table 15: show chassis hardware Output Field Details**

| Field Name  | Field Description  |
|-------------|--|
| hw name     | The name of the hardware device, such as USB console, USB host controller, interfaces, and power supply. |
| description | The description for the hardware device.   |

```

show chassis hardware cli@BX7000> show chassis hardware
Hardware Name      :BX-7000
Revision           :05
Serial             :520-000581-444
Description        :BX7000 Multi-Access Gateway
CPLD1 Version ID  :3D
CPLD2 Version ID  :3A
FPGA               :55ff

Hard ware Name     :BX-BIC-4GECOMBO
Revision           :03
Serial             :XJ7606
Description        :BX7000 4 port GigE Combo Ethernet Module
CPLD1 Version ID  :1C

Hardware Name      :BX-BCC-CLK
Revision           :03
Serial             :XJ7463
Description        :BX7000 Synchronization Timing Module

Hardware Name      :PIC
Description        :16x T1/E1

Hardware Name      :PIC
Description        :3x 10/100/1000 Ethernet Ports
    
```

```

Hardware Name      :USB Console
Description :1x USB Console

Hardware Name      :USB Host Controller
Description :1x USB Host Controller

Hardware Name      :Power Module 1
Description :AC Power Supply

Hardware Name      :Power Module 2
Description :AC Power Supply

```

## show chassis power

---

- Syntax** show chassis power
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the gateway chassis power details.
- Additional information** See the *BX7000 Multi-Access Gateway Hardware Guide*.
- Output Fields** Table 16 on page 53 lists the output fields for the show chassis power command. The output fields are listed in the order in which they appear.

**Table 16: show chassis power Output Field Details**

| Field Name | Field Description  |
|------------|--|
| power      | The power supply conditions for the two power supplies in the chassis: <ul style="list-style-type: none"> <li>■ power_supply_instance—Shows the power supply instance.</li> <li>■ power_status—Shows the current status of the power supply (ON/OFF) for a power supply instance.</li> </ul> |

```

show chassis power cli@BX7000> show chassis power
Power Module :0 Power_status : OFF
Power Module :1 Power_status : OFF

```

## show chassis temperature

---

- Syntax** show chassis temperature
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the gateway chassis temperature, in Celsius.
- Additional Information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

**Output Fields** Table 17 on page 54 lists the output fields for the show chassis temperature command. The output fields are listed in the order in which they appear.

**Table 17: show chassis temperature Output Field Details**

| Field Name  | Field Description   |
|-------------|---|
| Temperature | The temperature of the processor. If the system temperature exceeds its permissible value, then an alarm is raised. <ul style="list-style-type: none"> <li>■ Temp Instance—Shows one of the two temperature sensors.</li> <li>■ Current Temperature—Shows the temperature, in Celsius.</li> </ul> |

```

show chassis temperature cli@BX7000> show chassis temperature
BX-7000Instance : 1 Current Temperature(in Celcius) : 46
Instance: 2 Current Temperature(in Celcius) : 47

Expansion CardInstance : 3 Current Temperature(in Celcius) : 39

Clock CardInstance : 4 Current Temperature(in Celcius) : 47
    
```

## show cli

**Syntax** show cli

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the current settings of the CLI environment variables. The environment variables include the banner that appears at the top of the command-line prompt and the user login details.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Table 18 on page 54 lists the output fields for the show cli command. The output fields are listed in the order in which they appear.

**Table 18: show cli Output Field Details**

| Field Name         | Field Description                                     |
|--------------------|---|
| CLI banner         | The banner that appears on the top of the CLI screen. |
| CLI prompt string  | The username for the session.                         |
| Current time stamp | The current date and time.                            |
| Working directory  | The current working directory.                        |

```

show cli cli@BX7000> show cli

CLI Banner           : BX7000 CLI Environment
CLI Prompt string   : root@BX7000
Screen length       : 24
Screen width        : 80
Current Time Stamp  : Sat Jan  1 06:40:28 UTC 2000
Working directory   : /home/abc/Work/Dec21/xyzroot
    
```

## show clock-card input-clock-validity

---

- Syntax** show clock-card input-clock-validity
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the input clock validity.
- Additional Information** See the *BXOS Configuration Guide*.

```

show clock-card root@BX7000# show clock-card input-clock-validity
input-clock-validity Input clock          Priority      Validity
tdm-primary-reference 2             Invalid
tdm-secondary-reference 3            Invalid
ces-reference         4             Invalid
ethernet-reference   5             Invalid
bits                  6             Valid
10mhz                 7             Invalid
ptp                   1             Invalid

```

## show clock-card pll

---

- Syntax** show clock-card pll
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the phase locked loop status.
- Additional Information** See the *BXOS Configuration Guide*.

```

show clock-card pll root@BX7000# show clock-card pll
PLL Status: Phase Locked
Currently Selected Source: bits
First Priority Validated Source: bits
Second Priority Validated Source: none
Third Priority Validated Source: none

```

## show clock-card status

---

- Syntax** show clock-card status
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the clock card status.
- Additional Information** See the *BXOS Configuration Guide*.

```

show clock-card status root@BX7000# show clock-card status
Input clock status:
Input clock          Priority      Validity      Interface
tdm-primary-reference 2             Invalid       t1-0/0/1
tdm-secondary-reference 3            Invalid       t1-0/0/2
ces-reference         4             Invalid       t1-0/0/3
ethernet-reference   5             Invalid       ge-1/0/1
bits                  6             Valid

```

```

10mhz          7          Invalid
ptp            1          Invalid

Clock card status
Revertive Mode: Disabled
Locked Status: Phase Locked
Clock Accuracy: 160.851562 PPM
Currently Selected Source: bits
Highest Priority Validated Source: bits
Second Highest Priority Validated Source: none
Third Highest Priority Validated Source: none
    
```

## show clock-card ptp-master-status

---

- Syntax** show clock-card ptp-master-status
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the Precision Time Protocol (PTP) master status.
- Additional Information** See the *BXOS Configuration Guide*.

```

show clock-card root@BX7000# show clock-card ptp-master-status
ptp-master-status Master port identity: 00:16:C0:FF:FE:00:F7:F5-1
Master IP address: 100.1.2.100
Master priority-1: 255
Master priority-2: 255
Grandmaster node id: 00:16:C0:FF:FE:00:F7:F5
Grandmaster priority 1: 255
Grandmaster priority 2: 255
Grandmaster clock stratum: Primary Reference
Grandmaster time source: Internal Oscillator
Grandmaster clock accuracy: Unknown
Grandmaster variance: 32767
    
```

## show clock-card ptp-slave-statistics

---

- Syntax** show clock-card ptp-slave-statistics
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the PTP slave statistics.
- Additional Information** See the *BXOS Configuration Guide*.

```

show clock-card root@BX7000# show clock-card ptp-slave-statistics
ptp-slave-statistics Master port identity: 00:16:C0:FF:FE:00:F7:F5-1
Master IP address: 100.1.2.100
Master priority-1: 255
Master priority-2: 255
Grandmaster node id: 00:16:C0:FF:FE:00:F7:F5
Grandmaster priority 1: 255
Grandmaster priority 2: 255
Grandmaster clock stratum: Primary Reference
Grandmaster time source: Internal Oscillator
Grandmaster clock accuracy: Unknown
Grandmaster variance: 32767
    
```

## show clock-card ptp-status

---

|  |   |
|--|---|
| <b>Syntax</b>  | show clock-card ptp-status<br><brief   detail>  |
| <b>Release Information</b>   | Command introduced in BXOS Release 4.0.   |
| <b>Description</b>   | Display the PTP status.   |
| <b>Options</b>   | brief   detail—(Optional) Display the specified level of output.  |
| <b>Additional Information</b>                                      | See the <i>BXOS Configuration Guide</i> .   |
| <b>show clock-card ptp-status/show clock-card ptp-status brief</b> | <pre> root@BX7000# show clock-card ptp-status/show clock-card ptp-status brief Transport protocol: UDP/IP Port transmission addressing: Multicast Port state: Slave Version: 2 Domain: 6 </pre>   |
| <b>show clock-card ptp-status detail</b>                           | <pre> root@BX7000# show clock-card ptp-status detail PTP slave statistics: Message Type      Sent/Received    Multicast    Unicast Announce          Received         25644        0 Sync              Received         51293        0 Delay Request     Sent             25454        0 Delay Response    Received         25432        0  PTP master status: Master Port identity: 00:18:0B:FF:FE:20:01:58-1 Master IP address: 10.10.10.1 Master priority-1: 0 Master priority-2: 0 Grandmaster node Id: 00:18:0B:FF:FE:20:01:58 Grandmaster Priority-1: 0 Grandmaster Priority-2: 0 Grandmaster Clock stratum: Unknown Grandmaster Time source: Other Grandmaster Clock accuracy: &gt; 10 s Grandmaster variance: 13653  PTP status: Transport protocol: UDP/IP Port transmission addressing: Multicast Port state: Slave Version: 2 Domain: 6 </pre> |

## show configuration

---

|                            |  |
|----------------------------|--|
| <b>Syntax</b>              | show configuration   |
| <b>Release Information</b> | Command introduced in BXOS Release 3.0.                      |
| <b>Description</b>         | Display a list of all current configurations of the gateway. |

**Output Fields** Contain details about the ATM profiles, interfaces, policy options, protocols, and system settings.

**Additional Information** See the *BXOS Configuration Guide*.

```

show configuration cli@BX7000> show configuration

system {
  arp {
    add 192.168.2.2 00:00:00:00:22:22;
    add 192.168.3.2 00:00:00:00:11:11;
  }
}
interface {
  ge-1/0/0 {
    admin-state enable;
    unit 0 {
      family inet address 10.100.65.246/24;
    }
  }
  ge-1/0/1 {
    admin-state enable;
    unit 0 {
      family inet address 192.168.2.1/24;
    }
  }
  ge-1/0/2 {
    admin-state enable;
    unit 0 {
      family inet address 192.168.3.1/24;
    }
  }
}
  t1-0/0/0 {
    admin-state enable;
    unit 1 {
      admin-state enable;
      vpi 10;
      vci 100;
    }
    encapsulation atm;
  }
  t1-0/0/1 {
    admin-state enable;
    unit 1 {
      admin-state enable;
      vpi 10;
      vci 100;
    }
    encapsulation atm;
  }
  t1-0/0/10 {
    admin-state enable;
    unit 1 {
      admin-state enable;
      vpi 10;
      vci 100;
    }
    encapsulation atm;
  }
  t1-0/0/11 {
    admin-state enable;
  }
}

```

```

        unit 1 {
            admin-state enable;
            vpi 10;
            vci 100;
        }
        encapsulation atm;
    }
    t1-0/0/12 {
        admin-state enable;
        unit 1 {
            admin-state enable;
            vpi 10;
            vci 100;
        }
        encapsulation atm;
    }
    t1-0/0/13 {
        admin-state enable;
        unit 1 {
            admin-state enable;
            vpi 10;
            vci 100;
        }
        encapsulation atm;
    }
    t1-0/0/14 {
        admin-state enable;
    }
    t1-0/0/15 {
        admin-state enable;
        unit 1 {
            admin-state enable;
            vpi 10;
            vci 100;
        }
        encapsulation atm;
    }
}
protocols {
    ospf {
        admin-state enable;
        spf-delay 200;
        area 1.1.1.1 {
            interface ge-1/0/0 {
                admin-state enable;
            }
            interface ge-1/0/1 {
                admin-state enable;
            }
            interface ge-1/0/2 {
                admin-state enable;
            }
        }
    }
}
ldp {
    admin-state enable;
    l2circuit satop {
        admin-state enable;
        neighbor-address 1.1.1.1 {
            tunnel lsp;
            interface t1-0/0/14 {
                payload 192;
                jitter-buffer 3000;
                idle-pattern 255;
            }
        }
    }
}

```





```

show exception cli@BX7000> show exception
Save core context is set
Maximum number of core files that will be generated : 10
FTP server site : 10.100.65.91
FTP User Name   : root
FTP Password    : root
    
```

## show input-clocks-status

---

**Syntax** show input-clocks-status

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the input reference clock validity and PLL status.

**Additional Information** See the *BXOS Configuration Guide*.

```

show cli@BX7000# show input-clocks-status
input-clocks-status
*****
Input clock      Priority  Validity
*****
line-tdm-primary      2      Invalid
line-tdm-secondary   3      Invalid
ces-rec-clock         4      Invalid
ethernet-rec-clock    5      Invalid
bits-clock            6      Valid
ext-10mhz             7      Invalid
    
```

## show interface

---

**Syntax** show interface *interface-name*  
<brief | detail | extensive>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the information about an interface. You can view the interface description using the output parameters. The interface can be TI, EI, Ethernet, GRE, IMA, or MLPPP.

**Options** *interface-name*—Standard information about the specified interface. Following is the list of typical interface names:

- *t1-interface-group/0/port*—T1 interface.
- *e1-nterface-group/0/port*—E1 interface.
- *ge-nterface-group/0/port*—Gigabit Ethernet interface.
- *ml-ppp*—MLPPP interface.
- *gr-name*—GRE interface.
- *im-name*—IMA interface.

- brief | detail | extensive—(Optional) Display the specified levels of output.

**Additional Information** See the *BXOS Configuration Guide*.

**See Also** The following output sections are available to display the output for a T1 interface:

- show interface t1-0/0/0 on page 63
- show interface t1-0/0/0 brief on page 64
- show interface t1-0/0/0 detail on page 64
- show interface t1-0/0/0 extensive on page 64

The following output section is available to display the GRE interface:

- show interface gr-r on page 66

The following sections are available to display the output for an IMA interface:

- show interface im-ima1 on page 66
- show interface im-ima1 brief on page 66
- show interface im-ima1 detail on page 67
- show interface im-ima1 extensive on page 69

The following sections are available to display the output for an MLPPP interface:

- show interface ml-ppp on page 72
- show interface ml-ppp brief on page 72
- show interface ml-ppp detail on page 73
- show interface ml-ppp extensive on page 75

**Output Fields** Contains the parameters for T1, GRE, IMA, and MLPPP interfaces.

```

show interface cli@BX7000> show interface t1-0/0/0
t1-0/0/0 Physical interface :t1-0/0/0, Enabled, Physical Link : Down
          Interface index:61441
          MTU : 0, Speed :1544000, Loopback: Disabled
          Operational state : Disabled, Encapsulation : ATM
          Encoding : b8zs, Framing : esf, Build-out : 0-132
          Cell scramble : disabled
          Clock source : master
          Description :

          Logical Interface :t1-0/0/0.1, Enabled
          Operational state : Disabled
          VPI : 10, VCI : 100

```

```

show interface cli@BX7000> show interface t1-0/0/0 brief
t1-0/0/0 brief cli@BX7000# show interface t1-0/0/1 brief
          Physical interface :t1-0/0/0, Enabled, Physical Link : Down
          Interface index:61441

```

```

MTU : 0, Speed :1544000, Loopback: Disabled
Operational state : Disabled, Encapsulation : ATM
Encoding : b8zs, Framing : esf, Build-out : 0-132
Cell scramble : disabled
Clock source : master
Description :

```

```

Logical Interface :t1-0/0/0.1, Enabled
Operational state : Disabled
VPI : 10, VCI : 100

```

**show interface  
t1-0/0/0 detail**

```
cli@BX7000> show interface t1-0/0/0 detail
```

```

Physical interface :t1-0/0/0, Enabled, Physical Link : Up
Interface index:61441
MTU : 0, Speed :1544000, Loopback: Disabled
Operational state : Enabled, Encapsulation : Trans
Encoding : b8zs, Framing : unframe, Build-out : 0-132
Clock source : master
Description :
Traffic statistics:
T1 media:          Seconds
ES                 0
SES                0

```

**show interface  
t1-0/0/0 extensive**

```
cli@BX7000> show interface t1-0/0/0 extensive
```

```

Physical interface :t1-0/0/0, Enabled, Physical Link is Down
Interface index:61441
MTU : 0, Interface Description :
Interface Operational state is Disabled Interface Encapsulation is ATM
Traffic statistics:
T1 media:          Seconds
ES                 0
SES                0

rx_err_hec:0
rx_err_addr_mismatch:0
rx_err_overrun:0
rx_cells:0
rx_last_unknown_addr:0
rx_clp1_cells:0
rx_gfc_cells:0
tx_cells:0
tx_clp1_cells:0
tx_efci_cells:0
rx_oam_cells:0
rx_rm_cells:0
tx_oam_cells:0
tx_rm_cells:0
rx_efci_cells:0
rx_clp0_cells:0
tx_clp0_cells:0
rx_crc_err_cells:0
rx_unsupported_cells:0

```

```

Logical Interface :t1-0/0/0.1,
t1-0/0/0.1 Interface Description:Enabled, Unknown Link Status
Interface Operational state is Disabled
Interface VPI is:10
Interface VCI is:100
Interface Description:
ATM interface Traffic statistics:

```

```

Rx CLP0 :          0      Tx CLP0 : 0
Rx CLP1 :          0      Tx CLP1 : 0
UPC tagged       : 0
Congest discard: 0
Tx efci         : 0
Tx aal5 frames : 0
Rx ras timeout  : 0
EPD fr dropped  : 0
Timeout         : 0
CRC errors      : 0
Rx error underflow : 0
EPD drop frame count : 0
UPC non-conform CLP0 : 0
UPC non-conform CLP1 : 0
Congest discard CLP0 : 0
Congest discard CLP1 : 0
Congest discard devthr flag : 0
Congest discard classth flag : 0
OAM Cell Statistics :
Rx CC cells      : 0
Rx AIS cells     : 0
Rx RDI cells     : 0
Rx E2E RDI cells : 0
Rx E2E AIS cells : 0
Rx Loopback cells : 0
Tx Loopback cells : 0
Logical Interface :t1-0/0/0.2,
t1-0/0/0.2 Interface Description:Enabled, Unknown Link Status
Interface Operational state is Disabled
Interface VPI is:10
Interface VCI is:200
Interface Description:

ATM interface Traffic statistics:
Rx CLP0 :          0      Tx CLP0 : 0
Rx CLP1 :          0      Tx CLP1 : 0
UPC tagged       : 0
Congest discard: 0
Tx efci         : 0
Tx aal5 frames : 0
Rx ras timeout  : 0
EPD fr dropped  : 0
Timeout         : 0
CRC errors      : 0
Rx error underflow : 0
EPD drop frame count : 0
UPC non-conform CLP0 : 0
UPC non-conform CLP1 : 0
Congest discard CLP0 : 0
Congest discard CLP1 : 0
Congest discard devthr flag : 0
Congest discard classth flag : 0
OAM Cell Statistics :
Rx CC cells      : 0
Rx AIS cells     : 0
Rx RDI cells     : 0
Rx E2E RDI cells : 0
Rx E2E AIS cells : 0
Rx Loopback cells : 0
Tx Loopback cells : 0

```

```
show interface gr-r cli@BX7000> show interface gr-r
```

```
GRE Interface Name : "gr-r" , Enabled
IP address : 8.8.8.8 , Operational status : Enabled
Source address : 5.5.5.5 Destination address : 88.88.1.2
Number of pseudo-wires over this interface : 0
```

**show interface im-ima1** cli@BX7000> show interface im-imal

```
Logical Interface :im-imal , Enabled , Operational state : Enabled
Interface Description:
Clock mode: CTC
Symmetry mode: Sym OP + Sym Conf
Minimum Active Member links: 1
Active Tx Member links: 2
Active Rx Member links: 2
Differential Delay : 0
Frame size : 128
Total Tx Bandwidth : 3.09 Mbps
Total Rx Bandwidth : 3.09 Mbps

Physical interface :t1-0/0/0, Enabled, Physical Link : Up
Interface index:61444
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : enabled
Clock source : master
Description :

Physical interface :t1-0/0/1, Enabled, Physical Link : Up
Interface index:61445
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : disabled
Clock source : master
Description :
```

**show interface im-ima1 brief** cli@BX7000> show interface im-imal brief

```
Logical Interface :im-imal , Enabled , Operational state : Enabled
Interface Description:
Clock mode: CTC
Symmetry mode: Sym OP + Sym Conf
Minimum Active Member links: 1
Active Tx Member links: 2
Active Rx Member links: 2
Differential Delay : 0
Frame size : 128
Total Tx Bandwidth : 3.09 Mbps
Total Rx Bandwidth : 3.09 Mbps

Physical interface :t1-0/0/0, Enabled, Physical Link : Up
Interface index:61444
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble: enabled
Clock source : master
Description :

Physical interface :t1-0/0/1, Enabled, Physical Link : Up
Interface index:61445
```

```

MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : disabled
Clock source : master
Description :

```

**show interface im-ima1  
detail**

```
cli@BX7000> show interface im-ima1 detail
```

```
Logical Interface :im-ima1 , Enabled , Operational state : Enabled
```

```

Interface Description:
Clock mode: CTC
Symmetry mode: Sym OP + Sym Conf
Minimum Active Member links: 1
Active Tx Member links: 2
Active Rx Member links: 2
Differential Delay : 0
Frame size : 128
Total Tx Bandwidth : 3.09 Mbps
Total Rx Bandwidth : 3.09 Mbps

```

```

DPS Specific Group Id : 0
NE IMA Grp ID : 1 FE IMA Grp ID : 1
FE Symmetry: Sym Cfg + Sym Op
FE Frame Size : 128
FE IMA Version: IMA Version 1.1
NE State : GSM = Operational
FE State : GSM = Operational

```

```
Physical interface :t1-0/0/0, Enabled, Physical Link : Up
```

```

Interface index:61444
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble: enabled
Clock source : master
Description :

```

```
Traffic statistics:
```

```

T1 media:          Seconds

rx_icp_cells:3540
rx_err_icp_cells:0
rx_lods:0
rx_oif:0
rx_icp_violations:0
rx_stuff:204
rx_ne_ses:9
rx_ne_uas:7
rx_ne_uus:17
rx_ne_failure:2
rx_fe_defects:4
rx_fe_failure:0
rx_fe_uus:0
rx_fe_ses:4
rx_fe_uas:0
tx_icp_cells:4004
tx_stuff:250
tx_ne_uus:0
tx_fe_uus:0
tx_fe_failure:0
tx_ne_failure:0
lif_persistence_in:2500

```

```

lif_persistence_out:10000
lods_persistence_in:2500
lods_persistence_out:10000
rfi_persistence_in:2500
rfi_persistence_out:10000
g_idl:0
ne_ima_id:1
fe_ima_id:1
ne_lid:0
fe_lid:0
line_state:0
test_pat_state:TP Disabled
rx_test_pat:255
tx_icp_offset:0
ne_rx_lsm:active
ne_tx_lsm:active
fe_rx_lsm:active
fe_tx_lsm:active
ne_alarm_state:No Alarm
ne_alarm_type:
fe_alarm_state:No Alarm
fe_alarm_type:FE Rx Unusable
delay:0
ES          6
SES         6
    
```

```

Physical interface :tl-0/0/1, Enabled, Physical Link : Up
Interface index:61445
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : disabled
Clock source : master
Description :
Traffic statistics:
Tl media: Seconds
    
```

```

rx_icp_cells:3226
rx_err_icp_cells:0
rx_lods:0
rx_oif:0
rx_icp_violations:0
rx_stuff:203
rx_ne_ses:0
rx_ne_uas:0
rx_ne_uus:0
rx_ne_failure:0
rx_fe_defects:2
rx_fe_failure:0
rx_fe_uus:0
rx_fe_ses:2
rx_fe_uas:0
tx_icp_cells:3233
tx_stuff:202
tx_ne_uus:0
tx_fe_uus:0
tx_fe_failure:0
tx_ne_failure:0
lif_persistence_in:2500
lif_persistence_out:10000
lods_persistence_in:2500
lods_persistence_out:10000
rfi_persistence_in:2500
    
```

```

rfi_persistence_out:10000
g_idl:0
ne_ima_id:1
fe_ima_id:1
ne_lid:1
fe_lid:1
line_state:0
test_pat_state:TP Disabled
rx_test_pat:255
tx_icp_offset:64
ne_rx_lsm:active
ne_tx_lsm:active
fe_rx_lsm:active
fe_tx_lsm:active
ne_alarm_state:No Alarm
ne_alarm_type:
fe_alarm_state:No Alarm
fe_alarm_type:FE Rx Unusable
delay:0
ES                0
SES               0

```

**show interface im-ima1  
extensive**

```
cli@BX7000> show interface im-imal extensive
```

```

Logical Interface :im-imal , Enabled , Operational state : Enabled
Interface Description:
Clock mode: CTC
Symmetry mode: Sym OP + Sym Conf
Minimum Active Member links: 1
Active Tx Member links: 2
Active Rx Member links: 2
Differential Delay : 0
Frame size      : 128
Total Tx Bandwidth : 3.09 Mbps
Total Rx Bandwidth : 3.09 Mbps

DPS Specific Group Id : 0
NE IMA Grp ID : 1 FE IMA Grp ID : 1
FE Symmetry: Sym Cfg + Sym Op
FE Frame Size : 128
FE IMA Version: IMA Version 1.1
NE State      : GSM = Operational
FE State      : GSM = Operational

Long Port: 0      Short Port: 4
Delay Delta : 1
Rx TP      : 255
Tx TP      : 255
Expecting TP : 255
Running Seconds : 0
Unavailable Seconds: 0
NE TRL LID : 0 FE TRL LID : 0
NE Failure : 0 FE Failure : 0
Ports that have Active Tx LSMs: 0

Ports that have Active Rx LSMs: 2

Port Number 0
Port Number 1

Physical interface :t1-0/0/0, Enabled, Physical Link : Up
Interface index:61444

```

```

MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : enabled
Clock source : master
Description :
Traffic statistics:
Tl media: Seconds
ES 6
SES 6

```

```

rx_icp_cells:4368
rx_err_icp_cells:0
rx_lods:0
rx_oif:0
rx_icp_violations:0
rx_stuff:256
rx_ne_ses:9
rx_ne_uas:7
rx_ne_uus:17
rx_ne_failure:2
rx_fe_defects:4
rx_fe_failure:0
rx_fe_uus:0
rx_fe_ses:4
rx_fe_uas:0
tx_icp_cells:4831
tx_stuff:301
tx_ne_uus:0
tx_fe_uus:0
tx_fe_failure:0
tx_ne_failure:0
lif_persistence_in:2500
lif_persistence_out:10000
lods_persistence_in:2500
lods_persistence_out:10000
rfi_persistence_in:2500
rfi_persistence_out:10000
g_idl:0
ne_ima_id:1
fe_ima_id:1
ne_lid:0
fe_lid:0
line_state:0
test_pat_state:TP Disabled
rx_test_pat:255
tx_icp_offset:0
ne_rx_lsm:active
ne_tx_lsm:active
fe_rx_lsm:active
fe_tx_lsm:active
ne_alarm_state:No Alarm
ne_alarm_type:
fe_alarm_state:No Alarm
fe_alarm_type:FE Rx Unusable
delay:0

```

```

Physical interface :tl-0/0/1, Enabled, Physical Link : Up
Interface index:61445
MTU : 0, Speed :1544000, Loopback: Disabled
Tx state : Enabled, Rx state : Enabled, Encapsulation : ATM-IMA
Framing : esf, Build-out : 0-132
Cell scramble : disabled

```

```

Clock source : master
Description :
Traffic statistics:
T1 media:      Seconds
ES             0
SES           0

rx_icp_cells:4054
rx_err_icp_cells:0
rx_lods:0
rx_oif:0
rx_icp_violations:0
rx_stuff:255
rx_ne_ses:0
rx_ne_uas:0
rx_ne_uus:0
rx_ne_failure:0
rx_fe_defects:2
rx_fe_failure:0
rx_fe_uus:0
rx_fe_ses:2
rx_fe_uas:0
tx_icp_cells:4061
tx_stuff:253
tx_ne_uus:0
tx_fe_uus:0
tx_fe_failure:0
tx_ne_failure:0
lif_persistence_in:2500
lif_persistence_out:10000
lods_persistence_in:2500
lods_persistence_out:10000
rfi_persistence_in:2500
rfi_persistence_out:10000
g_idl:0
ne_ima_id:1
fe_ima_id:1
ne_lid:1
fe_lid:1
line_state:0
test_pat_state:TP Disabled
rx_test_pat:255
tx_icp_offset:64
ne_rx_lsm:active
ne_tx_lsm:active
fe_rx_lsm:active
fe_tx_lsm:active
ne_alarm_state:No Alarm
ne_alarm_type:
fe_alarm_state:No Alarm
fe_alarm_type:FE Rx Unusable
delay:0

```

**show interface ml-ppp** cli@BX7000> show interface ml-ppp

Interface Name : ml-ppp , Enabled,                    Interface Operational state : Enabled

```

Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Local address  : 76.76.1.1
Network address  : 76.76.1.2
Prefix Length      : 24
MTU                 : 1500                    Speed : 3.09 Mbps

```

```

Short Sequence      : 0      MRRU   : 1500
Minimum Active Member links : 1
Active Member links : 2
Fragment Threshold  : 0
Description         :
    
```

```

Physical interface :t1-0/0/0.1, Enabled,      Interface index:13486592
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0      Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression      :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :
    
```

```

Physical interface :t1-0/0/1.1, Enabled,      Interface index:13486593
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0      Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression      :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :
    
```

**show interface ml-ppp brief** cli@BX7000> show interface ml-ppp brief

```

Interface Name : ml-ppp , Enabled,      Interface Operational state : Enabled
    
```

```

Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Local address : 76.76.1.1
Network address : 76.76.1.2
Prefix Length      : 24
MTU                 : 1500      Speed : 3.09 Mbps
Short Sequence     : 0      MRRU   : 1500
Minimum Active Member links : 1
Active Member links : 2
Fragment Threshold : 0
Description        :
    
```

```

Physical interface :t1-0/0/0.1, Enabled,      Interface index:13486592
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0      Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
    
```

```

lcp_restart_timer :3
ncp_restart_timer :3
compression       :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :

```

```

Physical interface :t1-0/0/1.1, Enabled,          Interface index:13486593
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0          Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression      :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :

```

### show interface ml-ppp detail

```
cli@BX7000> show interface ml-ppp detail
```

```
Interface Name : ml-ppp , Enabled,          Interface Operational state : Enabled
```

```

Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Local address : 76.76.1.1
Network address : 76.76.1.2
Prefix Length       : 24
MTU                  : 1500          Speed : 3.09 Mbps
Short Sequence      : 0             MRRU  : 1500
Minimum Active Member links : 1
Active Member links : 2
Fragment Threshold  : 0
Description         :

```

```

Bundle Statistics:
Rx Frames           : 0
Rx Packets          : 0
Rx MRRU Error       : 0
Rx Inter-Working MRRU Error : 0
Rx Buffer Overrun Error : 0
Tx Frames(Control + Data packets): 0
Tx MRRU error       : 0
Rx Flushed Fragments : 0
Rx Last Proc Sequence : 16777215
Tx Last Sequence sent : 0
Rx Interworking Free Buffer Pointer Error : 0

```

```

Physical interface :t1-0/0/0.1, Enabled,          Interface index:13486592
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0          Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3

```

```

compression      :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :
    
```

```

PPP Statistics
Tx Frames(Including Packets) : 18      Rx Frames : 17
Tx Bytes : 292 Rx Bytes : 266
Max SDU Errors
Tx : 0 Rx : 0
Non octet error : 0
Rx Packets : 0
Rx CRC : 64
Rx Error Bytes : 90
Rx Aborted frames: 1
Rx Buffer overrun: 56
Rx over-run : 0
Rx HDLC Error : 0
Rx IW MRU Error : 0
Rx IW Parse Error: 0
Member Link Type : Primary
Tx Fragments : 0
Tx Fillers sent : 0
Rx Fragments : 0
Rx Fillers sent : 0
Rx Fragments Overrun : 0
Rx Error Fragments : 0
    
```

```

Physical interface :t1-0/0/1.1, Enabled,      Interface index:13486593
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0      Network address: 0.0.0.0
Interface Speed : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout :0
Keepalive :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :
    
```

```

PPP Statistics
Tx Frames(Including Packets) : 15      Rx Frames : 15
Tx Bytes : 248 Rx Bytes : 248
Max SDU Errors
Tx : 0 Rx : 0
Non octet error : 0
Rx Packets : 0
Rx CRC : 18
Rx Error Bytes : 18
Rx Aborted frames: 0
Rx Buffer overrun: 0
Rx over-run : 0
Rx HDLC Error : 0
Rx IW MRU Error : 0
Rx IW Parse Error: 0
Member Link Type : Member
Tx Fragments : 0
Tx Fillers sent : 0
Rx Fragments : 0
    
```

```

Rx Fillers sent      : 0
Rx Fragments Overrun : 0
Rx Error Fragments  : 0

show interface ml-ppp cli@BX7000> show interface ml-ppp extensive
extensive Interface Name : ml-ppp , Enabled,           Interface Operational state : Enabled

Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Local address : 76.76.1.1
Network address : 76.76.1.2
Prefix Length      : 24
MTU                : 1500           Speed : 3.09 Mbps
Short Sequence     : 0             MRRU  : 1500
Minimum Active Member links : 1
Active Member links : 2
Fragment Threshold : 0
Description        :

Bundle Statistics:
Rx Frames          : 0
Rx Packets         : 0
Rx MRRU Error      : 0
Rx Inter-Working MRRU Error : 0
Rx Buffer Overrun Error : 0
Tx Frames(Control + Data packets): 0
Tx MRRU error      : 0
Rx Flushed Fragments : 0
Rx Last Proc Sequence : 16777215
Tx Last Sequence sent : 0
Rx Interworking Free Buffer Pointer Error : 0

Physical interface :t1-0/0/0.1, Enabled,           Interface index:13486592
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0           Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout     :0
Keepalive        :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression      :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :

PPP Statistics
Tx Frames(Including Packets) : 30           Rx Frames : 29
Tx Bytes : 460 Rx Bytes : 434
Max SDU Errors
Tx : 0 Rx : 0
Non octet error : 0
Rx Packets      : 0
Rx CRC          : 64
Rx Error Bytes  : 90
Rx Aborted frames: 1
Rx Buffer overrun: 56
Rx over-run     : 0
Rx HDLC Error   : 0
Rx IW MRU Error : 0
Rx IW Parse Error: 0

```

```

Member Link Type : Primary
Tx Fragments      : 0
Tx Fillers sent   : 0
Rx Fragments      : 0
Rx Fillers sent   : 0
Rx Fragments Overrun : 0
Rx Error Fragments : 0

Physical interface :tl-0/0/1.1, Enabled,      Interface index:13486593
MTU: 1500
Interface Operational state is Enabled
Interface Local address: 0.0.0.0           Network address: 0.0.0.0
Interface Speed   : 1544000
MLPPP Bundle name : ml-ppp
Idle Timeout      :0
Keepalive         :10
Negotiate_address :0
lcp_restart_timer :3
ncp_restart_timer :3
compression       :0
Interface LCP Operational state is Enabled
Interface IP state is Enabled
Interface Description :

PPP Statistics
Tx Frames(Including Packets) : 25           Rx Frames : 25
Tx Bytes : 388 Rx Bytes : 388
Max SDU Errors
Tx : 0 Rx : 0
Non octet error : 0
Rx Packets      : 0
Rx CRC          : 18
Rx Error Bytes : 18
Rx Aborted frames: 0
Rx Buffer overrun: 0
Rx over-run     : 0
Rx HDLC Error   : 0
Rx IW MRU Error : 0
Rx IW Parse Error: 0
Member Link Type : Member
Tx Fragments    : 0
Tx Fillers sent : 0
Rx Fragments    : 0
Rx Fillers sent : 0
Rx Fragments Overrun : 0
Rx Error Fragments : 0

```

## show ip tcp statistics

---

**Syntax** show ip tcp statistics

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the IP TCP statistics.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the connection, segments, and packet details.

```

show ip tcp statistics cli@BX7000> show ip tcp statistics
    1322 active connections openings
    1166 passive connection openings
    66 failed connection attempts
    0 connection resets received
    30 connections established
    64853507 segments received
    121457487 segments send out
    22430 segments retransmitted
    0 bad segments received.
    1222 resets sent
TcpExt:
    32 ICMP packets dropped because they were out-of-window
    ArpFilter: 0
    1272 TCP sockets finished time wait in fast timer
    51 packets rejects in established connections because of timestamp
    108585 delayed acks sent
    6190 delayed acks further delayed because of locked socket
    Quick ack mode was activated 187571 times
    3692 packets directly queued to rcvmsg prequeue.
    6 packets directly received from backlog
    3651909 packets directly received from prequeue
    2488531 packets header predicted
    2691 packets header predicted and directly queued to user
    TCPPureAcks: 56708280
    TCPHPAcks: 4380791
    TCPRecovery: 0
    TCPSackRecovery: 4859
    TCPSACKReneging: 0
    TCPFACKReorder: 0
    TCPSACKReorder: 0
    TCPReorder: 0
    TCPTSReorder: 0
    TCPFullUndo: 0
    TCPPartialUndo: 0
    TCPDSACKUndo: 0
    TCPLossUndo: 0
    TCPLoss: 6590
    TCPLostRetransmit: 136
    TCPRecoveryFailures: 0
    TCPSackFailures: 13
    TCPLossFailures: 0
    TCPFastRetrans: 18898
    TCPForwardRetrans: 3064
    TCPSlowStartRetrans: 185
    TCPTimeouts: 113
    TCPRecoveryFail: 0
    TCPSackRecoveryFail: 83
    TCPSchedulerFailed: 0
    TCPRecvCollapsed: 0
    TCPDSACKOldSent: 188334
    TCPDSACKOfoSent: 1057
    TCPDSACKRecv: 185
    TCPDSACKOfoRecv: 0
    TCPAbortOnSyn: 0
    TCPAbortOnData: 2
    TCPAbortOnClose: 2
    TCPAbortOnMemory: 0
    TCPAbortOnTimeout: 14
    TCPAbortOnLinger: 0
    TCPAbortFailed: 0
    TCPMemoryPressures: 0

```

## show ip traffic

- Syntax** show ip traffic
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the IP, Internet Message Control Protocol (ICMP), User Datagram Protocol (UDP), and Transmission Control Protocol (TCP) statistics.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Table 19 on page 78 lists the output fields for the show ip traffic command. The output fields are listed in the order in which they appear.

**Table 19: show ip traffic Output Field Details**

| Field Name | Field Description  |
|------------|--|
| Ip         | The IP details, including the number of incoming packets received, discarded, and delivered. |
| Icmp       | The traffic details for the Internet Message Control Protocol (ICMP).                        |
| Tcp        | The traffic details for the Transmission Control Protocol (TCP).                             |
| Udp        | The packet details for the User Datagram Protocol (UDP).                                     |

```

show ip traffic cli@BX7000> show ip traffic
Ip:
  65145090 total packets received
  0 forwarded
  1294 incoming packets discarded
  65133632 incoming packets delivered
  121465867 requests sent out
  374 dropped because of missing route
Icmp:
  1566 ICMP messages received
  0 input ICMP message failed.
  ICMP input histogram:
    destination unreachable: 79
    timeout in transit: 34
    redirects: 20
    echo requests: 1207
    echo replies: 226
  1424 ICMP messages sent
  0 ICMP messages failed
  ICMP output histogram:
    destination unreachable: 217
    echo replies: 1207
Tcp:
  1322 active connections openings
  1166 passive connection openings
  66 failed connection attempts
  0 connection resets received
  30 connections established
  64853428 segments received
  121457426 segments send out
  22430 segments retransmited
  0 bad segments received.
  1222 resets sent
Udp:
  
```

```

3269 packets received
217 packets to unknown port received.
1294 packet receive errors
3686 packets sent
TcpExt:
 233 delayed acks sent
 19 packets directly queued to recvmsg prequeue.
 8 of bytes directly received from prequeue
2786 packet headers predicted
4852 acknowledgments not containing data received
4735 predicted acknowledgments
 0 TCP data loss events
 10 other TCP timeouts
 10 DSACKs sent for old packets
 1 connections aborted due to timeout
IPv4 statistics:
Total received Packets   : 157473 pps
Host term IPv4 Packets   : 157473 pps
Host term Ipv4 Option Packets : 0 pps
Host term OSPF Packets   : 0 pps
Received ARP Packets     : 15164 pps
Protocol Error           : 0
Checksum Error           : 0
Forwarded packets       : 0

```

## show ip udp statistics

---

- Syntax** show ip udp statistics
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the IP UDP statistics.
- Additional Information** See the *BXOS Configuration Guide*.
- show ip udp statistics** cli@BX7000> show ip udp statistics  
Udp:  
3269 packets received  
217 packets to unknown port received.  
1294 packet receive errors  
3686 packets sent

## show isis adjacency

---

- Syntax** show isis adjacency
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the details for IS-IS parameters, including the information about the IS-IS adjacency.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the details about interface level, state, lifetime, priority, last transition, and circuit type.
- show isis adjacency** cli@BX7000> show isis adjacency 7777.8888.9999

```

9999.8888.7777
  Interface: ge-1/0/2, Level: 1, State: Up, Expires: 194 secs
  Priority: 1, Last transition: 00:26:01 ago
  Circuit type: 3
  IP addresses: 44.44.44.2
9999.8888.7777
  Interface: ge-1/0/2, Level: 2, State: Up, Expires: 19 secs
  Priority: 64, Last transition: 00:31:12 ago
  Circuit type: 3
  IP addresses: 44.44.44.2
    
```

## show isis database

---

**Syntax** show isis database

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details for IS-IS database parameters.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the details about interface level, including sequence number, checksum, and lifetime period of the packet.

```

show isis database cli@BX7000> show isis database
IS-IS level 1 link-state database:
  2222.3333.4444.0-0 Sequence: 0x3, Checksum: 0x12c7, Lifetime: 592 secs

IS-IS level 1 link-state database:
  2222.3333.4444.0-0 Sequence: 0x4, Checksum: 0x12c7, Lifetime: 432 secs

IS-IS level 1 link-state database:
  2222.3333.4444.0-0 Sequence: 0x2, Checksum: 0x12c7, Lifetime: 722 secs

IS-IS level 1 link-state database:
  2222.3333.4444.0-0 Sequence: 0x5, Checksum: 0x12c7, Lifetime: 986 secs

IS-IS level 1 link-state database:
  2222.3333.4444.0-0 Sequence: 0x2, Checksum: 0x12c7, Lifetime: 794 secs
    
```

## show isis hostname

---

**Syntax** show isis hostname

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details for the IS-IS hostname.

**Additional Information** See the *BXOS Configuration Guide*.

```

show isis hostname cli@BX7000> show isis hostname
SystemID      Hostname
2222.3333.4444 BX7000
2222.3333.4444 BX7000
    
```

## show isis interface

---

|                               |  |
|-------------------------------|--|
| <b>Syntax</b>                 | show isis interface  |
| <b>Release Information</b>    | Command introduced in BXOS Release 3.0.  |
| <b>Description</b>            | Display the details for the IS-IS parameters, including the information about the IS-IS interface.   |
| <b>Additional Information</b> | See the <i>BXOS Configuration Guide</i> .  |
| <b>Output Fields</b>          | Contain the details about interface state, circuit ID, circuit type, Link State Packet (LSP) interval, level, priority, metric value, hello interval in milliseconds, and hold interval in milliseconds. |

```

show isis interface cli@BX7000> show isis interface
ge-1/0/0
  Index: 3, State: Down, Circuit id: 1, Circuit type: 1
  LSP interval: 984 ms
  Level   Priority   Metric   Hello (s)   Hold (s)
  3       64         10       3           10
ge-1/0/0
  Index: 3, State: Down, Circuit id: 1, Circuit type: 1
  LSP interval: 984 ms
  Level   Priority   Metric   Hello (s)   Hold (s)
  3       64         10       3           10
ge-1/0/2
  Index: 5, State: Up, Circuit id: 2, Circuit type: 1
  LSP interval: 984 ms
  Level   Priority   Metric   Hello (s)   Hold (s)
  3       64         10       10          20
ge-1/0/2
  Index: 5, State: Up, Circuit id: 2, Circuit type: 1
  LSP interval: 984 ms
  Level   Priority   Metric   Hello (s)   Hold (s)
  3       64         10       3           10

```

## show l2circuit

---

|                               |   |
|-------------------------------|---|
| <b>Syntax</b>                 | show l2circuit <i>pw_name</i><br><brief   detail   extensive>   |
| <b>Release Information</b>    | Command introduced in BXOS Release 3.0.   |
| <b>Description</b>            | Display the status information about Layer 2 virtual circuits (VCs).  |
| <b>Options</b>                | <i>pw_name</i> —Name of the pseudowire on which L2 circuit is configured.<br>brief   detail   extensive—(Optional) Display the specified levels of output.  |
| <b>Additional Information</b> | See the <i>BXOS Configuration Guide</i> .   |
| <b>See Also</b>               | See the following sections to display the different levels of output: <ul style="list-style-type: none"> <li>■ show l2circuit p1 brief on page 82</li> <li>■ show l2circuit p1 detail on page 83</li> </ul> |

- show l2circuit p1 extensive on page 84

**Output Fields** Contain the details about ATM pseudowire statistics, ATM-to-PSN direction cell statistics, and PSN-to-ATM direction cell statistics.

```

show l2circuit p1 brief cli@BX7000> show l2circuit p1 brief
    Pw fec id is: 15
    L2circuit Neighbor Addr:10.10.10.10
    L2circuit Dest addrss prefix len:32
    L2circuit prefered path is ' pri 'and it is RSVP Tunnel
    L2circuit route is not dependent on input interface
    Pw VC Type and control word bit: 17
    Pw group VC FEC : 0
    Length of VC FEC interface parameters field: 0
    Pw next_hop_list_index : 0
    The L2circuit Output inet address which should be used to reach the next
    hop is 0.0.0.0
    VC setup is signaled with C=1 (Control Word present) and VC setup fails
    if the remote LDP peer signals C=0
    Pseudo Wire Type : satop
    Number of attached Interfaces : 1
    Attached Interface : e1-0/0/0

    Payload : 192 bytes  Bit-rate : 32

    Jitter buffer : 5000  Sequence window : 6

    Alarm set time: 250  Alarm clear time: 300

    Idle pattern : 10

    Packet loss threshold : 12

    Packet sequence threshold: 12

    Dynamic time-stamping : absolute
    Clock frequency: 0  RTP ssrc : 0

    "p1" L2circuit admin status is Enabled.

    <<<<<<< SATOP PSW statistics having FEC id:15>>>>>>>>

    TDM to PSN Direction
    Rx Valid packets : 0
    Forwarded packets : 0
    Free buffer events : 0
    Free buffer drops : 0
    MTU drops : 0
    Congestion drops : 0

    PSN to TDM Direction
    Forwarded Packets : 0
    Free Buffer drops : 0
    Under-run drops : 0
    Stray Packets : 0
    Malformed Packets : 0
    Duplicate Packets : 0
    Error Drops : 0
    Denied Packets : 0
    Reordered Packets : 0
    Transit Packets : 0
    Dummy Transit Packets : 0
    
```

```

Idle Transit Packets      : 0
Out-of-sequence packets  : 0
Sequence Window switchover: 0
Buffer over-run events   : 0
Buffer under-run events  : 0

```

```

show l2circuit p1 detail cli@BX7000> show l2circuit p1 detail
Pw fec id is: 2
L2circuit LSR Index: 1
L2Circuit MiB Index:2
L2circuit Neighbour Addr:12.12.12.2
L2circuit Dest addrss prefix len:32
L2circuit route is not dependent on input interface
Pw VC Type and control word bit: 12
Pw group VC FEC : 0
Length of VC FEC interface parameters field: 0
Pw next_hop_list_index : 0
The L2circuit Output inet address which should be used to reach the next
hop is 0.0.0.0
L2circuit Next hop inet address 12.12.12.2
The LDP Peer ID of the remote peer with whom the VC is being set up is
0.0.0.0
VC setup is signaled with C=1 (Control Word present) but drops back to
C=0 if the remote LDP peer signals C=0
****User Data on the Pseudo wires attachment interfaces****
Pseudo Wire Type type is cell lto1VCC
Number of attached Interfaces:1
Interface Name:t1-0/0/0.1 and its index is :61444
"p1" L2circuit admin status is Enabled.

<<<<<<< ATM PSW statistics having FEC id:2>>>>>>>>

L2circuit ID      :2
L2circuit if_ndex:10
L2circuit out tunnel if index:9
L2circuit MPLS in label:16
L2circuit MPLS out label:524290
L2circuit Number of Atm if indices:1
****ATM to PSN Direction packet Statistics****
Forwarded Packets      :0
fbp_drop_packets      :0
mtu_drop_packets      :0
****ATM to PSN Direction cell Statistics****
Received Cells         : 0
Received CRC Error    : 0
Rx underflow Error    : 0
IW cells              : 0
FR Dropped            : 0
RAS Timeout           : 0
clp0 cells            : 0
clp1 cells            : 0
****PSN to ATM Direction packet Statistics****
forwarded_packets:0
fbp_drop_packets:0
mtu_drop_packets:0
ttl_drop_packets:0
tx_queue_drop_packets:0
mpls_drop_packets:0
denied_packets:0
out_of_seq_packets:0
non_zero_sn_packets:0
switchover_events:0
port_level_invalid_lbl_packets:0

```

```

*****PSN to ATM Direction cell Statistics*****
Transmit Cells      : 0
Transmit Clp0 Cells : 0
Transmit Clp1 Cells : 0
    
```

**show l2circuit p1 extensive** cli@BX7000> show l2circuit p1 extensive

```

Pw fec id is: 2
L2circuit LSR Index: 1
L2Circuit MiB Index:2
L2circuit Neighbor Addr:12.12.12.2
L2circuit Dest address prefix len:32
L2circuit route is not dependent on input interface
Pw VC Type and control word bit: 12
Pw group VC FEC : 0
Length of VC FEC interface parameters field: 0
Pw next_hop_list_index : 0
The L2circuit Output inet address which should be used to reach the next
hop is 0.0.0.0
L2circuit Next hop inet address 12.12.12.2
The LDP Peer ID of the remote peer with whom the VC is being set up is
0.0.0.0
VC setup is signaled with C=1 (Control Word present) but drops back to
C=0 if the remote LDP peer signals C=0
*****User Data on the Pseudo wires attachment interfaces*****
Pseudo Wire Type type is cell lto1VCC
Number of attached Interfaces:1
Interface Name:t1-0/0/0.1 and its index is :61444
"p1" L2circuit admin status is Enabled.
    
```

<<<<<< ATM PSW statistics having FEC id:2>>>>>>>>

```

L2circuit ID      :2
L2circuit if_ndex:10
L2circuit out tunnel if index:9
L2circuit MPLS in label:16
L2circuit MPLS out label:524290
L2circuit Number of Atm if indices:1
*****ATM to PSN Direction packet Statistics*****
Forwarded Packets :0
fbp_drop_packets  :0
mtu_drop_packets  :0
*****ATM to PSN Direction cell Statistics*****
Received Cells      : 0
Received CRC Error  : 0
Rx underflow Error  : 0
IW cells            : 0
FR Dropped          : 0
RAS Timeout         : 0
clp0 cells          : 0
clp1 cells          : 0
*****PSN to ATM Direction packet Statistics*****
forwarded_packets:0
fbp_drop_packets:0
mtu_drop_packets:0
ttl_drop_packets:0
tx_queue_drop_packets:0
mpls_drop_packets:0
denied_packets:0
out_of_seq_packets:0
non_zero_sn_packets:0
switchover_events:0
port_level_invalid_lbl_packets:0
    
```

```
*****PSN to ATM Direction cell Statistics*****
Transmit Cells      : 0
Transmit Clp0 Cells : 0
Transmit Clp1 Cells : 0
```

## show ldp interface

---

- Syntax** show ldp  
interface <interface-name>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the interface details for the Link Distribution Protocol (LDP). The interface name is an optional field.
- Options** interface *interface-name*—(Optional) Display the name of an interface on which LDP is configured.
- Additional Information** See the *BXOS Configuration Guide*.

```
show ldp interface ge-1/0/2 cli@BX7000> show ldp interface ge-1/0/2
ge-1/0/2
      Index : 5
      Hold time : 15, Local hello interval : 9
      Transport address : 111.111.111.1
```

## show ldp neighbor

---

- Syntax** show ldp neighbor
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the LDP neighbor status information.
- Additional Information** See the *BXOS Configuration Guide*.

```
show ldp neighbor cli@BX7000> show ldp neighbor
Interface name : ge-1/0/1      Index : 4
Admin status   : Enabled
Hold time      : 15, Local hello interval : 5
Transport address : 10.100.65.251
```

## show ldp overview

---

- Syntax** show ldp overview
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the overview for LDP.
- Additional Information** See the *BXOS Configuration Guide*.

```
show ldp overview cli@BX7000> show ldp overview
```

```

show ldp overview
State           Kealive-Timeout Hold-time           Target-Hello           Transport-Addr
enable         11.11.11.2 15                               11.11.11.1
    
```

## show log

**Syntax** show log

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the list of system log files.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the details about access rights, which can be read, write, or execute. File information also includes the user login type, date, time, and memory used by all the users.

```

show log cli@BX7000> show log
drwxr-xr-x 9 root root 4096 Mar 23 04:02 .
drwxr-xr-x 21 root root 4096 Aug 16 2007 ..
-rw-r--r-- 1 root root 318 Nov 26 12:08 a_txt.txt
-rw----- 1 root root 0 Mar 23 04:02 boot.log
-rw----- 1 root root 113 Mar 23 04:02 boot.log.1
-rw----- 1 root root 113 Mar 16 04:02 boot.log.2
-rw----- 1 root root 7483 Mar 9 04:02 boot.log.3
-rw----- 1 root root 113 Mar 2 04:02 boot.log.4
-rw----- 1 root root 2840 Mar 24 11:01 cron
-rw----- 1 root root 14952 Mar 23 04:02 cron.1
-rw----- 1 root root 14911 Mar 16 04:02 cron.2
-rw----- 1 root root 16061 Mar 9 04:02 cron.3
-rw----- 1 root root 15122 Mar 2 04:02 cron.4
drwxr-xr-x 2 lp sys 4096 Mar 23 04:02 cups
-rw-r--r-- 1 root root 6308 Mar 7 20:15 dmesg
drwxr-xr-x 2 root root 4096 Aug 16 2007 gdm
drwx----- 2 root root 4096 Feb 25 2003 httpd
-rw-r--r-- 1 root root 61121 Mar 7 20:15 ksyms.0
-rw-r--r-- 1 root root 61121 Mar 4 10:14 ksyms.1
-rw-r--r-- 1 root root 61121 Mar 4 10:11 ksyms.2
-rw-r--r-- 1 root root 61121 Feb 15 15:00 ksyms.3
-rw-r--r-- 1 root root 61121 Feb 8 20:31 ksyms.4
-rw-r--r-- 1 root root 61121 Feb 8 20:24 ksyms.5
-rw-r--r-- 1 root root 61121 Dec 20 18:01 ksyms.6
-r----- 1 root root 19136220 Mar 24 11:35 lastlog
-rw----- 1 root root 887 Mar 24 04:02 maillog
-rw----- 1 root root 7972 Mar 23 04:02 maillog.1
-rw----- 1 root root 8864 Mar 16 04:02 maillog.2
-rw----- 1 root root 7319 Mar 9 04:02 maillog.3
-rw----- 1 root root 27407 Mar 2 04:02 maillog.4
-rw----- 1 root root 1882 Mar 24 11:43 messages
-rw----- 1 root root 341288 Mar 23 04:02 messages.1
-rw----- 1 root root 176810 Mar 16 04:02 messages.2
-rw----- 1 root root 170898 Mar 9 04:02 messages.3
-rw----- 1 root root 80073 Mar 2 04:02 messages.4
-rw-r--r-- 1 root root 18021 Mar 24 04:02 rpmpkgs
-rw-r--r-- 1 root root 18021 Mar 22 04:02 rpmpkgs.1
-rw-r--r-- 1 root root 18021 Mar 15 04:02 rpmpkgs.2
-rw-r--r-- 1 root root 18021 Mar 8 04:02 rpmpkgs.3
    
```

```

-rw-r--r-- 1 root root 18021 Mar 1 04:02 rpmpkgs.4
drwx----- 2 root root 4096 Mar 14 2003 samba
-rw-r--r-- 1 root root 4220 Aug 16 2007 scrollkeeper.log
-rw----- 1 root root 0 Mar 23 04:02 secure
-rw----- 1 root root 383 Mar 19 15:10 secure.1
-rw----- 1 root root 743 Mar 14 16:38 secure.2
-rw----- 1 root root 0 Mar 2 04:02 secure.3
-rw----- 1 root root 2871 Mar 1 21:28 secure.4
-rw-r--r-- 1 root root 0 Mar 9 04:02 snmpd.log
-rw-r--r-- 1 root root 802859416 Mar 24 11:56 snmpd.log.1
-rw-r--r-- 1 root root 12543957 Mar 7 20:14 snmpd.log.2
-rw-r--r-- 1 root root 44321 Feb 27 12:35 snmpd.log.3
-rw-r--r-- 1 root root 44321 Jan 7 17:28 snmpd.log.4
-rw-r--r-- 1 root root 5234723 Oct 1 10:36 snmpd.log.bk
-rw----- 1 root root 0 Mar 23 04:02 spooler
-rw----- 1 root root 0 Mar 16 04:02 spooler.1
-rw----- 1 root root 0 Mar 9 04:02 spooler.2
-rw----- 1 root root 0 Mar 2 04:02 spooler.3
-rw----- 1 root root 0 Feb 24 04:02 spooler.4
drwxr-x--- 2 squid squid 4096 Jan 25 2003 squid
-rw-r--r-- 1 root root 764719 Mar 24 11:35 sshd2
drwxr-xr-x 2 root root 4096 Dec 10 13:56 tac-plus
-rw-r----- 1 root root 387636 Dec 11 15:02 tac_plus.log
-rw-r--r-- 1 root root 118280 Mar 24 10:50 ua_log.txt
-rw-r--r-- 1 root root 500060 Mar 21 18:37 ua_log.txt.1
-rw----- 1 root root 24576 Mar 14 17:03 .ua_log.txt.swp
drwxr-xr-x 2 root root 4096 Feb 4 2003 vbox
-rw-rw-r-- 1 root utmp 328704 Mar 24 11:35 wtmp
-rw-rw-r-- 1 root utmp 678528 Feb 29 21:27 wtmp.1
-rw-r--r-- 1 root root 1157 Jan 28 14:55 XFree86.0.log
-rw-r--r-- 1 root root 1157 Dec 12 21:36 XFree86.0.log.old

```

## show manual-mode

---

- Syntax** show manual-mode
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the manual mode status.
- Additional Information** See the *BXOS Configuration Guide*.

```

show manual-mode cli@BX7000> show manual-mode
Manual mode: enabled

```

## show memory detail

---

- Syntax** show memory detail
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the memory usage of the system.
- Output Fields** Table 20 on page 88 lists the output fields for the show memory command.

**Table 20: show memory detail Output Field Details**

| Field Name | Field Description                                     |
|------------|---|
| memTotal   | The total memory available for the system.            |
| MemUsed    | The bytes of memory used by various processes.        |
| MemShared  | The bytes of memory shared between various process.   |
| Buffers    | The bytes of memory used as a temporary storage.      |
| Cached     | The size of cache memory.                             |
| SwapCached | The bytes of cache memory used for swapping.          |
| SwapTotal  | The total memory available for swapping.              |
| SwapFree   | The bytes of memory currently available for swapping. |
| Active     | The active bytes of memory.                           |

**show memory detail**

```
cli@BX7000> show memory detail
MemTotal:      223676 kB
MemFree:       64448 kB
Buffers:       118460 kB
Cached:        16476 kB
SwapCached:    0 kB
Active:        23764 kB
Inactive:      127588 kB
HighTotal:     0 kB
HighFree:      0 kB
LowTotal:      223676 kB
LowFree:       64448 kB
SwapTotal:     0 kB
SwapFree:      0 kB
Dirty:         40 kB
Writeback:     0 kB
Mapped:        26144 kB
Slab:          5236 kB
CommitLimit:  111836 kB
Committed_AS: 150720 kB
PageTables:    904 kB
VmallocTotal: 1048560 kB
VmallocUsed:   133328 kB
VmallocChunk: 915204 kB
```

```
*****
                TOTAL MEMORY      FREE MEMORY      USED MEMORY
                In Bytes          In Bytes          In Bytes
*****
Parameter memory:      111132672      107333184      3799488
Packet  memory:       134217728      65261568      68956160
Internal memory:           26928           24572           2356
Host    memory:         33554432      33554432           0
```

## show mf-classifiers

---

- Syntax** show mf-classifiers
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the multifield classifier information.
- Additional Information** See the *BXOS Configuration Guide*.

```

show mf-classifiers cli@BX7000> show mf-classifiers
Classifier name: cc
Source IP: 33.33.33.2
Source port From : 23
Destination IP : 33.33.33.1
Destination port From : 21
DSCP Value : 0
Protocol : 0
Match Action :
Confirm action , DSCP Mark : 20

```

## show mpls tunnel

---

- Syntax** show mpls tunnel  
<tunnel-name>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the list of all the tunnels configured over the MPLS protocol with the explicit route. You can also specify the name of a particular tunnel to view the details of that tunnel.
- Options** *tunnel-name*—Name of the MLPLS tunnel.
- Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contains the details about MPLS tunnel parameters, including ingress and egress IP addresses.

```

show mpls tunnel pri cli@BX7000> show mpls tunnel pri

Ingress LSP: 1 sessions
  To                From          State    LSPname    Labelin    Labelout
  2.2.2.2           1.1.1.1      Dn       lsp1       -          -
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

## show mpls tunnel association

---

- Syntax** show mpls tunnel *tunnel-name* association
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the configuration details for the all the tunnel configured over the MPLS.
- Option** *tunnel-name*—Name of the primary MPLS tunnel.  
           *association*—Display the details of all the configured tunnels.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the details about the outgoing interface, label, state, backup and bypass outgoing label, and bypass outgoing interface.

```

show mpls tunnel pri association cli@BX7000> show mpls tunnel pri association
                                Primary Tunnel name   : pri
                                Outgoing interface     : ge-1/0/1
                                Outgoing label        : 100608
                                State                 : UP
                                Backup outgoing label  : 100608
                                Backup tunnel state    : UP
                                Bypass tunnel name     : by
                                Bypass outgoing label  : 0
                                Bypass outgoing interface : ge-1/0/2
    
```

## show ntp associations

---

- Syntax** show ntp associations
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the NTP peers and their state. NTP support synchronizes the device date and time to a common time base in a network. NTP operates over UDP at default port 123.
- Additional Information** See the *BXOS Configuration Guide*.

```

show ntp associations cli@BX7000> show ntp associations
                                remote      refid      st t   when poll reach  delay
                                offset jitter
=====
    10.100.65.110 LOCAL(0)  13 u   2    64   1    0.747  1.026
    0.061
    
```

## show ntp status

---

- Syntax** show ntp status
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the values of internal variables returned by NTP peers.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the details about NTP parameters, including version, processor, and system information.

```
cli@BX7000> show ntp status
assID=0 status=c011 sync_alarm, sync_unspec, 1 event, event_restart,
version="ntpd 4.2.0a@1:4.2.0a-10-r Sat Dec 17 20:48:47 PST 2005 (1)"?,
processor="mips", system="BXOS/2.6.10_BX7000_R0_03", leap=11,
stratum=16, precision=-14, rootdelay=0.000, rootdispersion=0.090,
peer=0, refid=INIT,
reftime=000000000.00000000 Thu, Feb 7 2036 6:28:16.000, poll=4,
clock=0xcbb87d20.d5fcf3dc, state=0, offset=0.000, frequency=0.000,
error=0.061, jitter=0.061, stability=0.000
```

## show oam-ethernet connectivity-fault-management interfaces

---

- Syntax** show oam-ethernet connectivity-fault-management interfaces
- Release Information** Command introduced in BXOS Release 4.0.
- Description** Display the configured interfaces of the Ethernet connectivity-fault management (CFM).
- Additional Information** See the *BXOS Configuration Guide*.

```
cli@BX7000> show oam-ethernet connectivity-fault-management interfaces
Interface      Link      Status      Level      MEP      Neighbours
connectivity-fault-management interfaces
Identifier
ge-1/1/0.0     Up        Active      0          2        1
ge-1/1/0.1     Up        Active      0          2        1
ge-1/1/0.10    Up        Active      0          2        1
ge-1/1/0.100   Up        Active      0          2        1
ge-1/1/0.101   Up        Active      0          2        1
ge-1/1/0.102   Up        Active      0          2        1
ge-1/1/0.103   Up        Active      0          2        1
ge-1/1/0.104   Up        Active      0          2        1
ge-1/1/0.105   Up        Active      0          2        1
ge-1/1/0.106   Up        Active      0          2        1
```

## show oam-ethernet connectivity-fault-management mep-database

---

- Syntax** show oam ethernet connectivity-fault-management mep-database maintenance-domain *domain-name* maintenance-association *ma-name* local-mep remote-mep
- Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the Operation, Administration, and Management (OAM) connectivity fault management maintenance association end point (MEP) database information.

**Additional Information** See the *BXOS Configuration Guide*.

```

show oam-ethernet      cli@BX7000> show oam-ethernet connectivity-fault-management mep-database
connectivity-fault-ma maintenance-domain md_name maintenance-association ma_name local-mep 10
nagement mep-database      Maintenance domain name: md_name, Format: string, Level: 3
maintenance-domain      Maintenance association name: ma_name
md_name                  Continuity-check status: enabled, Interval: 10sec,
maintenance-associati Loss-threshold: 20 frames
on ma_name local-mep    MEP identifier: 10, Direction: DOWN, MAC address:0:0:0:55:0:1
10                       Interface Name: ge-1/0/0, Interface Status: Active, Link Status: UP
Auto-discovery: enabled, Priority: 6

```

```

Defects:
Erroneous CCM received      : no
Cross-connect CCM received : no
RDI sent by some MEP       : no

```

```

Statistics:
CCMs sent                  : 112
CCMs received out of sequence : 0
LBMs sent                  : 0
LBMs received              : 0
LBRs sent                  : 0
LBRs received              : 0
LTMs sent                  : 0
LTMs received              : 0
LTRs sent                  : 0
LTRs received              : 0

```

```

show oam-ethernet connectivity-fault-management mep-database maintenance-domain md_name maintenance-association ma_name local-mep 10 remote-mep 10
cli@BX7000> show oam-ethernet connectivity-fault-management mep-database
maintenance-domain md_name maintenance-association ma_name local-mep 10
remote-mep 10
Maintenance domain name: md_name, Format: string, Level: 3
Maintenance association name: ma_name
Continuity-check status: enabled, Interval: 10sec, Loss-threshold: 20 frames
MEP identifier: 10, Direction: DOWN, MAC address:0:0:0:55:0:1
Interface Name: ge-1/0/0, Interface Status: Active, Link Status: UP
Auto-discovery: enabled, Priority: 6
Remote MEP identifier: 10, State: Fail
MAC address      : 0:0:0:0:0:0
Interface        : ge-1/0/0
Remote defect indication : false
Port status TLV   : none
Interface status TLV : none

```

## show oam-ethernet connectivity-fault-management path-database

**Syntax** show oam-ethernet connectivity-fault-management path-database *mac-address* maintenance-domain *domain-name* maintenance-association *ma-name* local-mep

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the OAM connectivity fault management path database information for a host configured with an MEP.

**Additional Information** See the *BXOS Configuration Guide*.

```

show oam-ethernet connectivity-fault-management path-database maintenance-domain md1 maintenance-association ma1 local-mep 2000
cli@BX7000> show oam-ethernet connectivity-fault-management path-database maintenance-domain md1 maintenance-association ma1 local-mep 2000
Linktrace to: 0:1f:12:80:6:1, Interface: ge-1/0/1.2
Maintenance Domain: md1, Level: 7
Maintenance Association: ma1, Local Mep: 2000

Hop      TTL      Source MAC address      Transaction Identifier
-----
1        63      0:1f:12:80:7:82        4
2        62      0:1f:12:80:7:81        4
3        63      0:1f:12:80:6:1         4

```

## show oam-ethernet link-fault-management

**Syntax** show oam-ethernet link-fault-management (brief | detail | interface)

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display OAM link fault management information for Ethernet interfaces.  
 brief | detail | interface— (Optional) Display the specified level of output.

**Additional Information** See the *BXOS Configuration Guide*.

```

show oam-ethernet link-fault-management
cli@BX7000> show oam-ethernet link-fault-management
Interface : ge-1/0/1
OAM Configuration:
Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
Capability: Link events, Variable Requests
Status: Running,Discovery state: Link fault
Peer address:0:0:0:0:0:0
Interface : ge-1/0/2
OAM Configuration:
Pdu Interval: 500msec, Pdu Threshold: 5, action: Alarm
Capability: Remote Loopback, Variable Requests
Status: Running,Discovery state: Send Any
Peer address:0:11:22:33:44:2
Flags: Remote-Stable Remote-State-Valid Local-Stable
Remote loopback status: Disabled on local port, Disabled on peer port
Remote entity information:
Remote MUX action: Forward, Remote parser action: Forward
Discovery mode: active,Unidirectional mode: unsupported
Remote loopback mode: supported, Link events: unsupported
Variable requests: supported

```

**show oam-ethernet  
link-fault-management  
brief**

```
cli@BX7000> show oam-ethernet link-fault-management brief
Interface : ge-1/0/1
  OAM Configuration:
    Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
    Capability: Link events, Variable Requests
    Status: Running,Discovery state: Link fault
    Peer address:0:0:0:0:0:0
Interface : ge-1/0/2
  OAM Configuration:
    Pdu Interval: 500msec, Pdu Threshold: 5, action: Alarm
    Capability: Remote Loopback, Variable Requests
    Status: Running,Discovery state: Send Any
    Peer address:0:11:22:33:44:2
    Flags: Remote-Stable Remote-State-Valid Local-Stable
    Remote loopback status: Disabled on local port, Disabled on peer port
  Remote entity information:
    Remote MUX action: Forward, Remote parser action: Forward
    Discovery mode: active,Unidirectional mode: unsupported
    Remote loopback mode: supported, Link events: unsupported
    Variable requests: supported
```

**show oam-ethernet  
link-fault-management  
detail**

```
cli@BX7000> show oam-ethernet link-fault-management detail
Interface : ge-1/0/1
  OAM Configuration:
    Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
    Capability: Link events, Variable Requests
    Status: Running,Discovery state: Link fault
    Peer address:0:0:0:0:0:0
  OAM receive statistics:
    Information 0, Event: 0, Variable request: 0, Variable response: 0
    Loopback control: 0, Organization specific: 0
  OAM transmit statistics:
    Information 0, Event: 0, Variable request: 0, Variable response: 0
    Loopback control: 0, Organization specific: 0
  OAM Errored Symbol period information:
    Events: 0, Window: 1, Threshold: 1
    Errors in period: 0, Total errors: 0
  OAM Errored Frame event information:
    Events: 0, Window: 1, Threshold: 1
    Errors in period: 0, Total errors: 0
  OAM Errored Frame period event information:
    Events: 0, Window: 80000, Threshold: 1
    Errors in period: 0, Total errors: 0
  OAM Errored Frame seconds information:
    Events: 0, Window: 60, Threshold: 1
    Errors in period: 0, Total errors: 0
Interface : ge-1/0/2
  OAM Configuration:
    Pdu Interval: 500msec, Pdu Threshold: 5, action: Alarm
    Capability: Remote Loopback, Variable Requests
    Status: Running,Discovery state: Send Any
    Peer address:0:11:22:33:44:2
    Flags: Remote-Stable Remote-State-Valid Local-Stable
  OAM receive statistics:
    Information 67, Event: 0, Variable request: 0, Variable response: 0
    Loopback control: 0, Organization specific: 0
  OAM transmit statistics:
    Information 83, Event: 0, Variable request: 0, Variable response: 0
    Loopback control: 0, Organization specific: 0
  OAM Errored Symbol period information:
    Events: 0, Window: 1, Threshold: 1
    Errors in period: 0, Total errors: 0
```

```
OAM Errored Frame event information:
  Events: 1, Window: 1, Threshold: 4
  Errors in period: 3, Total errors: 3
OAM Errored Frame period event information:
  Events: 0, Window: 80000, Threshold: 5
  Errors in period: 0, Total errors: 0
OAM Errored Frame seconds information:
  Events: 0, Window: 60, Threshold: 5
  Errors in period: 0, Total errors: 0
Remote entity information:
  Remote MUX action: Forwarding, Remote parser action: Forward
  Discovery mode: active, Unidirectional mode: unsupported
  Remote loopback mode: supported, Link events: unsupported
  Variable requests: supported
```

**show oam-ethernet  
link-fault-management  
interface ge-1/0/1**

```
cli@BX7000> show oam-ethernet link-fault-management interface ge-1/0/1
Interface : ge-1/0/1
OAM Configuration:
  Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
  Capability: Link events, Variable Requests
Status: Running, Discovery state: Link fault
Peer address:0:0:0:0:0:0
```

**show oam-ethernet  
link-fault-management  
interface ge-1/0/1  
brief**

```
cli@BX7000> show oam-ethernet link-fault-management interface ge-1/0/1 brief
Interface : ge-1/0/1
OAM Configuration:
  Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
  Capability: Link events, Variable Requests
Status: Running, Discovery state: Link fault
Peer address:0:0:0:0:0:0
```

**show oam-ethernet  
link-fault-management  
interface ge-1/0/1  
detail**

```
cli@BX7000> show oam-ethernet link-fault-management interface ge-1/0/1 detail
Interface : ge-1/0/1
OAM Configuration:
  Pdu Interval: 1000msec, Pdu Threshold: 3, action: None
  Capability: Link events, Variable Requests
Status: Running, Discovery state: Link fault
Peer address:0:0:0:0:0:0
OAM receive statistics:
  Information 0, Event: 0, Variable request: 0, Variable response: 0
  Loopback control: 0, Organization specific: 0
OAM transmit statistics:
  Information 0, Event: 0, Variable request: 0, Variable response: 0
  Loopback control: 0, Organization specific: 0
OAM Errored Symbol period information:
  Events: 0, Window: 1, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM Errored Frame event information:
  Events: 0, Window: 1, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM Errored Frame period event information:
  Events: 0, Window: 80000, Threshold: 1
  Errors in period: 0, Total errors: 0
OAM Errored Frame seconds information:
  Events: 0, Window: 60, Threshold: 1
  Errors in period: 0, Total errors: 0
```

## show ospf database

- Syntax** show ospf database  
<brief | detail>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the database information for the OSPF protocol.
- Options** brief | detail—(Optional) Display the specified level of output.
- Additional Information** See the *BXOS Configuration Guide*.
- See Also** See the following sections to view the various levels of output:
  - show ospf database on page 96
  - show ospf database brief on page 96
  - show ospf database detail on page 96
- Output Fields** Contain the details about gateway type ID, sequence number, age in seconds, checksum, and length.

```
cli@BX7000> show ospf database
OSPF link state database, Area 1.1.1.1
LSA Type   LSA ID       Adv Rtr      Seq          Age      Opt      Cksum      Len
Router 10.100.65.251 10.100.65.251 0x80000001 130x420x3e2a
36
OPAQUE 1.0.0.1      10.100.65.251 0x80000001 36      0x42    0x58b9     28
```

```
cli@BX7000# show ospf database brief
OSPF link state database, Area 1.1.1.1
LSA Type   LSA ID       Adv Rtr      Seq          Age      Opt      Cksum      Len
Router 10.100.65.251 10.100.65.251 0x80000001 130x420x3e2a
36
OPAQUE 1.0.0.1      10.100.65.251 0x80000001 36      0x42    0x58b9     28
```

```
cli@BX7000# show ospf database detail
OSPF link state database, Area 1.1.1.1
LSA Type LSA ID       Adv Rtr      Seq          Age      Opt      Cksum      Len
Router 10.100.65.251 10.100.65.251 0x80000001 130x420x3e2a
36
0x42 0x3e2a 36
bits 0x2, link count 1
id 255.255.255.255, data 255.255.255.255
TOS count 0, TOS 0 metric 0
Opaque 1.0.0.1      10.100.65.251 0x80000001 30
0x42 0x58b9 28
Area-opaque TE LSA
Router address (1), length 4: 80.0.0.1
```

## show ospf interface

---

- Syntax** show ospf interface *interface-name*  
<brief |detail |extensive>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the interface parameters of OSPF in brief, detail, and extensive levels of output.
- Options** *interface-name*—Name of the OSPF interface.  
brief |detail |extensive—(Optional) Display the specified levels of output.
- Additional Information** See the *BXOS Configuration Guide*.
- See Also** See the following sections to display the output:
- show ospf interface on page 97
  - show ospf interface brief on page 97
  - show ospf interface detail on page 97
  - show ospf interface extensive on page 97
- Output Fields** Contain the details about interface ID on which the OSPF is configured. It also includes the hello, dead, and retransmit interval details.

```

show ospf interface cli@BX7000> show ospf interface
                    extensive      Show the extensive interface params
                    brief          Show the brief interface params
                    detail         Show the detail interface params

```

```

show ospf interface cli@BX7000> show ospf interface brief
brief
Interface  State      Area          DR ID          BDR ID
ge-1/0/1   BDR        1. 1. 1. 1   11. 11. 11. 2 11. 11. 11. 1

```

```

show ospf interface cli@BX7000> show ospf interface detail
detail
Interface  State      Area          DR ID          BDR ID
ge-1/0/1   BDR        1. 1. 1. 1   11. 11. 11. 2 11. 11. 11. 1
Type: LAN, address: 11.11.11.1, mask: 255.255.255.0, MTU: 1500,
priority: 1,
Hello: 10, Dead: 40, ReXmit: 5,
Auth type = None

```

```

show ospf interface cli@BX7000> show ospf interface extensive
extensive
Interface  State      Area          DR ID          BDR ID
ge-1/0/1   BDR        1. 1. 1. 1   11. 11. 11. 2 11. 11. 11. 1
Type: LAN, address: 11.11.11.1, mask: 255.255.255.0, MTU: 1500,
priority: 1,
Hello: 10, Dead: 40, ReXmit: 5,
Auth type = None

```

## show ospf neighbor

---

- Syntax** show ospf neighbor *neighbor-address*  
<brief | detail>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the OSPF neighbor parameters.
- Options** *neighbor-address*—IP address of the OSPF neighbor.  
brief | detail—(Optional) Display the specified levels of output.
- Additional Information** See the *BXOS Configuration Guide*.
- See Also** See the following sections to display the output:
- show ospf neighbor on page 98
  - show ospf neighbor brief on page 98
  - show ospf neighbor detail on page 98
- Output Fields** Contain the details about IP address, interface on which OSPF is configured, state, ID, priority, and dead interval.
- show ospf neighbor**
- ```
cli@BX7000> show ospf neighbor
  brief           Show the brief neighbor params
  detail          Show the detail neighbor params
```
- show ospf neighbor brief**
- ```
cli@BX7000> show ospf neighbor brief
Address      Interface State   ID           Pri    Dead
11.11.11.2   ge-1/0/1 Full    11.11.11.2  2      35
```
- show ospf neighbor detail**
- ```
cli@BX7000> show ospf neighbor detail
Address      Interface State   ID           Pri    Dead
11.11.11.2   ge-1/0/1 Full    11.11.11.2  2      33
area 1.1.1.1 opt 0x42 Link state retransmission queue length = 0
```

## show policy

---

- Syntax** show policy
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the information about the configured routing policies.
- Additional information** See the *BXOS Configuration Guide*.
- show policy**
- ```
cli@BX7000> show policy
Policy : p1
Term: t1
```

```

Match-conditions:      From Protocol static
                        Then accept      Metric value: 33      External
Type: 1

```

## show ports

---

- Syntax** show ports
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the T1, E1, and Ethernet ports.
- Additional information** See the *BXOS Configuration Guide*.

```

show ports cli@BX7000> show ports
                e1-0/0/0
                e1-0/0/1
                e1-0/0/2
                e1-0/0/3
                e1-0/0/4
                e1-0/0/5
                e1-0/0/6
                e1-0/0/7
                e1-0/0/8
                e1-0/0/9
                e1-0/0/10
                e1-0/0/11
                e1-0/0/12
                e1-0/0/13
                e1-0/0/14
                e1-0/0/15
                ge-1/0/0
                ge-1/0/1
                ge-1/0/2

```

## show protocol

---

- Syntax** show protocol  
<bfd | isis | ldp | mpls | oam-ethernet | ospf | rsvp | snmp>
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the routing protocols configured on the gateway.
- Options** bfd—(Optional) Display the configured parameters for BFD protocol.
- isis—(Optional) Display the configured parameters for IS-IS protocol.
- ldp—(Optional) Display the configured parameters for LDP protocol.
- mpls—(Optional) Display the configured parameters for MPLS protocol.
- oam-ethernet—(Optional) Display the configured parameters for OAM ethernet protocol.
- ospf—(Optional) Display the configured parameters for OSPF protocol.

rsvp—(Optional) Display the configured parameters for RSVP protocol.

snmp—(Optional) Display the configured parameters for SNMP protocol.

**Additional information** See the *BXOS Configuration Guide*.

**See Also** See the following sections to display the details for the configured protocols:

- show protocol on page 100
- show protocol bfd on page 101
- show protocol isis on page 101
- show protocol ldp on page 101
- show protocol mpls on page 102
- show protocol ospf on page 102
- show protocol rsvp on page 102
- show protocol snmp on page 102

**Output Fields** Contains the parameter details for all the configured protocols.

```
cli@BX7000> show protocol
protocols {
  ospf {
    admin-state enable;
    spf-delay 200;
    area 1.1.1.1 {
      interface ge-1/0/2 {
        admin-state enable;
      }
    }
  }
  ldp {
    admin-state enable;
  }
  rsvp {
    admin-state enable;
  }
  mpls {
  }
  static-route {
    route 10.10.0.0/16 {
      next-hop 192.1.1.2;
    }
    route 10.10.1.0/26 {
      next-hop 192.1.1.2;
    }
    route 10.10.1.0/30 {
      next-hop 192.1.1.2;
    }
  }
}
```

```

show protocol bfd cli@BX7000> show protocol bfd
protocols {
  bfd {
    receive-interval 0;
    transmit-interval 4294967;
    multiplier 0;
  }
}

show protocol isis cli@BX7000> show protocol isis
protocols{
  isis {
    enable;
    level 1{
      traffic engineering {
        enable;
      }
      wide-metrics-only 2;
    }
    level 2{
      traffic engineering {
        disable;
      }
      wide-metrics-only 1;
    }
    interface ge-1/0/1 {
      enable;
    }
  }
}

show protocol ldp cli@BX7000> show protocol ldp
protocols{
  ldp {
    enable;
    interface ge-1/0/1 {
    }
  }
}

show protocol mpls cli@BX7000> show protocol mpls
protocols {
  mpls {
  }
}

show protocol oam-ethernet cli@BX7000> show protocol oam-ethernet
protocols {
  oam-ethernet{
  }
}

show protocol ospf cli@BX7000> show protocol ospf
protocols {
  ospf {
    enable;
    area 1.1.1.1 {
      interface ge-1/0/1 {
        enable;
      }
    }
  }
}

```

```
    }
  }
```

**show protocol rsvp** cli@BX7000> show protocol rsvp

```
protocols{
  rsvp {
    enable;
    interface ge-1/0/1 {
      enable;
    }
  }
}
```

**show protocol snmp** cli@BX7000> show protocol snmp

```
system {
  snmp {
    snmp-trap {
      target-ipaddress 10.100.65.122;
      version v1;
    }
  }
}
```

## show qos-profiles

---

**Syntax** show qos-profiles

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the QoS profile information.

**Additional Information** See the *BXOS Configuration Guide*.

**show qos-profiles** cli@BX7000> show qos-profiles p1

```
name: p1
type: two-rate
Committed info rate: 551903255657
Committed burst size: 256
Peak info rate: 2201170697321
Peak burst size: 1024
Conform action : mark, DSCP Value: 55
Exceed action : mark, DSCP Value : 11
Violate action : drop

name: pp
type: two-rate
Committed info rate: 551903255657
Committed burst size: 256
Peak info rate: 2201170697321
Peak burst size: 1024
Conform action : mark, DSCP Value : 25
Exceed action : mark, DSCP Value : 11
Violate action : drop
```

## show qos-scheduler

---

- Syntax** show qos-scheduler
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the QoS scheduler information.
- Additional Information** See the *BXOS Configuration Guide*.

```

show qos-profiles cli@BX7000> show qos-scheduler
Interface name: ge-1/0/1
  Expedited forwarding
    Priority: 0
  Assured forwarding
    Type: WFQ
    Subclass: 1
      Weight: 20
      Green priority: 20
      Yellow priority: 20
      Red priority: 20
    Subclass: 2
      Weight: 30
      Green priority: 30
      Yellow priority: 30
      Red priority: 30
    Subclass: 3
      Weight: 40
      Green priority: 40
      Yellow priority: 40
      Red priority: 40
    Subclass: 4
      Weight: 50
      Green priority: 50
      Yellow priority: 50
      Red priority: 50
  Best effort forwarding
    Priority: 20
  Shaper name: sh1

```

## show qos-shaper

---

- Syntax** show qos-shaper
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the QoS shaper information.
- Additional Information** See the *BXOS Configuration Guide*.

```

show qos-profiles cli@BX7000> show qos-shaper sh2
Name                : sh1

Type                : cir

Committed info rate : 10000 Mbps

Committed burst size: 256 bytes

```

## show qos-statistics

---

- Syntax** show qos-statistics *profile-name*
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the QoS statistics information.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the default values for policer packets. The CLI updates the counters if some policing action is carried out and there are packet drops.
- show qos-statistics**

```
cli@BX7000> show qos-statistics

Policer non-conforming packets - 0
Policer first bucket non-conforming packets - 0
```

## show radius-server

---

- Syntax** show radius-server
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the details of RADIUS server configuration parameters.
- Additional information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the details about the RADIUS server, including server address, accounting port number, port number, retry number, password, and authentication timeout.
- show radius-server**

```
cli@BX7000> show radius-server
Radius server configuration details
  Radius Server Address           :192.168.1.1
  Radius Server Port number      :1812
  Radius Server Retry number     :100
  Radius Server secret-password  :xxx
  Radius Server authentication timeout :1
```

## show route

---

- Syntax** show route
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the complete gateway information, including information about the routing table and the interface configured on the gateway.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the destination prefix, outgoing interface, metric values, next hop, protocol, age, and preference.

```

show route cli@BX7000> show route
C = Connected, S = Static, L = Local, O = OSPF, I = ISIS, * = Next hop is not
set, - = Age is not set
1 destinations 1 routes
Destination prefix Outgoing interface Metric Next hop Protocol Age Preference
10.100.65.0/24 (via) :ge-1/0/0 1 * C - 1

```

---

## show rsvp interface

**Syntax** show rsvp interface

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Show the interface details for the RSVP.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the type of interface, operational status of the interface, available and reserved bandwidth, and number of tunnels running on the same interface.

```

show rsvp interface cli@BX7000> show rsvp interface

Physical Interface : ge-1/0/1 Index : 4
Operational state : Enabled
Available Bandwidth : 1000.00 Mbps Reserved Bandwidth : 0 bps
Number of tunnels running on this interface : 1

```

---

## show rsvp session

**Syntax** show rsvp session

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Show the details of the RSVP tunnels that are in up state.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the details about ingress and egress RSVP sessions.

```

show rsvp session cli@BX7000> show rsvp session
Ingress RSVP: 2 sessions
To From State LSPname Labelin Labelout
1.1.1.1 2.2.2.2 Up s1 - 3
1.1.1.1 2.2.2.2 Up fw - 1048575

Total 2 displayed, Up 2, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

## show snmp

---

**Syntax** show snmp  
 <community | contact | description | inform | location | trap | v3 <engine-id | groups | type | users | view>>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display SNMP details.

- Options**
- community—Show SNMP v2c community information.
  - contact—Show SNMP v2c contact information.
  - description—Show SNMP v2c description information.
  - inform—Show SNMP v2c inform information.
  - trap—Show SNMP v2c trap information.
  - v3—Show Simple Network Management Protocol v3 information.
  - v3 engine-id—Show SNMPv3 engine-id information.
  - v3 groups—Show SNMPv3 security-to-group information.
  - v3 type—Show SNMPv3 notification type information.
  - v3 users—Show SNMP v3 users information.
  - v3 view—Show SNMP v3 view information.

**Additional Information** See the *BXOS Configuration Guide*.

```
cli@BX7000> show snmp community
Security-model      Security-name      Group-name
v2c                 cli                 grpmib2
```

```
cli@BX7000> show snmp contact
User      Auth/Priv
cli       auth/priv
```

```
cli@BX7000> show snmp description
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1      include
```

```
cli@BX7000> show snmp inform
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1      include
```

```
cli@BX7000> show snmp trap
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1      include
```

```
cli@BX7000> show snmp v3 engine-id
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1      include
```

```

show snmp v3 groups cli@BX7000> show snmp v3 groups
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1  include

show snmp v3 type cli@BX7000> show snmp v3 type
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1  include

show snmp v3 users cli@BX7000> show snmp v3 users
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1  include

show snmp v3 view cli@BX7000> show snmp v3 view
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1  include

```

## show snmpv3

---

**Syntax** show snmpv3  
<groups | users | view>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the SNMPv3 details.

**Options** groups—(Optional) Display the SNMPv3 group details.  
users—(Optional) Display SNMPv3 user details.  
view—(Optional) Display SNMPv3 view details.

**Output Fields** Contain the details about SNMPv3 groups, user, and view.

**Additional Information** See the *BXOS Configuration Guide*.

```

show snmpv3 groups cli@BX7000> show snmp v3 groups
Security-model      Security-name      Group-name
v2c                 cli                grpMib2

show snmpv3 users cli@BX7000> show snmp v3 users
User      Auth/Priv
cli       auth/priv

show snmpv3 view cli@BX7000> show snmp v3 view
Viewname      oid      Include/Exclude
v1            1.3.6.1.2.1  include

```

## show source-filter

---

**Syntax** show source-filter *interface-name*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the MAC filters.

**Options** *interface-name*—Name of the interface.

**Output Fields** Contain the MAC address of the peer device to receive data.

**Additional Information** See the *BXOS Configuration Guide*.

```

show source-filter cli@BX7000> show source-filter ge-1/0/1
ge-1/0/1
ge-1/0/1 MAC Filters :
      mac filter:00:11:22:33:11:00
    
```

## show statistics classifier

---

**Syntax** show statistics classifier

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the BA classifier statistics.

**Output Fields** Contain the interface name, interface number, DSCP value, and the VLAN priority value.

**Additional Information** See the *BXOS Configuration Guide*.

```

Show statistics cli@BX7000> show statistics classifier
classifier
Number of Interfaces: 2
Non-conforming Packets: 0
Interface name DSCP VLAN priority
ge-1/0/0 12 10
ge-1/0/1 10 5
    
```

## show statistics gre-tunnel

---

**Syntax** show statistics gre-tunnel *tunnel-name*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the GRE tunnel statistics details.

**Options** *tunnel-name*—Name of the GRE tunnel.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the status of GRE tunnel, source and destination addresses, and tunnel up-time.

**Table 21: show statistics gre-tunnel Output Field Details**

| Field Name         | Field Description                            |
|--------------------|--|
| GRE tunnel name    | The name of the tunnel.                      |
| Operational status | The status of the tunnel.                    |
| Source address     | The source of the tunnel.                    |
| Tunnel up time     | The time at which the GRE tunnel is enabled. |

```

show statistics gre-tunnel gr-r cli@BX7000> show statistics gre-tunnel gr-r
GRE Tunnel Name      : "gr-r" , Enabled
Operational status  : Enabled
Source Address:5.5.5.5 Destination Address:88.88.1.2
Tunnel Up Time:1970-01-01 00:00:21 UTC

```

## show statistics ipv4

- Syntax** show statistics ipv4
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the statistics details for IP version 4 (IPv4).
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the order and the amount of information carried by IPv4 data packets.

**Table 22: show statistics ipv4 Output Field Details**

| Field Name                    | Field Description  |
|-------------------------------|--|
| Total received packets        | The total number of valid IP packets received.   |
| Host term IPv4 packets        | The number of IPv4 packets without an option field. These packets are host terminated. |
| Host term Ipv4 option packets | The number of IPv4 packets with an option field. These packets are host terminated.    |
| Host term OSPF packets        | The number of OSPF packets sent to host. These packets are host terminated.            |
| Received ARP packets          | The number of ARP packets received.  |
| Protocol error                | The number of invalid IP packets.  |
| Checksum error                | The number of IPv4 packets with a header checksum error.                               |
| Forwarded packets             | The number of packets forwarded.   |

```

show statistics ipv4 cli@BX7000> show statistics ipv4
Total received packets : 390599 pps
Host term IPv4 packets : 390599 pps
Host term Ipv4 option packets : 0 pps
Host term OSPF packets : 0 pps
Received ARP packets : 100400 pps
Protocol Error : 0
Checksum Error : 0
Forwarded packets : 0

```

## show statistics I2circuit

- Syntax** show statistics I2circuit *pseudowire-name*
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Display the statistics details about ATM and SAToP pseudowires.
- Options** *pseudowire-name*—Name of the ATM or SAToP pseudowire.
- Additional Information** See the *BXOS Configuration Guide*.
- Output Fields** Contain the details about pseudowire statistics and PSN-to-ATM statistics which include packet statistics and ATM Adaptation Layer (AAL) statistics.

**Table 23: show statistics I2circuit Output Field Details**

| Field Name              | Field Description   |
|-------------------------|---|
| Received packets        | Total number of the valid received packets by the SAToP interworking function (SAToP IWF) from the PSN-bound direction.   |
| Free buffer drops       | The packets dropped due to lack of buffers present in the fast path.  |
| Under-run drops         | The number of times the transmit buffer is present in the fast path.  |
| Stray packets           | The packets detected by the SAToP IWF from the PSN-bound direction. The number of stray packets are increased when RTP and the SSRC field in the RTP header are used.   |
| Malformed packets       | The packets detected by the SAToP IWF from the PSN-bound direction. These packets are increased when the received packet size does not match the expected packet size in the pseudowire and the RTP header payload type value is incorrect. |
| Duplicate packets       | The number of duplicate packets received by the SAToP IWF from the PSN-bound direction.   |
| Error drops             | The number of packets dropped due to CRC error by the SAToP IWF from the PSN-bound direction.   |
| Denied packets          | The packets that are not allowed by the SAToP IWFs from the PSN-bound direction.  |
| Reordered packets       | The number of packets reordered by the SAToP IWF with reference to the sequence number.   |
| Transit packets         | The number of forwarded packets.  |
| Dummy transit packets   | The number of times a dummy packet is transmitted by the SAToP IWF due to a lost pseudowire packet.   |
| Idle transit packets    | The number of times an idle packet passed over TDM.   |
| Out-of-sequence packets | The number of packets reordered by the SAToP IWF when these packets are sent from the PSN-bound direction.  |
| Buffer run-over         | The number of packets dropped by the SAToP IWF when the sequence number in the SAToP packet is more than the jitter buffer size.  |
| Buffer under-run        | The number of times the transmit buffer under-run event was hit when packets are transmitted from the PSN-bound direction towards CE-bound direction through the SAToP IWF.   |
| Rx valid packets        | The number of valid data packets forwarded to the PSN-bound direction by the SAToP IWF.   |

| Field Name         | Field Description  |
|--------------------|--|
| Forwarded packets  | The number of forwarded packets to the PSN-bound direction by the SAToP IWF.   |
| Free buffer events | The number of times the event packets dropped due to lack of buffers in the SAToP IWF while transmitting pseudowire packets towards the PSN. |
| Free buffer drops  | Packets dropped due to lack of buffers in the SAToP IWF while transmitting pseudowire packets towards the PSN.                               |
| MTU drops          | The number of packets dropped when the packet length is more than the MTU size.  |
| Congestion drops   | The number of packets dropped due to congestion in the transmit queue.   |

### show statistics l2circuit p1

```
cli@BX7000> show statistics l2circuit p1
```

```
Pseudo-Wire Statistics :
```

```
=====
                          PSN to TDM Direction
=====
```

```
Received Packets : 2276
Free Buffer drops : 0
Under-run drops : 0
Stray Packets : 0
Malformed Packets : 0
Duplicate Packets : 301
Error Drops : 0
Denied Packets : 0
Reordered Packets : 0
Transit Packets : 57
Dummy Transit Packets : 54
Idle Transit Packets : 41794
Out-of-sequence packets : 28597
Sequence Window: 0
Buffer over-run events : 0
Buffer under-run events : 43
Operational status : up
```

```
=====
                          TDM to PSN Direction
=====
```

```
Rx Valid packets : 1417963
Forwarded packets : 1417963
Free buffer events : 0
Free buffer drops : 0
MTU drops : 0
Congestion drops : 0
```

### show statistics l2circuit

**Syntax** show statistics l2circuit *eth-pw-name*  
<brief | detail>

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the pseudowire statistics.

**Options** *eth-pw-name*—Ethernet pseudowire name.

**Additional Information** See the *BXOS Configuration Guide*.

```

show statistics l2circuit eth_pw cli@BX7000> show statistics l2circuit eth_pw
pseudowire statistics:
Operational status : Up
AC to PSN Direction
Rx Valid packets: 0
Forwarded packets: 12
Free buffer events: 0
MTU drops: 0
PSN to AC MIB Statistics
Invalid VLAN Packets: 0
PSN to AC PKT Statistics
Forwarded packets: 0
Free Buffer Drops: 0
Out of soq packets: 0
MTU drops: 0
Seq num switchovers: 0
Denied packets: 0
MPLS error drops: 0
    
```

```

show statistics l2circuit eth_pw detail cli@BX7000> show statistics l2circuit eth_pw detail
PW FEC ID: 16
Neighbour address: 192.168.30.11
Preferred path: tun_pe_1 Type : RSVP
Group VC FEC: 0
VC type and control word bit: 5
Control Word: Enabled
Pseudowire Type is Ethernet
Number of attached Interfaces: 1
Attached Interfaces: ge-1/0/1,
Max cell-concat: 0 Max cell-wait time: 0
Sequence check: disable sequence switch-over: 0
Interface Name: ge-1/0/1
Interface Index: 4
MTU: 1000
Service Tag: 100
Remote Service Tag: 0
Egress Action: Raw None
Egress Replace Tag: 0
Sequence Window: 10
VCCV Status: Disabled
Admin status: up
Operational status: Up Operational status: Up
VCCV Status: Disabled
    
```

## show statistics rsvp-tunnel

---

**Syntax** show statistics rsvp-tunnel *tunnel-name*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the RSVP tunnel statistics details.

**Options** *tunnel-name*—Name of the RSVP tunnel.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the details about number of packets forwarded and discarded over the tunnel. Also contain the details for erroneous packets and octets forwarded.

**Table 24: show statistics rsvp-tunnel Output Field Details**

| Field Name        | Field Description                                     |
|-------------------|---|
| Tunnel name       | The name of the RSVP tunnel.                          |
| Forwarded packets | The number of packets forwarded over the RSVP tunnel. |
| Discarded packets | The number of packets discarded over the RSVP tunnel. |

```

show statistics cli@BX7000> show statistics rsvp-tunnel tnnl3
rsvp-tunnel
                *****Tunnel statistics*****
                Tunnel Name   : "tnnl3"
                Forwarded packets: 3075167
                Error packets   : 0
                Discarded packets: 0
                Octets Forwarded : 0

```

## show syslog

---

**Syntax** show syslog

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the system log file configuration details.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contains the details about system log file, user terminals, and archive files.

```

show syslog cli@BX7000> show syslog

```

```

file /var/log/messages
{
    *.info
    cron.none
}

file /var/log/cron
{
    cron.*
}

user *
{
    *.emerg
}

archive
{
    rotate 4
    size=1000k
}

```

## show system clock-card

---

**Syntax** show system clock-card

**Release Information** Command introduced in BXOS Release 4.0.

**Description** Display the clock card configuration.

**Additional Information** See the *BXOS Configuration Guide*.

```

cli@BX7000> show system clock-card
system {
    clock-card {
        source-priority {
            tdm-primary-reference t1-0/0/1 priority 2;
            tdm-secondary-reference t1-0/0/2 priority 3;
            ces-reference t1-0/0/3 priority 4;
            ethernet-reference ge-1/0/1 priority 5;
            bits priority 6;
            10mhz priority 7;
            ptp priority 1;
        }
        ptp {
            domain 0;
            mode unicast;
            ptp-master 10.10.10.1;
        }
        revertive-mode enable;
    }
}

```

## show system processes

---

**Syntax** show system processes  
<brief | detail | extensive>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details about all processes running on the gateway.

**Options** brief | detail | extensive—(Optional) Display the specified level of output.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the details about process ID, terminal type, time taken by each process, and the command by which it is initiated.

```

show system processes cli@BX7000> show system processes
PID TTY      STAT   TIME COMMAND
  1 ?        S       0:30  init
  2 ?        S<      0:00  [ksoftirqd/0]
  3 ?        S<      0:00  [desched/0]
  4 ?        S<      0:00  [events/0]
  5 ?        S<      0:00  [khelper]
 10 ?        S<      0:00  [kthread]
 13 ?        S<      0:00  [kblockd/0]
 35 ?        S       0:00  [pdflush]
 36 ?        S       0:00  [pdflush]
 38 ?        S<      0:00  [aio/0]
 37 ?        S       0:00  [kswapd0]
 718 ?       S       0:00  [mtdblockd]
 807 ?       Ss      0:00  /usr/sbin/inetd
 815 ?       Ss      0:00  /sbin/klogd -c 2
 832 ?       S<      0:00  [keventd]
 861 ?       S<      0:00  [framer_event]
 862 ?       D<      0:00  [framer_stats]
 863 ?       S<      0:08  [framer_led]
 870 ?       D<      0:00  [Pkt Parser]
 989 ?       S<      0:00  [kphy_event]
 990 ?       S<     133:43 [kphy_statistics]
1006 ?       Ss      0:01  /usr/sbin/cron
1066 ?       SN      0:00  [jffs2_gcd_mtd4]
1068 ?       SN      0:00  [jffs2_gcd_mtd5]
1073 ?       Ss      0:08  /sbin/syslogd -f /etc/syslog.conf
1076 ?       S       0:00  tail -f /var/log/console.log
1101 ?       S       0:00  [khubd]
1319 ?       S       0:00  /usr/syrah/bin/remote_loop_respond
1367 ?       S<      0:00  [Clock_card_Even]
1385 ?       S<      0:00  [Combo_Event]
1398 ?       S       0:00  sysmgr
1426 ?       SNl     0:04  snmpd -p /var/net-snmp/snmp.pid
1427 ?       SNl     0:00  eventd
1428 ?       SNl     0:01  cm
1429 ?       SNl     2:01  dpm
1430 ?       SN      0:01  im
1431 ?       SN      0:01  lsc
1432 ?       SN      0:16  dcsmc ospf isis rsvp ldp rsm
1433 ?       SN      0:00  frr
1434 ?       SN      0:00  bfdcm
1435 ?       SN      0:00  bfdsn
1436 ?       SNl     0:01  ua
1437 ?       SN      0:13  rmon
1438 ?       Sl      0:01  watch_dog
1716 ?       Ss      0:01  /usr/sbin/sshd
1774 ttyS0    Ss      0:00  -sh
1847 ttyS0    S+      0:08  cli
17962 ttyS0    S+      0:00  sh -c /bin/ps ax > /tmp/tmp_show_file_1847.txt
17963 ttyS0    R+      0:00  /bin/ps ax

```

**show system processes  
brief**

```
cli@BX7000> show system processes brief
PID TTY      STAT  TIME COMMAND
  1 ?        S      0:30 init
  2 ?        S<     0:00 [ksoftirqd/0]
  3 ?        S<     0:00 [desched/0]
  4 ?        S<     0:00 [events/0]
  5 ?        S<     0:00 [khelper]
 10 ?        S<     0:00 [kthread]
 13 ?        S<     0:00 [kblockd/0]
 35 ?        S      0:00 [pdflush]
 36 ?        S      0:00 [pdflush]
 38 ?        S<     0:00 [aio/0]
 37 ?        S      0:00 [kswapd0]
 718 ?       S      0:00 [mtdblockd]
 807 ?       Ss     0:00 /usr/sbin/inetd
 815 ?       Ss     0:00 /sbin/klogd -c 2
 832 ?       S<     0:00 [keventd]
 861 ?       S<     0:00 [framer_event]
 862 ?       D<     0:00 [framer_stats]
 863 ?       S<     0:08 [framer_led]
 870 ?       D<     0:00 [Pkt Parser]
 989 ?       S<     0:00 [kphy_event]
 990 ?       S<    134:13 [kphy_statistics]
1006 ?       Ss     0:01 /usr/sbin/cron
1066 ?       SN     0:00 [jffs2_gcd_mtd4]
1068 ?       SN     0:00 [jffs2_gcd_mtd5]
1073 ?       Ss     0:08 /sbin/syslogd -f /etc/syslog.conf
1076 ?       S      0:00 tail -f /var/log/console.log
1101 ?       S      0:00 [khubd]
1319 ?       S      0:00 /usr/syrah/bin/remote_loop_respond
1367 ?       S<     0:00 [Clock_card_Even]
1385 ?       S<     0:00 [Combo_Event]
1398 ?       S      0:00 sysmgr
1426 ?       SNl    0:04 snmpd -p /var/net-snmp/snmp.pid
1427 ?       SNl    0:00 eventd
1428 ?       SNl    0:01 cm
1429 ?       SNl    2:02 dpm
1430 ?       SN     0:01 im
1431 ?       SN     0:01 lsc
1432 ?       SN     0:16 dcsms ospf isis rsvp ldp rsm
1433 ?       SN     0:00 frr
1434 ?       SN     0:00 bfdcm
1435 ?       SN     0:00 bfdsm
1436 ?       SNl    0:01 ua
1437 ?       SN     0:14 rmon
1438 ?       Sl     0:01 watch_dog
1716 ?       Ss     0:01 /usr/sbin/sshd
1774 ttyS0    Ss     0:00 -sh
1847 ttyS0    S+     0:08 cli
18020 ttyS0    R+     0:00 sh -c /bin/ps ax > /tmp/tmp_show_file_1847.txt
18021 ttyS0    R+     0:00 /bin/ps ax
```

**show system processes  
detail**

```
cli@BX7000> show system processes detail
PID  UID  PPID CPU PRI  NI  RSS WCHAN  STARTED S  TTY      TIME COMMAND
  1   0   0   - 23  0  396 -      Jan 01 S ?      00:00:30 init
  2   0   1   - 29 -10  0 -      Jan 01 S ?      00:00:00
[ksoftirqd/0]
  3   0   1   - 34 -10  0 -      Jan 01 S ?      00:00:00
[desched/0]
  4   0   1   - 41  -  0 -      Jan 01 S ?      00:00:00
[events/0]
  5   0   1   - 29 -5  0 -      Jan 01 S ?      00:00:00
```

```

[khelper]
 10 0 1 - 29 -5 0 - Jan 01 S ? 00:00:00
[kthread]
 13 0 10 - 19 -5 0 - Jan 01 S ? 00:00:00
[kblockd/0]
 35 0 10 - 19 0 0 - Jan 01 S ? 00:00:00
[pdflush]
 36 0 10 - 24 0 0 - Jan 01 S ? 00:00:00
[pdflush]
 38 0 10 - 19 -5 0 - Jan 01 S ? 00:00:00 [aio/0]
 37 0 1 - 14 0 0 - Jan 01 S ? 00:00:00
[kswapd0]
 718 0 1 - 14 0 0 - Jan 01 S ? 00:00:00
[mtdblockd]
 807 0 1 - 14 0 856 - Jan 01 S ? 00:00:00
/usr/sbin/inetd
 815 0 1 - 24 0 540 - Jan 01 S ? 00:00:00
/sbin/klogd -c 2
 832 0 10 - 29 -5 0 - Jan 01 S ? 00:00:00
[keventd]
 861 0 10 - 28 -5 0 - Jan 01 S ? 00:00:00
[framer_event]
 862 0 10 - 29 -5 0 - Jan 01 D ? 00:00:00
[framer_stats]
 863 0 10 - 29 -5 0 - Jan 01 S ? 00:00:08
[framer_led]
 870 0 10 - 29 -5 0 - Jan 01 D ? 00:00:00 [Pkt
Parser]
 989 0 10 - 29 -5 0 - Jan 01 S ? 00:00:00
[kphy_event]
 990 0 10 - 29 -5 0 - Jan 01 S ? 02:14:31
[kphy_statistics]
1006 0 1 - 24 0 828 - Jan 01 S ? 00:00:01
/usr/sbin/cron
1066 0 1 - 9 10 0 - Jan 01 S ? 00:00:00
[jffs2_gcd_mtd4]
1068 0 1 - 4 10 0 - Jan 01 S ? 00:00:00
[jffs2_gcd_mtd5]
1073 0 1 - 23 0 832 - Jan 01 S ? 00:00:08
/sbin/syslogd -f /etc/syslog.conf
1076 0 1 - 23 0 244 - Jan 01 S ? 00:00:00 tail -f
/var/log/console.log
1101 0 1 - 24 0 0 - Jan 01 S ? 00:00:00 [khubd]
1319 0 1 - 23 0 360 - Jan 01 S ? 00:00:00
/usr/syrah/bin/remote_loop_respond
1367 0 10 - 29 -5 0 - Jan 01 S ? 00:00:00
[Clock_card_Event]
1385 0 10 - 28 -5 0 - Jan 01 S ? 00:00:00
[Combo_Event]
1398 0 1 - 23 0 596 - Jan 01 S ? 00:00:00 sysmgr
1426 0 1 - 13 1 4912 - Jan 01 S ? 00:00:04 snmpd -p
/var/net-snmp/snmp.pid
1427 0 1398 - 13 10 652 - Jan 01 S ? 00:00:00 eventd
1428 0 1398 - 22 1 1040 - Jan 01 S ? 00:00:01 cm
1429 0 1398 - 22 1 23604 - Jan 01 S ? 00:02:02 dpm
1430 0 1398 - 22 1 1332 - Jan 01 S ? 00:00:01 im
1431 0 1398 - 22 1 1012 - Jan 01 S ? 00:00:01 lsc
1432 0 1398 - 22 1 3716 - Jan 01 S ? 00:00:16 dcsm
ospf isis rsvp ldp rsm
1433 0 1398 - 22 1 944 - Jan 01 S ? 00:00:00 frr
1434 0 1398 - 90 - 936 - Jan 01 S ? 00:00:00 bfdcm
1435 0 1398 - 22 1 960 - Jan 01 S ? 00:00:00 bfdsm
1436 0 1398 - 22 1 2924 - Jan 01 S ? 00:00:01 ua

```

```

1437  0 1398  - 23  1 1276 -          Jan 01 S ?          00:00:14 rmon
1438  0 1398  - 23  0  776 -          Jan 01 S ?          00:00:01
watch_dog
1716  0  1    - 19  0 1656 -          Jan 01 S ?          00:00:01
/usr/sbin/sshd
1774  0  1    - 24  0 1620 -          Jan 01 S ttyS0       00:00:00 -sh
1847  0 1774  - 24  0 3984 -          Jan 01 S ttyS0       00:00:08 cli
18068 0 1847  - 21  0 1120 -          00:40:14 S ttyS0       00:00:00 sh -c
/bin/ps ax -Ouid,ppid,cpu,pri,nice,rss,wchan,start > /tmp/tmp_show_file_1847.txt
18069 0 18068 - 19  0  776 -          00:40:14 R ttyS0       00:00:00 /bin/ps
ax -Ouid,ppid,cpu,pri,nice,rss,wchan,start

```

**show system processes extensive**

```

cli@BX7000> show system processes extensive
top - 00:43:36 up 1 day, 43 min,  1 user,  load average: 2.28, 2.25, 2.19
Tasks: 49 total,  1 running, 48 sleeping,  0 stopped,  0 zombie
Cpu(s):  0.3% us,  9.6% sy,  0.1% ni, 88.4% id,  0.0% wa,  1.3% hi,  0.2% si
Mem:   483680k total,  185264k used,  298416k free,  118460k buffers
Swap:   0k total,    0k used,    0k free,  25396k cached

```

| PID   | USER | PR | NI  | VIRT  | RES  | SHR  | S | %CPU | %MEM | TIME+     | COMMAND         |
|-------|------|----|-----|-------|------|------|---|------|------|-----------|-----------------|
| 990   | root | 10 | -5  | 0     | 0    | 0    | S | 8.7  | 0.0  | 134:49.50 | kphy_statistics |
| 18103 | root | 16 | 0   | 4056  | 1040 | 820  | R | 8.7  | 0.2  | 0:00.14   | top             |
| 1429  | root | 17 | 1   | 381m  | 23m  | 3796 | S | 1.7  | 4.9  | 2:02.70   | dpm             |
| 1     | root | 16 | 0   | 2168  | 396  | 340  | S | 0.0  | 0.1  | 0:30.60   | init            |
| 2     | root | 10 | -10 | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | ksoftirqd/0     |
| 3     | root | 5  | -10 | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.77   | desched/0       |
| 4     | root | -2 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | events/0        |
| 5     | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.14   | khelper         |
| 10    | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | kthread         |
| 13    | root | 20 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | kblockd/0       |
| 35    | root | 20 | 0   | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | pdflush         |
| 36    | root | 15 | 0   | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.97   | pdflush         |
| 38    | root | 20 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | aio/0           |
| 37    | root | 25 | 0   | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | kswapd0         |
| 718   | root | 25 | 0   | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | mtdblockd       |
| 807   | root | 25 | 0   | 5192  | 856  | 708  | S | 0.0  | 0.2  | 0:00.02   | inetd           |
| 815   | root | 15 | 0   | 2288  | 540  | 448  | S | 0.0  | 0.1  | 0:00.11   | klogd           |
| 832   | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.01   | keventd         |
| 861   | root | 11 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | framer_event    |
| 862   | root | 10 | -5  | 0     | 0    | 0    | D | 0.0  | 0.0  | 0:00.00   | framer_stats    |
| 863   | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:08.90   | framer_led      |
| 870   | root | 10 | -5  | 0     | 0    | 0    | D | 0.0  | 0.0  | 0:00.00   | Pkt Parser      |
| 989   | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.71   | kphy_event      |
| 1006  | root | 15 | 0   | 3776  | 828  | 680  | S | 0.0  | 0.2  | 0:01.52   | cron            |
| 1066  | root | 30 | 10  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | jffs2_gcd_mtd4  |
| 1068  | root | 35 | 10  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.22   | jffs2_gcd_mtd5  |
| 1073  | root | 16 | 0   | 3856  | 832  | 684  | S | 0.0  | 0.2  | 0:08.45   | syslogd         |
| 1076  | root | 16 | 0   | 2168  | 244  | 196  | S | 0.0  | 0.1  | 0:00.02   | tail            |
| 1101  | root | 15 | 0   | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | khubd           |
| 1319  | root | 16 | 0   | 2356  | 360  | 276  | S | 0.0  | 0.1  | 0:00.02   | remote_loop_res |
| 1367  | root | 10 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.35   | Clock_card_Even |
| 1385  | root | 11 | -5  | 0     | 0    | 0    | S | 0.0  | 0.0  | 0:00.00   | Combo_Event     |
| 1398  | root | 16 | 0   | 2776  | 596  | 500  | S | 0.0  | 0.1  | 0:00.04   | sysmgr          |
| 1426  | root | 26 | 1   | 24816 | 4912 | 2732 | S | 0.0  | 1.0  | 0:04.30   | snmpd           |
| 1427  | root | 26 | 10  | 11576 | 652  | 512  | S | 0.0  | 0.1  | 0:00.15   | eventd          |
| 1428  | root | 17 | 1   | 37224 | 1040 | 732  | S | 0.0  | 0.2  | 0:01.12   | cm              |
| 1430  | root | 17 | 1   | 4980  | 1332 | 1072 | S | 0.0  | 0.3  | 0:01.02   | im              |
| 1431  | root | 17 | 1   | 5376  | 1012 | 736  | S | 0.0  | 0.2  | 0:01.21   | lsc             |
| 1432  | root | 17 | 1   | 13228 | 3716 | 2292 | S | 0.0  | 0.8  | 0:16.95   | dcsms           |

```

1433 root      17   1  4372  944  692 S  0.0  0.2  0:00.05 frr
1434 root     -51   1  4372  936  684 S  0.0  0.2  0:00.04 bfdcm
1435 root      17   1  4612  960  708 S  0.0  0.2  0:00.06 bfdsm
1436 root      17   1 19188 2924 1656 S  0.0  0.6  0:01.34 ua
1437 root      16   1  7512 1276  960 S  0.0  0.3  0:14.09 rmon
1438 root      16   0 11400  776  536 S  0.0  0.2  0:01.51 wdogd
1716 root      20   0  7148 1656 1368 S  0.0  0.3  0:01.04 sshd
1774 root      15   0  4700 1620 1324 S  0.0  0.3  0:00.16 sh
1847 root      15   0 20044 3984 2564 S  0.0  0.8  0:08.19 cli
18102 root     18   0  3384 1120  936 S  0.0  0.2  0:00.03 sh

```

## show system storage

---

**Syntax** show system storage

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the local storage data in the system.

**Additional Information** See the *BX7000 Multi-Access Gateway Hardware Guide*.

```

show system storage cli@BX7000> show system storage
Filesystem      1K-blocks      Used Available Use% Mounted on
/dev/hda2        37848096  33206308  2719212  93% /
/dev/hda1         101089      9321     86549  10% /boot
none             123592         0     123592   0% /dev/shm

```

## show system uptime

---

**Syntax** show system uptime

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the current date and time of the system.

**Additional Information** See the *BXOS Configuration Guide*.

```

show system uptime cli@BX7000> show system uptime
Current time: Fri Jul 11 10:44:33 IST 2008
10:44:33 up 34 days, 19:31, 19 users, load average: 0.00, 0.00, 0.00

```

## show system users

---

**Syntax** show system users

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the currently logged in users.

```

show system users cli@BX7000> show system users
10:27:35 up 34 days, 19:14, 19 users, load average: 0.00, 0.00, 0.00
USER      TTY      LOGIN@  IDLE   JCPU   PCPU   WHAT
root      tty1     6Jun08  8days 0.00s  0.00s  -bash

```

```

abc pts/0 21Jun08 17days 0.38s 0.38s -bash
abc pts/1 21Jun08 15:33m 0.26s 3.87s /usr/sbin/sshd
abc pts/2 21Jun08 15:33m 0.19s 3.54s /usr/sbin/sshd
abc pts/3 21Jun08 15:33m 0.10s 3.38s /usr/sbin/sshd
abc pts/4 21Jun08 15:47m 0.34s 3.68s /usr/sbin/sshd
abc pts/5 21Jun08 15:47m 0.61s 3.67s /usr/sbin/sshd
abc pts/6 21Jun08 15:33m 0.93s 0.93s -bash
abc pts/7 21Jun08 7days 0.77s 0.02s ./cli
abc pts/8 26Jun08 15:48m 4.24s 4.24s -bash
abc1 pts/9 10:14am 13:15 0.04s 0.04s -bash
abc pts/14 26Jun08 15:48m 4.54s 4.54s -bash
smith pts/16 10:25am 1.00s 0.06s 0.01s ./xyzcli
John pts/13 Mon10am 3days 0.05s 0.05s -bash
John pts/15 Mon10am 2days 0.11s 0.11s -bash
John pts/18 4Jul08 40:26m 0.21s 0.21s -bash
John pts/12 Mon10am 18:38m 0.96s 0.96s -bash
John pts/11 Mon10am 24:01m 0.09s 0.26s /usr/X11R6/bin/xterm -ls -displ
Ann pts/22 4Jul08 16:38m 0.19s 0.02s /usr/sbin/sshd
    
```

## show system virtual-memory

---

**Syntax** show system virtual-memory

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the detail of virtual memory partitions available on the system.

**Output Fields** Contain the details about memory buffer, memory free, memory used for swapping, and cache memory.

```

show system cli@BX7000> show system virtual-memory
virtual-memory
procs -----memory----- ---swap-- -----io----- --system-- ----cpu----
 r b swpd free buff cache si so bi bo in cs us sy id wa
 2 0 0 35584 118460 39576 0 0 3 7 2005 221 4 96 0 0
    
```

## show tacplus-server

---

**Syntax** show tacplus-server

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the details about TACACS+ server configuration parameters.

**Additional Information** See the *BXOS Configuration Guide*.

**Output Fields** Contain the TACACS+ server address, port number, secret password, and the authentication timeout.

```

show tacplus-server cli@BX7000> show tacplus-server
Tacplus Server Configuration Details
    Tacplus server Address                :192.168.1.1
    Tacplus Server Port number            :1813
    Tacplus Server Secret Password        :test
    Tacplus Server Authentication timeout :100
    
```

## show version

---

|                               |   |
|-------------------------------|---|
| <b>Syntax</b>                 | show version  |
| <b>Release Information</b>    | Command introduced in BXOS Release 3.0.   |
| <b>Description</b>            | Display the information about the kernel and the gateway software version.  |
| <b>Additional Information</b> | See the <i>BXOS Configuration Guide</i> .   |
| <b>Output Fields</b>          | Contain the kernel information and the software current version.  |
| <b>show version</b>           | <pre>cli@BX7000&gt; show version Software image name : bxos-install-4.0B1.3 Software build no : 1.3 Packet forwarding engine : 3.2 Routing engine : 2007 Build date : 2009-07-09 10:58:37 UTC Last SUN commit id : 15291 Kernel : 2.6.10_BX7000_R0_03 Bootloader version : bxboot-install-3.0I5.0</pre> |

## show zerotouch

---

|                               |   |
|-------------------------------|---|
| <b>Syntax</b>                 | show zerotouch  |
| <b>Release Information</b>    | Command introduced in BXOS Release 3.0.                           |
| <b>Description</b>            | Display the zero touch mode details.                              |
| <b>Additional Information</b> | See the <i>BXOS Configuration Guide</i> .                         |
| <b>show zerotouch</b>         | <pre>cli@BX7000&gt; show zerotouch Zerotouch mode: disabled</pre> |



## Chapter 7

# Summary of CLI Environmental Mode Commands

This chapter presents the environmental mode commands available in the BX operating system (BXOS) software. Use the environmental commands to control the BXOS command-line interface (CLI) environment. You can set and display the CLI prompt and banner by using the environmental command. Commands are listed in alphabetical order.

Table 25 on page 125 summarizes the CLI environmental mode commands.

**Table 25: BXOS Environmental Mode Commands**

| Task                                     | Command                           |
|--|-----------------------------------|
| Set the CLI banner.                      | set cli banner on page 125        |
| Set the CLI hostname.                    | set cli hostname on page 126      |
| Set the CLI prompt.                      | set cli prompt on page 126        |
| Set the CLI screen length.               | set cli screen-length on page 126 |
| Set the CLI screen width.                | set cli screen-width on page 127  |
| Display the current settings of the CLI. | show cli on page 127              |

### set cli banner

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | set cli banner <i>string</i>   |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.  |
| <b>Description</b>              | Set the CLI banner, which is displayed on the top of the CLI when it starts.                     |
| <b>Options</b>                  | <i>string</i> —CLI banner string which includes the text that you want to display in the banner. |
| <b>Additional Information</b>   | See “CLI Command Categories” on page 23.   |
| <b>Required Privilege Level</b> | view   |



**Options** *value*—screen length.  
**Range:** 0 through 65,534  
**Default:** None

**Additional Information** See “CLI Command Categories” on page 23.

**Required Privilege Level** View

**set cli prompt** cli@BX7000> set cli screen-length 24  
 Info: Screen length set to 24

## set cli screen-width

---

**Syntax** set cli screen-width *value*

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Set number of characters on a line.

**Options** *value*—screen width.  
**Range:** 0 through 65,534  
**Default:** None.

**Additional Information** See “CLI Command Categories” on page 23.

**Required Privilege Level** view

**set cli prompt** cli@BX7000> set cli screen-width 80  
 Info: Screen width set to 80

## show cli

---

**Syntax** show cli

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the current settings of the CLI environment variables. The environment variables include the banner that appears at the top of the command-line prompt and the user login details.

**Additional Information** See the *BXOS Configuration Guide*.

**show cli** cli@BX7000> show cli

```

CLI Banner           : BX7000 CLI Environment
CLI Prompt string    : user
Screen length        : 24
Screen width         : 80
Current Time Stamp   : Wed May 14 14:06:37 IST 2008
Working directory    : /home/abc/Work/Dec21/xyzroot
  
```



## Chapter 8

# Summary of CLI Operational Mode Commands

This chapter presents the operational mode commands available in the BX operating system (BXOS) software. Use the BXOS command-line interface (CLI) operational mode commands to control the CLI environment and monitor and troubleshoot the interfaces, protocols, and system properties. Commands are listed in alphabetical order.

Table 26 on page 129 summarizes the CLI operational mode commands.

**Table 26: BXOS Operational Mode Commands**

| <b>Task</b>   | <b>Command</b>                    |
|---|-----------------------------------|
| Clear statistics information.                       | clear on page 130                 |
| Enter the configuratin mode.                        | configure on page 130             |
| Quit the CLI.                                       | exit on page 130                  |
| Perform file operations.                            | file on page 131                  |
| Obtain help on commands.                            | help on page 131                  |
| Display the CLI history.                            | history on page 131               |
| Monitor the system processes.                       | monitor on page 132               |
| Determine reachability of a network host.           | ping on page 132                  |
| Determine reachability of a network host over MPLS. | ping-mpls on page 133             |
| Restart the gateway.                                | request system reboot on page 133 |
| Set the CLI environment.                            | set on page 134                   |
| Display the software aspects.                       | show on page 134                  |
| Configure SSH services.                             | ssh on page 136                   |
| Trace the route for a remote address.               | traceroute on page 137            |

## clear

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | clear (counters   history   log   oam-ethernet   ptp-slave-statistics)  |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Clear statistics, interface, and protocol data information for the gateway.   |
| <b>Options</b>                  | counters—Clear the counter entries, including interface, IPv4, pseudowire, and tunnel statistics.<br><br>history—Clear the CLI command history.<br><br>log—Clear the system log information.<br><br>oam-ethernet—Clear OAM-ethernet protocol information.<br><br>ptp-slave-statistics—Clear Precision Time Protocol slave statistics. |
| <b>Additional Information</b>   | See “CLI Command Categories” on page 23.  |
| <b>Required Privilege Level</b> | shell and maintenance   |

## configure

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | configure   |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.                                   |
| <b>Description</b>              | Enter the configuration mode.   |
| <b>Additional Information</b>   | See Switching Between Operational Mode and Configuration Mode on page 12. |
| <b>Required Privilege Level</b> | configuration mode  |

## exit

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | exit                                     |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.  |
| <b>Description</b>              | Quit the CLI session.                    |
| <b>Additional Information</b>   | See “CLI Command Categories” on page 23. |
| <b>Required Privilege Level</b> | shell and maintenance                    |

## file

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | file (copy   delete   list   rename   show)   |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Copy configuration files from one location to another either on the same gateway or on the remote host. Rename and delete the configuration files residing on the gateway. Generate a list of all available configuration files, and display a particular configuration file by providing the filename. |
| <b>Options</b>                  | copy—Copy configuration files.<br>delete—Delete the configuration files.<br>list—Generate a list of all available files.<br>rename—Rename a file.<br>show—Display a particular configuration file.  |
| <b>Additional Information</b>   | See “Performing CLI File Operations” on page 39.  |
| <b>Required Privilege Level</b> | maintenance   |

## help

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | help  |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.                                     |
| <b>Description</b>              | Generate a list of all operational mode commands and their functions.       |
| <b>Additional Information</b>   | See “Using CLI Help” on page 17 and “Getting Help for Commands” on page 14. |
| <b>Required Privilege Level</b> | none  |

## history

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | history  |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.          |
| <b>Description</b>              | Display a list of last 125 commands executed.    |
| <b>Additional Information</b>   | See “Displaying the Command History” on page 18. |
| <b>Required Privilege Level</b> | view   |

## monitor

---

- Syntax** monitor (start | stop) *file-name*
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Monitor the system files.
- Options** start—Start the monitoring process.  
 stop—Stop monitoring process.  
*file-name*—Name of the system file to be monitored.
- Additional Information** See “CLI Command Categories” on page 23.

## ping

---

- Syntax** ping  
 <c | i | -t | -l>  
*ip-address*
- Release Information** Command introduced in BXOS Release 3.0.
- Description** Determine the reachability of a remote network host.
- Options** *ip-address*—IP address of a remote machine for which you want to check the reachability network path.  
 -c—(Optional) Count the number of times the system pings.  
 -i—(Optional) Time interval for sending the ping messages.  
 -t—(Optional) Time to live (TTL) which describes how long the packet is active.  
 -l—(Optional) Interface or address.
- Additional Information** See “CLI Command Categories” on page 23.
- Required Privilege Level** view and maintenance

## ping-mpls

---

**Syntax** ping-mpls rsvp *tunnel-name*  
 <count *count*>  
 <detail>  
 <send-interval *interval*>  
 <source-address *ip-address*>  
 <destination-address *ip-address*>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Determine the reachability of a remote network host over MPLS and ping the remote target over MPLS.

**Options** *tunnel-name*—Name of the tunnel configured over RSVP.  
*count*— (Optional) Display the counter value.  
*detail*—(Optional) Display the detailed connectivity information.  
*interval*—(Optional) Time taken, in milliseconds, to send the data between two nodes.  
*ip-address*—(Optional) Source or destination IP address of a remote machine for which you want to check the network path over MPLS.

**Additional Information** See the *BXOS Configuration Guide*.

**Required Privilege Level** network connection

## request system reboot

---

**Syntax** request system reboot

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Restart the gateway and clear all committed and uncommitted commands.

**Options** reboot—Request for the rebooting of system.

**Additional Information** See “Commonly Used Operational Mode Commands” on page 24.

**Required Privilege Level** restart

**set**


---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | set   |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.                       |
| <b>Description</b>              | Set the CLI prompt, banner, and hostname.                     |
| <b>Additional Information</b>   | See “Summary of CLI Environmental Mode Commands” on page 125. |
| <b>Required Privilege Level</b> | configuration   |

**show**


---

|                            |   |
|----------------------------|---|
| <b>Syntax</b>              | show (arp   atm-cross-connect   atm-traffic-profiles   ba-classifiers   bfd-global   bfd-session   bypass   chassis   cli   clock-card   configuration   date   exception   input-clocks-status   interface   ip   isis   l2circuit   ldp   log   mac-filter   manual-mode   memory   mf-classifiers   mpls   ntp   oam-ethernet   ospf   policy   ports   protocols   ptp   qos-profiles   qos-scheduler   qos-shaper   qos-statistics   radius-server   route   rsvp   snmp   source-filter   statistics   syslog   system   tacplus-server   version   zerotouch)  |
| <b>Release Information</b> | Command introduced in BXOS Release 3.0.   |
| <b>Description</b>         | Display the information about all software aspects and protocols.   |
| <b>Options</b>             | <p>arp—Display the details for the Address Resolution Protocol (ARP).</p> <p>atm-cross-connect—Display the details for ATM cross-connect commands.</p> <p>atm-traffic-profiles—Display information about the configured ATM traffic profiles.</p> <p>ba-classifiers—Display the behavioral aggregate classifier information.</p> <p>bfd-global—Display the Bidirectional Forwarding Detection (BFD) global information.</p> <p>bfd-session—Display the BFD session details.</p> <p>bypass—Display the bypass tunnel information.</p> <p>chassis—Display the chassis information.</p> <p>cli—Display information about the current CLI environment in which you are working.</p> <p>clock-card—Display clock card information</p> <p>configuration—Display the current configuration.</p> <p>date—Display the current date and time of the system.</p> <p>exception—Display the exception details.</p> <p>input-clocks-status—Display input clock information.</p> |

interface—Display the interface details.

ip—Display the IP details for the gateway.

isis—Display the IS-IS parameters.

l2circuit—Display the status information about Layer 2 virtual circuits (VCs).

ldp—Display the Label Distribution Protocol (LDP) parameters.

log—Display the system log information.

mac-filter—Display the details for Media Access Control (MAC) filters.

manual-mode—Display the manual mode.

memory—Display the memory counters that the gateway uses.

mf-classifiers—Display multifield classifier information.

mpls—Display the MPLS details.

ntp—Display the Network Time Protocol (NTP) details.

oam-ethernet—Display OAM information for Ethernet interfaces.

ospf—Display the details for the OSPF protocol.

policy—Display information about the configured routing policies.

ports—Display ports.

protocols—Display the configured protocols.

ptp—Display PTP information.

qos-profile—Display quality-of-service (QoS) profile information.

qos-scheduler—Display QoS scheduler information.

qos-shaper—Display QoS shaper information.

qos-statistics—Display the QoS statistics information.

radius-server—Display the details for RADIUS server configuration parameters.

route—Display the gateway details.

rsvp—Display the RSVP parameters.

snmp—Display SNMP information.

source-filter—Display MAC filters

statistics—Display the protocol statistics.

syslog—Display details on the system log file, user terminals, and archive files

system—Display the counter that the system uses.

tacplus-server—Display the details for TACACS+ server configuration parameters.

version—Display the current CLI version.

zerotouch—Display the zerotouch mode.

**Additional Information** See “Commonly Used Operational Mode Commands” on page 24 and “Summary of Show Commands” on page 43.

**Required Privilege Level** Depends on the specific command.

## ssh

---

**Syntax** ssh

`<-b addr | -D port | -e char | -L listen-port:host:port | -l user | -p port>`

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Display the secure shell settings. SSH client is a program for logging in to a remote machine and for executing commands on a remote machine.

**Options** -b *addr*—(Optional) Specifies a local IP address.

-D *port*—(Optional) Enables dynamic application-level port forwarding.

-e *char*—(Optional) Sets the escape character; “none” = disable. The default is ~ .

-L *listen-port:host:port*—(Optional) Forwards the local port to a remote address.

-l *user*—(Optional) Logs in using the username.

-p *port*—(Optional) Connects to the specified port. The server is on the same port.

**Additional Information** See “Commonly Used Operational Mode Commands” on page 24.

**Required Privilege Level** configuration

## traceroute

---

**Syntax** traceroute *ip-address*

<g | -p | -s | -t | -w>

**Release Information** Command introduced in BXOS Release 3.0.

**Description** Trace a route to a remote network host.

**Options** -g—(Optional) Trace the route for a gateway.  
-p—(Optional) Trace the route for a port.  
-s—(Optional) Source address from which the connection is established.  
-t—(Optional) Type of service (ToS).  
-w—(Optional) Wait time in establishing the connection.  
*ip-address*—IP address of the remote host.

**Additional Information** See “CLI Command Categories” on page 23.

**Required Privilege Level** network connection



## Chapter 9

# Summary of CLI Configuration Mode Statements

This chapter presents the configuration mode statements available in the BX operating system (BXOS) software. Use the configuration statements to configure the gateway. You can create hierarchy of configuration statements to configure interfaces, ports, protocols, tunnels, pseudowires, and hardware properties. Statements are listed in alphabetical order.

Table 27 on page 139 summarizes the command-line interface (CLI) configuration mode statements.

**Table 27: BXOS Configuration Mode Statements**

| Task                                      | Command                             |
|---|-------------------------------------|
| Execute and implement the configuration.  | commit on page 140                  |
| Debug the internetworking problems.       | debug on page 140                   |
| Delete gateway configuration parameters.  | delete on page 140                  |
| Enter various hierarchies.                | edit on page 141                    |
| Quit configuration mode.                  | exit on page 141                    |
| Load the configuration to a file.         | load on page 142                    |
| Lock the configuration mode.              | lock on page 142                    |
| Lock the configuration mode.              | lock on page 142                    |
| Request system snapshot of primary image. | request system snapshot on page 142 |
| Save the configuration to a file.         | save on page 143                    |
| Set the system settings.                  | set on page 143                     |
| Move to the uppermost level in hierarchy. | top on page 143                     |
| Unlock the configuration mode.            | unlock on page 143                  |
| Move one level up in the hierarchy.       | up on page 144                      |

## commit

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | commit  |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Execute the commands and implement the configuration. Use this command to configure the settings for interfaces, protocols, and other system-related functions. |
| <b>Additional Information</b>   | See “Committing a Configuration” on page 37.  |
| <b>Required Privilege Level</b> | configuration   |

## debug

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | debug (atm-ima <i>interface-name</i>   ips-trace (enable   disable) (filter-in   filter-out) ( nbase   cust   stubs   sm   ahl   lmgr   rsvp   ldp   mpls   temb   cipr   ospf   isis   rsm   pim)   pd-trace (none   audit   problem   exception)) |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Diagnose and resolve internetworking problems. This command provides real-time debugging of software components for troubleshooting a specific problem.   |
| <b>Options</b>                  | atm-ima—Display Inverse Multiplexing over ATM (IMA) debug messages.<br><br>ips-trace—Debug the ips-trace parameters.<br><br>pd-trace—Debug on the basis of pd-trace parameter. The parameter can be none, audit, problem, and exceptions.           |
| <b>Required Privilege Level</b> | maintenance   |

## delete

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | delete (interface   protocols   rmon)   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Delete the gateway configuration parameters.  |
| <b>Options</b>                  | interface—Delete the configured interface.<br><br>protocols—Delete the specified protocol.<br><br>rmon—Delete the rmon configuration. |
| <b>Additional Information</b>   | See “Deleting a Configuration” on page 38.  |
| <b>Required Privilege Level</b> | shell and maintenance   |

**edit**


---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | edit (atm-profile   chassis   connection   interface   policy-options   protocols   rmon   static-route   syslog   system)   |
| <b>Release Information</b>      | Command introduced in BXOS Release 3.0.  |
| <b>Description</b>              | Move to a particular hierarchy level. If the hierarchy level does not exist, the edit command creates it and then moves to it.   |
| <b>Options</b>                  | <p>atm-profile—Configure the ATM interface profile.</p> <p>chassis—Configure the chassis properties.</p> <p>connection—Configure the cross-connection between two links.</p> <p>interface—Configure the BX7000 Multi-Access Gateway interface, which includes T1 or E1, Gigabit, GRE interface, ML-PPP interface, and IMA interface.</p> <p>policy-options—Configure the routing policy options for the gateway.</p> <p>protocols—Configure the protocols, which includes BFD, IS-IS, LDP, MPLS, OSPF, PPP, RSVP, SNMP, and SNMPv3.</p> <p>rmon—Configure the Remote Monitoring (RMON) details, which enables the network monitor and console systems to exchange network monitoring data.</p> <p>static-route—Configure the static route details.</p> <p>syslog—Configure the system log details.</p> <p>system—Configure the system details.</p> |
| <b>Additional Information</b>   | See “CLI Command Categories” on page 23, “Editing a Configuration” on page 38, and “Configuration Statements and Identifiers” on page 31   |
| <b>Required Privilege Level</b> | configuration  |

**exit**


---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | exit                                      |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0. |
| <b>Description</b>              | Quit the configuration mode.              |
| <b>Additional Information</b>   | See “CLI Command Categories” on page 23.  |
| <b>Required Privilege Level</b> | shell and maintenance                     |

## load

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | load <i>file-name</i>  |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.  |
| <b>Description</b>              | Load the recently executed commands and configurations to a configuration file.  |
| <b>Options</b>                  | <i>file-name</i> —Name of the source file from where all the currently executed commands, statements, and configurations are loaded. |
| <b>Additional Information</b>   | See “Saving and Loading a Configuration File” on page 37.  |
| <b>Required Privilege Level</b> | configuration  |

## lock

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | lock  |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Lock the configuration mode from committing any configuration commands, statements, and settings. |
| <b>Additional Information</b>   | See “CLI Configuration Mode Commands” on page 29.   |
| <b>Required Privilege Level</b> | shell and maintenance   |

## request system snapshot

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | request system snapshot                   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0. |
| <b>Description</b>              | Display the snapshot of primary image.    |
| <b>Required Privilege Level</b> | maintenance                               |

## restart ima-group

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | restart ima-group <i>interface-name</i>                   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.                 |
| <b>Description</b>              | Restart the IMA interface.                                |
| <b>Options</b>                  | <i>interface-name</i> —Name of an IMA interface.          |
| <b>Additional Information</b>   | See “Commonly Used Operational Mode Commands” on page 24. |
| <b>Required Privilege Level</b> | maintenance   |

**save**

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | save (commands   configuration)   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Save the currently executed configuration commands and statements to a configuration file, and save the running.xml to startup.cfg. This persists from the configuration across reboot. |
| <b>Options</b>                  | <p>commands—Save the configuration commands to a file.</p> <p>configuration—Save the current configuration as startup configuration.</p>  |
| <b>Additional Information</b>   | See “Saving and Loading a Configuration File” on page 37.   |
| <b>Required Privilege Level</b> | configuration   |

**set**

---

|                                 |  |
|---------------------------------|--|
| <b>Syntax</b>                   | set (cli   date)   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.  |
| <b>Description</b>              | Configure the settings for the interfaces, protocols, and other system properties.                                     |
| <b>Options</b>                  | <p>cli—Set the CLI settings, including the CLI prompt and banner.</p> <p>date—Set the current date for the system.</p> |
| <b>Required Privilege Level</b> | configuration  |

**top**

---

|                                 |   |
|---------------------------------|---|
| <b>Syntax</b>                   | top   |
| <b>Release Information</b>      | Statement introduced in BXOS Release 3.0.   |
| <b>Description</b>              | Move to the uppermost level in the hierarchy. Also used to exit from the series of hierarchical statements. |
| <b>Additional Information</b>   | See “Moving Among Hierarchy Levels” on page 13.   |
| <b>Required Privilege Level</b> | view  |

**unlock**

---

|                            |   |
|----------------------------|---|
| <b>Syntax</b>              | unlock                                    |
| <b>Release Information</b> | Statement introduced in BXOS Release 3.0. |
| <b>Description</b>         | Remove the lock from configuration mode.  |

**Additional Information** See “CLI Configuration Mode Commands” on page 29.

**Required Privilege Level** shell and maintenance

## **up**

---

**Syntax** up

**Release Information** Statement introduced in BXOS Release 3.0.

**Description** Move one level up in the hierarchy.

**Additional Information** See “Moving Among Hierarchy Levels” on page 13.

**Required Privilege Level** view

## Part 4

# Index

- Index of Commands and Statements on page 147
- Index on page 149



# Index of Commands and Statements

|   |          |
|---|----------|
| <b>C</b>  |          |
| clear command                                     |          |
| configuration mode .....                          | 140      |
| operational mode.....                             | 130      |
| clear counters command.....                       | 140      |
| commit command.....                               | 140      |
| configure command                                 |          |
| operational mode.....                             | 140, 141 |
| <b>D</b>  |          |
| debug command.....                                | 140, 141 |
| delete command.....                               | 140      |
| <b>E</b>  |          |
| edit command.....                                 | 140, 141 |
| exit command                                      |          |
| configuration mode .....                          | 141      |
| operational mode.....                             | 130      |
| <b>F</b>  |          |
| file command                                      |          |
| operational mode.....                             | 131      |
| <b>H</b>  |          |
| help command.....                                 | 131      |
| history command .....                             | 131      |
| <b>L</b>  |          |
| load command.....                                 | 142      |
| lock command .....                                | 142      |
| <b>M</b>  |          |
| monitor command .....                             | 132      |
| <b>P</b>  |          |
| ping command.....                                 | 132      |
| ping-mpls command.....                            | 133      |
| <b>R</b>  |          |
| request system reboot .....                       | 133      |
| <b>S</b>  |          |
| save command .....                                | 143      |
| set cli banner command.....                       | 125      |
| set cli hostname command.....                     | 126      |
| set command .....                                 | 143      |
| show arp .....                                    | 46       |
| show atm-cross-connect command .....              | 46       |
| show atm-traffic-profiles command.....            | 47       |
| show ba-classifiers command.....                  | 47, 93   |
| show bfd-global command.....                      | 47       |
| show bfd-session ip-addr command.....             | 48       |
| show bfd-session tunnel-egress command.....       | 48       |
| show bfd-session tunnel-ingress command .....     | 48, 49   |
| show bypass tunnel command .....                  | 49       |
| show chassis alarms command .....                 | 50       |
| show chassis eeprom command .....                 | 50       |
| show chassis environment command .....            | 51       |
| show chassis flash command.....                   | 51       |
| show chassis hardware command .....               | 52       |
| show chassis power command.....                   | 53       |
| show chassis temperature command .....            | 54       |
| show cli command .....                            | 54, 127  |
| show clock-card input-clock-validity command..... | 55       |
| show clock-card pll command .....                 | 55       |
| show clock-card ptp-master-status command .....   | 56       |
| show clock-card ptp-slave-statistics command..... | 56       |
| show clock-card ptp-status command .....          | 57       |
| show clock-card status command .....              | 55       |
| show command                                      |          |
| operational mode.....                             | 134      |
| show configuration command .....                  | 58, 61   |
| show date command.....                            | 61       |
| show exception command .....                      | 62       |
| show input-clocks-status command .....            | 62       |
| show interface command.....                       | 62       |
| show ip tcp statistics command .....              | 77       |
| show ip traffic command.....                      | 78       |
| show ip udp statistics command .....              | 79       |
| show isis adjacency command .....                 | 80       |
| show isis database command .....                  | 80       |
| show isis hostname command .....                  | 81       |
| show isis interface command .....                 | 81       |
| show l2circuit command .....                      | 82       |
| show ldp interface command .....                  | 85       |
| show ldp neighbor command .....                   | 85       |
| show ldp overview command.....                    | 86       |
| show log command .....                            | 86       |
| show manual-mode command.....                     | 87       |

|  |          |
|--|----------|
| show memory detail command .....   | 88       |
| show mf-classifiers command .....  | 89       |
| show mpls tunnel association command .....   | 90       |
| show mpls tunnel command .....   | 89       |
| show ntp associations command .....  | 90       |
| show ntp status command .....  | 91       |
| show oam ethernet connectivity-fault-management<br>mep-database maintenance-domain command ..... | 91       |
| show oam- ethernet link-fault-management command<br>93   |          |
| show oam-ethernet connectivity-fault-management<br>interfaces command .....                      | 91       |
| show oam-ethernet connectivity-fault-management<br>path-database command .....                   | 92       |
| show ospf database command .....   | 96       |
| show ospf interface command .....  | 97       |
| show ospf neighbor command .....   | 98       |
| show policy command .....  | 99       |
| show ports commands .....  | 99       |
| show protocols command .....   | 100      |
| show qos-profiles command .....  | 105      |
| show qos-statistics command .....  | 107      |
| show radius-server command .....   | 107      |
| show route command .....   | 107      |
| show rsvp interface command .....  | 108      |
| show rsvp session command .....  | 108      |
| show snmpv3 command .....  | 109      |
| show statistics gre-tunnel command .....   | 111, 112 |
| show statistics ipv4 command .....   | 112      |
| show statistics pseudo-wire command .....  | 113      |
| show statistics rsvp-tunnel command .....  | 115, 116 |
| show system processes command .....  | 122      |
| show system storage command .....  | 122      |
| show system uptime command .....   | 122      |
| show system users command .....  | 122      |
| show system virtual-memory command .....   | 122      |
| show tacplus-server command .....  | 123      |
| show version command .....   | 124      |
| show zerotouch command .....   | 124      |
| ssh command  |          |
| configuration mode .....   | 143      |
| operational mode .....   | 136      |
| statement hierarchy .....  | 31       |
| <br>   |          |
| <b>T</b>   |          |
| top command .....  | 143      |
| <br>   |          |
| <b>U</b>   |          |
| unlock command .....   | 143      |
| up command .....   | 144      |

# Index

## Symbols

|   |                                  |        |
|---|----------------------------------|--------|
| # | to show configuration mode ..... | 9      |
| 0 | for syntax descriptions.....     | 57, 62 |
| / | in interface names.....          | 26     |
| > | to show operational mode.....    | 8      |
| ? | for help.....                    | 3      |
|   | (pipe) command options.....      | 134    |

## A

|                         |    |
|-------------------------|----|
| additional output ..... | 16 |
| keyboard sequences..... | 16 |

## C

|   |    |
|---|----|
| CLI                                     |    |
| command completion.....                 | 15 |
| command Hierarchy .....                 | 5  |
| configuration statement hierarchy ..... | 5  |
| elements .....                          | 9  |
| file operations .....                   | 39 |
| keyboard sequences.....                 | 15 |
| messages .....                          | 10 |
| CLI help.....                           | 17 |
| CLI messages .....                      | 10 |
| command completion.....                 | 4  |
| command mode                            |    |
| configuration mode .....                | 4  |
| operational mode.....                   | 4  |
| command names.....                      | 3  |
| command scope .....                     | 26 |
| commands                                |    |
| configuration mode .....                | 11 |
| configuration statements .....          | 11 |
| environmental mode.....                 | 11 |
| help.....                               | 14 |
| operational mode.....                   | 11 |
| options .....                           | 11 |
| commit .....                            | 4  |
| configuration file                      |    |
| copy.....                               | 39 |

|                                  |     |
|----------------------------------|-----|
| delete.....                      | 39  |
| list .....                       | 40  |
| load.....                        | 37  |
| rename.....                      | 39  |
| save.....                        | 37  |
| configuration input types.....   | 40  |
| configuration mode               |     |
| command prompt.....              | 9   |
| entry .....                      | 24  |
| exit.....                        | 24  |
| top-level statements .....       | 31  |
| configuration mode commands..... | 29  |
| commit.....                      | 140 |
| debug.....                       | 140 |
| delete.....                      | 140 |
| edit.....                        | 141 |
| exit.....                        | 141 |
| load .....                       | 142 |
| lock .....                       | 142 |
| restart ima-group .....          | 142 |
| save.....                        | 143 |
| set .....                        | 143 |
| top.....                         | 143 |
| unlock.....                      | 143 |
| up .....                         | 144 |
| Configuration Statements.....    | 12  |
| configuration statements.....    | 31  |
| controlling CLI.....             | 23  |
| copying files .....              | 24  |
| copying into text file .....     | 17  |

## D

|                                |     |
|--------------------------------|-----|
| delete a property .....        | 34  |
| deleting a configuration ..... | 38  |
| deleting configuration .....   | 34  |
| display command options .....  | 136 |
| displaying configuration ..... | 33  |

## E

|                               |    |
|-------------------------------|----|
| editing a configuration ..... | 38 |
|-------------------------------|----|

## F

|             |    |
|-------------|----|
| files ..... | 27 |
|-------------|----|

**H**

- hierarchy level banner ..... 9
- hierarchy levels..... 13

**I**

- identifier ..... 12
- interface naming ..... 26
  - logical part..... 27
  - physical part..... 26
- Invalid command ..... 10

**L**

- listing of commands ..... 3
- logging in to gateway ..... 8

**M**

- modifying configuration ..... 33
- moving up ..... 35

**O**

- online help ..... 13
- operational Mode
  - commands..... 24
- operational mode
  - command options ..... 25
- operational mode commands
  - clear..... 130
  - configure..... 130
  - exit ..... 130
  - file..... 131
  - help..... 131
  - history ..... 131
  - monitor ..... 132
  - ping ..... 132
  - ping-mpls..... 133
  - request system reboot ..... 133
  - show ..... 134
  - ssh ..... 136
  - traceroute ..... 137

**R**

- remote connectivity ..... 24
- restarting CLI ..... 24

**S**

- show qos-scheduler..... 106
- specifying a filename ..... 28
- status check ..... 18