

Understanding APE Rulebase Notification Options

Notification options determine whether the IDP appliance generates logs and alerts when a session matches a rule. When enabled, the IDP appliance generates a log that the client-to-server or server-to-client rate limit was reached. Logging is enabled by default. Table 1 describes the notification options.

Table 1: APE Rulebase Notification Options

Option	Description
Event logs and alerts	<p>You can enable the following delivery and handling options for logs:</p> <ul style="list-style-type: none">■ Send to NSM log viewer.■ Send to NSM log viewer and flag as an alert.■ Send to an e-mail address list.■ Send to syslog.■ Send to SNMP trap.■ Save in XML format.■ Save in CVS format.■ Process with a script. <p>You also have the option to disable logging.</p>

Related Topics The following related topic is included in the *IDP Concepts and Examples Guide*:

- Understanding the APE Rulebase

The following related topic is included in the *IDP Administration Guide*:

- Configuring the APE Rulebase (NSM Procedure)

Published: 2010-01-12