

## interface-range

---

**Syntax** interface-range *interface-range name* {  
    ether-options {  
        802.3ad *aex* ;  
        auto-negotiation;  
        flow-control;  
        link-mode *mode*;  
        speed ( *speed* | auto-negotiation) ;  
    }  
    hold-time up *milliseconds* down *milliseconds*;  
    member *interface-name*;  
    member-range *starting-interface name* to *ending-interface name*;  
    mtu *bytes*;  
}

**Hierarchy Level** [edit interfaces]

**Release Information** Statement introduced in JUNOS Release 10.0 for EX Series switches.

**Description** Group interfaces that share a common configuration profile.



**NOTE:** The interface range definition is supported only for Gigabit, 10-Gigabit, and Fast Ethernet interfaces.

---

**Options** *interface-range-name*—Name of the interface range.

---



**NOTE:** You can use regular expressions and wildcards to specify the interfaces in the member-range configuration. Do not use wildcards for interface types.

---

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring Gigabit Ethernet Interfaces (CLI Procedure)
  - Understanding Interface Ranges on EX Series Switches
  - EX Series Switches Interfaces Overview
  - *JUNOS Software Network Interfaces Configuration Guide* at <http://www.juniper.net/techpubs/software/junos/junos100/index.html>