

show system uptime

Syntax show system uptime (all-members | member *member-id*)

Release Information Options introduced in JUNOS Release 9.0 for EX-series switches.

Description Display the current time and information about how long the Virtual Chassis, Virtual Chassis software, and routing protocols have been running.

Options all-members—Display the current time and information about how long the Virtual Chassis, Virtual Chassis software, and routing protocols have been running for all the member switches of the Virtual Chassis configuration.

member *member-id*—Display the current time and information about how long the Virtual Chassis, Virtual Chassis software, and routing protocols have been running for the specific member of the Virtual Chassis configuration.

Required Privilege Level view

Related Topics

- virtual-chassis
- Monitoring System Properties
- For more information about **show system uptime**, see the *JUNOS Software System Basics Services and Command Reference* at <http://www.juniper.net/techpubs/software/junos/junos91/index.html>.

List of Sample Output show system uptime member 0 on page 2

Output Fields Table 1 on page 1 lists the output fields for the show system uptime command. Output fields are listed in the approximate order in which they appear.

Table 1: show system uptime Output Fields

Field Name	Field Description	Level of Output
Current time	Current system time in UTC.	
System booted	Date and time when the switch was last booted and how long it has been running.	
Protocols started	Date and time when the routing protocols were last started and how long they have been running.	
Last configured	Date and time when a configuration was last committed. Also shows the name of the user who issued the last commit command.	
Time and up	Current time, in the local time zone, and how long the switch has been operational.	
Users	Number of users logged into the switch.	

Table 1: show system uptime Output Fields (continued)

Field Name	Field Description	Level of Output
Load averages	Load averages for the last 1 minute, 5 minutes, and 15 minutes.	

```
show system uptime member 0 user@host>show system uptime member 0
member 0 fpc0:
-----
Current time: 2008-02-06 05:24:20 UTC
System booted: 2008-01-31 08:26:54 UTC (5d 20:57 ago)
Protocols started: 2008-01-31 08:27:56 UTC (5d 20:56 ago)
Last configured: 2008-02-05 03:26:43 UTC (1d 01:57 ago) by root
5:24AM up 5 days, 20:57, 1 user, load averages: 0.14, 0.06, 0.01
```