

## disable-relay

---

<b>Syntax</b>	disable-relay;
<b>Hierarchy Level</b>	[edit forwarding-options dhcp-relay overrides], [edit forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay overrides], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> overrides]
<b>Release Information</b>	Statement introduced in JUNOS Release 8.3.
<b>Description</b>	Disable DHCP relay on specific interfaces in a group.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	■ Configuring the Extended DHCP Relay Agent

