

gvrp

Syntax gvrp {
 interface [*interface-name*] {
 disable;
 }
 join-timer *milliseconds*;
 leave-timer *milliseconds*;
 leaveall-timer *milliseconds*;
}

Hierarchy Level [edit protocols]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.



NOTE: As of JUNOS Release 9.2, GVRP can be configured only on trunk interfaces.

Description When GVRP is configured on a trunk interface, it ensures that the VLAN membership information on the trunk interface is updated as the switch's access interfaces become active or inactive in the configured VLANs.

The statements are explained separately.

Default When GVRP is configured, it is automatically enabled.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics

- show gvrp
- Example: Setting Up Bridging with Multiple VLANs for EX-series Switches
- Example: Configure Automatic VLAN Administration Using GVRP

