

## interface

---

<b>Syntax</b>	<code>interface <i>interface-name</i> [upto <i>upto-interface-name</i>] [exclude];</code>
<b>Hierarchy Level</b>	[edit forwarding-options dhcp-relay group <i>group-name</i> ], [edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i> ], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> ], [edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group <i>group-name</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 8.3. upto and exclude options introduced in JUNOS Release 9.1.
<b>Description</b>	Specify one or more interfaces, or a range of interfaces, that are within a specified group on which the DHCP local server is enabled. You can repeat the <b>interface <i>interface-name</i></b> statement to specify multiple interfaces within a group, but you cannot specify the same interface in more than one group. Also, you cannot use an interface that is being used by the DHCP relay agent.
<b>Options</b>	<b>exclude</b> —Exclude an interface or a range of interfaces from the group.  <b><i>interface-name</i></b> —The name of the interface. You can repeat this keyword multiple times.  <b><i>upto-interface-name</i></b> —The upper end of the range of interfaces; the lower end of the range is the <i>interface-name</i> entry. The interface device name of the <i>upto-interface-name</i> must be the same as the device name of the <i>interface-name</i> .
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring the Extended DHCP Relay Agent</li><li>■ Using External AAA Authentication Services with DHCP</li></ul>

