

rpf-check

Syntax	rpf-check;
Hierarchy Level	[edit interfaces <i>ge-chassis/slot/port</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced in JUNOS Release 9.3 for EX-series switches.
Description	Enable a reverse-path forwarding check on unicast traffic (except ECMP packets) on all ingress interfaces.
Default	Unicast RPF is disabled on all interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Configuring Unicast RPF on an EX-series Switch■ Configuring Unicast RPF (CLI Procedure)■ Disabling Unicast RPF (CLI Procedure)■ Understanding Unicast RPF for EX-series Switches

