

Using the CLI Viewer in the J-Web Interface to View Configuration Text

To view the entire configuration file contents in text format, select **Configure>CLI Tools >CLI Viewer**. The main pane displays the configuration in text format.

Each level in the hierarchy is indented to indicate each statement's relative position in the hierarchy. Each level is generally set off with braces, with an open brace ({) at the beginning of each hierarchy level and a closing brace (}) at the end. If the statement at a hierarchy level is empty, the braces are not displayed. Each leaf statement ends with a semicolon (;), as does the last statement in the hierarchy.

This indented representation is used when the configuration is displayed or saved as an ASCII file. However, when you load an ASCII configuration file, the format of the file is not so strict. The braces and semicolons are required, but the indentation and use of new lines are not required in ASCII configuration files.

Related Topics ■ Understanding J-Web Configuration Tools

