

## show sflow

---

**Syntax** show sflow  
          <collector>  
          <interface>

**Release Information** Command introduced in JUNOS Release 9.3 for EX-series switches.

**Description** Displays default sflow configuration information.

**Options** collector—(Optional) Display standard status information about the specified sflow collector.

interface—(Optional) Display standard status information about the specified sflow interface.

**Required Privilege Level** view

- Related Topics**
- show sflow interface
  - show sflow collector
  - Example: Monitoring Network Traffic Using sFlow Technology on EX-series Switches
  - Configuring sFlow Technology for Network Monitoring (CLI Procedure)

**Output Fields** Table 1 on page 1 lists the output fields for the `show sflow` command. Output fields are listed in the approximate order in which they appear.

**Table 1: show sflow Output Fields**

Field Name	Field Description	Level of Output
sFlow	Status of the feature: enabled or disabled.	All levels
Sample rate	Rate at which packets are sampled.	All levels
Sample limit	Number of packets sampled per second. The sample limit cannot be configured and is set to 300 packets/second.	All levels
Polling interval	Interval at which the sFlow agent polls the interface.	All levels

```
show sflow sFlow           : Enabled
           Sample rate     : 1:1000
           Sample limit    : 300 packets/second
           Polling interval : 20 seconds
```

