

show sflow interface

Syntax show sflow interface

Release Information Command introduced in JUNOS Release 9.3 for EX-series switches.

Description Displays the interfaces on which sFlow technology is enabled and the sampling parameters.

Required Privilege Level view

- Related Topics**
- show sflow
 - show sflow collector
 - Example: Monitoring Network Traffic Using sFlow Technology on EX-series Switches
 - Configuring sFlow Technology for Network Monitoring (CLI Procedure)

Output Fields Table 1 on page 1 lists the output fields for the `show sflow interface` command. Output fields are listed in the approximate order in which they appear.

Table 1: show sflow interface Output Fields

Field Name	Field Description	Level of Output
Interfaces	Interface on which sFlow technology is enabled.	All levels
Sample-rate	Rate at which packets are sampled.	All levels
Sample-limit	Number of packets sampled per second. Sample limit cannot be configured and is set to 300 packets/second.	All levels
Polling-interval	The interval at which the sFlow agent polls the interface.	All levels

```
show sflow interface Interfaces Sample-rate Sample-limit Polling-interval
ge-0/0/0.0 1:1000 300 pkt/sec 20 sec
```

