

## show spanning-tree mstp configuration

---

<b>Syntax</b>	show spanning-tree mstp configuration <brief   detail>
<b>Release Information</b>	Command introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Display the MSTP configuration.
<b>Options</b>	none—Display MSTP configuration information.  brief   detail—(Optional) Display the specified level of output.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	show spanning-tree mstp configuration on page 1
<b>Output Fields</b>	Table 1 on page 1 lists the output fields for the show spanning-tree mstp configuration command. Output fields are listed in the approximate order in which they appear.

**Table 1: show spanning-tree mstp configuration Output Fields**

Field Name	Field Description
Context identifier	Internally generated identifier.
Region name	MSTP region name carried in the MSTP BPDUs.
Revision	Revision number of the MSTP configuration.
Configuration digest	Numerical value derived from the VLAN-to-instance mapping table.
MSTI	MSTI instance identifier.
Member VLANs	Identifiers for VLANs associated with the MSTI.

```
show spanning-tree mstp configuration user@host> show spanning-tree mstp configuration
MSTP configuration information
Context identifier      : 0
Region name           : region1
Revision              : 0
Configuration digest   : 0xc92e7af9febb44d8df928b87f16b

MSTI      Member VLANs
  0 0-100,105-4094
  1 101-102
  2 103-104
```

