

allow-remote-loopback

Syntax	allow-remote-loopback;
Hierarchy Level	[edit protocols oam ethernet link-fault-management interface <i>interface-name</i>]
Release Information	Statement introduced in JUNOS Release 9.4 for EX-series switches.
Description	Advertise that the interface is capable of getting into loopback mode. Enable remote loopback in Ethernet OAM link fault management (LFM) on all Ethernet interfaces or the specified interface on the EX-series switch.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Configuring Ethernet OAM Link Fault Management on EX-series Switches■ Configuring Ethernet OAM Link Fault Management (CLI Procedure)

