

frame-error

Syntax	frame-error <i>count</i> ;
Hierarchy Level	[edit protocols oam ethernet link-fault-management event link-event-rate], [edit protocols oam ethernet link-fault-management interface <i>interface-name</i> event-thresholds]
Release Information	Statement introduced in JUNOS Release 9.4 for EX-series switches.
Description	Configure the threshold value for sending frame error events or taking the action specified in the action profile. Frame errors occur on the underlying physical layer. The threshold is reached when the number of frame errors reaches the configured value.
Options	<i>count</i> —Threshold count in seconds for frame error events. Range: 1 through 100 seconds Default: 1 second
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Configuring Ethernet OAM Link Fault Management (CLI Procedure)

