

frame-period

Syntax	frame-period <i>count</i> ;
Hierarchy Level	[edit protocols oam ethernet link-fault-management event link-event-rate], [edit protocols oam ethernet link-fault-management interface <i>interface-name</i> event-thresholds]
Release Information	Statement introduced in JUNOS Release 9.4 for EX-series switches.
Description	<p>Configure the number of frame errors within the last N frames that has exceeded a threshold.</p> <p>Frame errors occur on the underlying physical layer. The threshold is reached when the number of frame errors reaches the configured value.</p>
Options	<i>count</i> —Threshold count in seconds for frame error events. Range: 1 through 100 seconds
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Configuring Ethernet OAM Link Fault Management (CLI Procedure)

