



JUNOS® Software

SDK Applications Configuration Guide and Command Reference

Release 9.5

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Part Number: 530-029290-01, Revision 1

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, the Juniper Networks logo, JUNOS, NetScreen, ScreenOS, and Steel-Belted Radius are registered trademarks of Juniper Networks, Inc. in the United States and other countries. JUNOSe is a trademark of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

JUNOS® Software SDK Applications Configuration Guide and Command Reference

Release 9.5

Copyright © 2009, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Writing: Joanne McClintock

Editing: Sonia Saruba

Illustration: Faith Bradford

Cover Design: Edmonds Design

Revision History

13 April 2009—530-029290-01 Revision 1

The information in this document is current as of the date listed in the revision history.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. The JUNOS software has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT (“AGREEMENT”) BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer’s principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer’s principal office is located outside the Americas) (such applicable entity being referred to herein as “Juniper”), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software (“Customer”) (collectively, the “Parties”).
2. **The Software.** In this Agreement, “Software” means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. “Software” also includes updates, upgrades and new releases of such software. “Embedded Software” means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.
3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:
 - a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
 - b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
 - c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer’s use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer’s use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
 - d. For any trial copy of the Software, Customer’s right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
 - e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer’s enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any ‘locked’ or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.
5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.
7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.
8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.
9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.
10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.
11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.
12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14(ALT III) as applicable.
13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.
14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.
15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous

agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Abbreviated Table of Contents

	About This Guide	xv
Part 1	JUNOS SDK Applications Configuration	
Chapter 1	Introduction to Configuring JUNOS SDK Applications	3
Chapter 2	SDK Services Configuration Guidelines	9
Chapter 3	Traffic Sampling for JUNOS SDK Applications	15
Chapter 4	High Availability for the Services SDK	19
Chapter 5	Tracing Processes Specific to JUNOS SDK Applications	21
Chapter 6	Configuration Mode Commands for SDK Applications	25
Part 2	Configuration Summaries and Command Reference	
Chapter 7	Summary of SDK Configuration Mode Commands	31
Chapter 8	Summary of SDK Configuration Statements	35
Chapter 9	SDK Operational Command Reference	49
Part 3	Index	
	Index	83
	Index of Statements and Commands	85

Table of Contents

	About This Guide	xv
	JUNOS Documentation and Release Notes	xv
	Objectives	xvi
	Audience	xvi
	Supported Routing Platforms	xvii
	Using the Indexes	xvii
	Using the Examples in This Manual	xviii
	Merging a Full Example	xviii
	Merging a Snippet	xix
	Documentation Conventions	xix
	Documentation Feedback	xxi
	Requesting Technical Support	xxi
	Self-Help Online Tools and Resources	xxii
	Opening a Case with JTAC	xxii
Part 1	JUNOS SDK Applications Configuration	
Chapter 1	Introduction to Configuring JUNOS SDK Applications	3
	JUNOS SDK Applications Overview	3
	Enabling the SSD and SDK Application Deployment	4
	Configuring the MultiServices PIC for JUNOS SDK Applications	4
Chapter 2	SDK Services Configuration Guidelines	9
	JUNOS SDK Service Sets Overview	9
	Configuring Service Sets for JUNOS SDK Applications	9
	Configuring the Service Order for JUNOS SDK Service Sets	10
	Example: JUNOS SDK Service Set Configuration	10
	Configuring Stateful Firewalls in JUNOS SDK	11
	Loading the Stateful Firewall Plug-In	11
	Configuring rsh, rlogin, rexec	13
	Using Stateful Firewall Operational Commands	14

Chapter 3	Traffic Sampling for JUNOS SDK Applications	15
	Traffic Sampling for JUNOS SDK Applications Overview	15
	Limitations and Constraints of SDK Traffic Sampling	15
	Configuring Traffic Sampling for JUNOS SDK Applications	16
Chapter 4	High Availability for the Services SDK	19
	Configuring High Availability for the Services SDK	19
	Commands Supporting High Availability for MultiServices PICs	20
Chapter 5	Tracing Processes Specific to JUNOS SDK Applications	21
	Tracing Process Monitoring Operations for JUNOS SDK Applications	21
	Tracing System Resource Cleanup Operations for JUNOS SDK Applications	22
Chapter 6	Configuration Mode Commands for SDK Applications	25
	Displaying the Package Name for JUNOS SDK Application Configurations	25
	Displaying and Deleting the Configuration for JUNOS SDK Applications	26
	How the extension show Command Matches Package Names	26
	Using the extension show Command to Display SDK Configuration by Package Name	27
	Using the extension delete Command to Delete SDK Configuration by Package Name	28
Part 2	Configuration Summaries and Command Reference	
Chapter 7	Summary of SDK Configuration Mode Commands	31
	extension package-name (show delete)	32
	show display detail (SDK)	33
Chapter 8	Summary of SDK Configuration Statements	35
	extension-provider	36
	extension-service	37
	extensions	38
	process-monitor	39
	resource-cleanup	40

service-order	41
syslog	42
traceoptions	43
traceoptions (Process Monitor)	44
traceoptions (Resource Cleanup)	46

Chapter 9**SDK Operational Command Reference****49**

clear interfaces statistics (SDK)	50
clear services stateful-firewall flows (SDK)	51
request interface (revert switchover) (SDK)	52
show chassis pic (SDK)	53
show extension-provider system connections	54
show extension-provider system packages	57
show extension-provider system processes	59
show extension-provider system uptime	64
show extension-provider system virtual-memory	65
show interfaces redundancy (SDK)	68
show interfaces statistics (SDK)	69
show services stateful-firewall flows (SDK)	72
show services stateful-firewall statistics (SDK)	73
show system processes (SDK)	74
show system processes health	75
show system processes providers	78
show system resource-cleanup processes	79
show version (SDK)	80

Part 3**Index**

Index	83
Index of Statements and Commands	85

List of Tables

About This Guide	xv
Table 1: Additional Books Available Through http://www.juniper.net/books	xv
Table 2: Notice Icons	xix
Table 3: Text and Syntax Conventions	xx

Part 2

Configuration Summaries and Command Reference

Chapter 9	SDK Operational Command Reference	49
	Table 4: show extension-provider system virtual-memory Output Fields	65
	Table 5: show services stateful-firewall flows Output Fields	72
	Table 6: show services stateful-firewall statistics Output Fields	73
	Table 7: show system processes health Output Fields	75
	Table 8: show system resource-cleanup processes Output Fields	79
	Table 9: show version Output Fields	80

About This Guide

This preface provides the following guidelines for using the *JUNOS® Software SDK Applications Configuration Guide and Command Reference*:

- JUNOS Documentation and Release Notes on page xv
- Objectives on page xvi
- Audience on page xvi
- Supported Routing Platforms on page xvii
- Using the Indexes on page xvii
- Using the Examples in This Manual on page xviii
- Documentation Conventions on page xix
- Documentation Feedback on page xxi
- Requesting Technical Support on page xxi

JUNOS Documentation and Release Notes

For a list of related JUNOS documentation, see <http://www.juniper.net/techpubs/software/junos/>.

If the information in the latest *JUNOS Release Notes* differs from the information in the documentation, follow the *JUNOS Release Notes*.

To obtain the most current version of all Juniper Networks technical documentation, see the product documentation page on the Juniper Networks Web site at <http://www.juniper.net/>.

Table 1 on page xv lists additional books on Juniper Networks solutions that you can order through your bookstore. A complete list of such books is available at <http://www.juniper.net/books>.

Table 1: Additional Books Available Through <http://www.juniper.net/books>

Book	Description
<i>Interdomain Multicast Routing</i>	Provides background and in-depth analysis of multicast routing using Protocol Independent Multicast sparse mode (PIM SM) and Multicast Source Discovery Protocol (MSDP); details any-source and source-specific multicast delivery models; explores multiprotocol BGP (MBGP) and multicast IS-IS; explains Internet Gateway Management Protocol (IGMP) versions 1, 2, and 3; lists packet formats for IGMP, PIM, and MSDP; and provides a complete glossary of multicast terms.

Table 1: Additional Books Available Through <http://www.juniper.net/books> (continued)

Book	Description
<i>JUNOS Cookbook</i>	Provides detailed examples of common JUNOS software configuration tasks, such as basic router configuration and file management, security and access control, logging, routing policy, firewalls, routing protocols, MPLS, and VPNs.
<i>MPLS-Enabled Applications</i>	Provides an overview of Multiprotocol Label Switching (MPLS) applications (such as Layer 3 virtual private networks [VPNs], Layer 2 VPNs, virtual private LAN service [VPLS], and pseudowires), explains how to apply MPLS, examines the scaling requirements of equipment at different points in the network, and covers the following topics: point-to-multipoint label switched paths (LSPs), DiffServ-aware traffic engineering, class of service, interdomain traffic engineering, path computation, route target filtering, multicast support for Layer 3 VPNs, and management and troubleshooting of MPLS networks.
<i>OSPF and IS-IS: Choosing an IGP for Large-Scale Networks</i>	Explores the full range of characteristics and capabilities for the two major link-state routing protocols: Open Shortest Path First (OSPF) and IS-IS. Explains architecture, packet types, and addressing; demonstrates how to improve scalability; shows how to design large-scale networks for maximum security and reliability; details protocol extensions for MPLS-based traffic engineering, IPv6, and multitopology routing; and covers troubleshooting for OSPF and IS-IS networks.
<i>Routing Policy and Protocols for Multivendor IP Networks</i>	Provides a brief history of the Internet, explains IP addressing and routing (Routing Information Protocol [RIP], OSPF, IS-IS, and Border Gateway Protocol [BGP]), explores ISP peering and routing policies, and displays configurations for both Juniper Networks and other vendors' routers.
<i>The Complete IS-IS Protocol</i>	Provides the insight and practical solutions necessary to understand the IS-IS protocol and how it works by using a multivendor, real-world approach.

Objectives

This guide provides an overview of the configuration features and operational commands Juniper Networks supports for JUNOS SDK applications.



NOTE: This guide documents Release 9.5 of the JUNOS software. For additional information about the JUNOS software—either corrections to or information that might have been omitted from this guide—see the JUNOS SDK Release Notes.

Audience

This guide is designed for network administrators who are configuring and monitoring a Juniper Networks M-series, MX-series, T-series, EX-series, or J-series routing platform.

To use this guide, you need a broad understanding of networks in general, the Internet in particular, networking principles, and network configuration. You must also be familiar with one or more of the following Internet routing protocols:

- Border Gateway Protocol (BGP)
- Distance Vector Multicast Routing Protocol (DVMRP)

- Intermediate System-to-Intermediate System (IS-IS)
- Internet Control Message Protocol (ICMP) router discovery
- Internet Group Management Protocol (IGMP)
- Multiprotocol Label Switching (MPLS)
- Open Shortest Path First (OSPF)
- Protocol-Independent Multicast (PIM)
- Resource Reservation Protocol (RSVP)
- Routing Information Protocol (RIP)
- Simple Network Management Protocol (SNMP)

Personnel operating the equipment must be trained and competent; must not conduct themselves in a careless, willfully negligent, or hostile manner; and must abide by the instructions provided by the documentation.

Supported Routing Platforms

For the features described in this manual, the JUNOS SDK is supported in its entirety on the following routing platforms:

- M-series, except for dynamic firewall filters on the M40e router.

Among the M7i and M10i products, the `junos_dfw` APIs (implicit firewall filters) are supported on the following systems:

- M7i with Enhanced Forwarding Engine
- M10i with Enhanced Forwarding Engine
- M7i with integrated MultiServices 100 PIC (available only with Enhanced Forwarding Engine)
- T-series platforms

Using the Indexes

This guide contains two indexes: a complete index of all index entries, and an index of statements and commands only.

The complete index points to pages in the statement summary chapters. The index entry for each configuration statement contains at least two entries:

- The first entry points to the statement summary section.
- The second entry, *usage guidelines*, points to the section in a configuration guidelines chapter that describes how to use the statement.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the `load merge` or the `load merge relative` command. These commands cause the software to merge the incoming configuration into the current candidate configuration. If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the `load merge` command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the `load merge relative` command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file `ex-script.conf`. Copy the `ex-script.conf` file to the `/var/tmp` directory on your routing platform.

```

system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}

```

2. Merge the contents of the file into your routing platform configuration by issuing the `load merge` configuration mode command:

```

[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete

```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file `ex-script-snippet.conf`. Copy the `ex-script-snippet.conf` file to the `/var/tmp` directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the `load merge relative` configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the `load` command, see the *JUNOS CLI User Guide*.

Documentation Conventions

Table 2 on page xix defines notice icons used in this guide.

Table 2: Notice Icons





Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 3 on page xx defines the text and syntax conventions used in this guide.

Table 3: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> ■ Introduces important new terms. ■ Identifies book names. ■ Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> ■ A policy <i>term</i> is a named structure that defines match conditions and actions. ■ <i>JUNOS System Basics Configuration Guide</i> ■ RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Plain text like this	Represents names of configuration statements, commands, files, and directories; IP addresses; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> ■ To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. ■ The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]

Table 3: Text and Syntax Conventions (continued)

Convention	Description	Examples
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;	Identifies a leaf statement at a configuration hierarchy level.	
J-Web GUI Conventions		
Bold text like this	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> ■ In the Logical Interfaces box, select All Interfaces. ■ To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select Protocols > Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document name
- Document part number
- Page number
- Software release version (not required for *Network Operations Guides [NOGs]*)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the JTAC User Guide located at <http://www.juniper.net/customers/support/downloads/710059.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC Hours of Operation —The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool located at <https://tools.juniper.net/SerialNumberEntitlementSearch/>.

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting support.html>

Part 1

JUNOS SDK Applications Configuration

- Introduction to Configuring JUNOS SDK Applications on page 3
- SDK Services Configuration Guidelines on page 9
- Traffic Sampling for JUNOS SDK Applications on page 15
- High Availability for the Services SDK on page 19
- Tracing Processes Specific to JUNOS SDK Applications on page 21
- Configuration Mode Commands for SDK Applications on page 25

Chapter 1

Introduction to Configuring JUNOS SDK Applications

This chapter includes the following topics:

- JUNOS SDK Applications Overview on page 3
- Enabling the SSD and SDK Application Deployment on page 4
- Configuring the MultiServices PIC for JUNOS SDK Applications on page 4

JUNOS SDK Applications Overview

The JUNOS Software Development Kit (SDK) allows members of the Juniper Open IP Solution Development Program (OSDP) to build custom applications that run on the JUNOS operating system and extend the functionality of JUNOS systems. Such an application may run on the Routing Engine or, to perform a specific service, on the MultiServices PIC. In JUNOS user documentation, these third-party applications are called *SDK applications*. These applications are installed in one or more packages.

A JUNOS SDK application may already be on your router if it was provided to you by a third party, or you may need to install the SDK application if you acquired it separately from the router.

To install an SDK application, please consult the application-specific documentation supplied by the provider. The application-specific documentation may also have information about configuring the SDK application on the router that is in addition to the generic information in this collection of topics.

In the configuration itself, the SDK application is called an *extension*. The third-party creator of that application is called a *provider*. Also specific to SDK applications is the SDK service process, or *ssd*. This process, which runs on the Routing Engine, is responsible for communications between the SDK application and the regular JUNOS software. Although *ssd* is present on the router, it does not run unless specifically enabled.

For security, an SDK application comes with a certificate that authenticates it as a product of a specific provider. Part of this certificate, the *provider ID*, must be activated on the router to allow the SDK application to be deployed on the router and run.

The *Services SDK* (previously called the MP SDK) is the JUNOS SDK module that supports the development and running of SDK applications on the MultiServices PIC. The MultiServices PIC is based on a multicore chip. For SDK applications that are

installed to run on the MultiServices PIC, you can designate the number of cores used for control versus data handling. Your application provider may recommend values for this core allocation, or you may choose these values yourself.

For more information about the Juniper OSDP and the JUNOS SDK, please contact your account team or visit <http://www.juniper.net/partners/osdp.html>.

Enabling the SSD and SDK Application Deployment

By default, the SDK service process (ssd) does not run. To enable `ssd` and prepare the router for installation of a JUNOS SDK application, include the following statements at the `[edit system]` hierarchy level:

```
[edit]
system {
  extensions {
    providers {
      provider-id;
    }
  }
}
```

The provider ID is a prefix that is part of the certificate name used by the provider in building an SDK application. Before installing your SDK application, you must enable its provider ID using the `extensions` statement. Enabling a provider ID allows you to install the SDK application package that was built using that certificate name. Multiple provider IDs can be enabled on a router.

The following example shows how to use `extensions` statement to specify provider IDs in the configuration.

If `abc` and `xyz` are provider IDs issued to two providers, then the following configuration enables the router for the SDK applications built by either provider:

```
[edit]
system {
  extensions {
    providers {
      abc;
      xyz;
    }
  }
}
```

Configuring the MultiServices PIC for JUNOS SDK Applications

To configure an SDK application, include the following statements at the `[edit chassis fpc slot-number pic pic-number adaptive-services service-package extension-provider]` hierarchy level:

```
[edit chassis fpc slot-number pic pic-number adaptive-services service-package
extension-provider]
control-cores control-number;
```

```

data-cores data-number;
data-flow-affinity;
forwarding-db-size size;
object-cache-size value;
package package-name;
policy-db-size size;
wired-process-mem-size size;
syslog {
    facility severity;
}

```

There are eight cores in a PIC. Some cores, called *control cores*, are dedicated to running control functionality for the application. Cores dedicated to processing data for the application are called *data cores*. You must designate at least one core as a control core. Although it is not mandatory to designate any cores as data cores, it is advisable to designate a minimum of five, depending on the nature of the application, to achieve good performance. The total number of cores, both control and data cores, that you can dedicate using the `extension-provider` statement ranges from one through eight. Any cores not configured as control or data cores are treated as *user cores*.



NOTE: For help with architecting their JUNOS SDK applications, providers should consult with JUNOS SDK Developer Support.

As of JUNOS Release 9.5, the Services SDK supports flow affinity behavior for the data CPUs. Flow affinity distribution is based on a hash distribution. Flow affinity is already the default behavior for the control CPUs, but the default behavior for distributing data packets over data cores is in a round-robin fashion. You can change the default behavior from round-robin to flow affinity for the data cores by adding the `data-flow-affinity` statement at the `[edit chassis fpc slot-number pic slot-number adaptive-services service-package extension-provider]` hierarchy level.



NOTE: Either adding the `data-flow-affinity` statement or removing it will cause the PIC to reboot.

The MultiServices PIC has a shared memory pool that contains the object cache and the forwarding database (FDB). The FDB provides access to the route information. It is a separate memory derived from the object cache shared memory on the MultiServices PIC.

A large FDB implies there is less object cache for the application, which can affect performance depending on the application. For example, if an application needs a maximum of 256 MB of object cache for its functionality and the value of `object-cache-size` is 512 MB, the object cache can allocate up to 256 MB to the FDB without any performance impact. However, if the value set for `object-cache-size` is only 256 MB and `forwarding-db-size` is set to 64 MB, there will be some performance impact.



NOTE: You need to enable forwarding options sampling for the FDB to be created. For information about enabling sampling, see “Configuring Traffic Sampling for JUNOS SDK Applications” on page 16.

To tune SDK application performance, use the `object-cache-size` statement, specifying a value that is a multiple of 128 MB. For the MultiServices 100 PIC, the range is from 128 through 512 MB, and for the MultiServices 400 PIC, from 128 through 1280 MB.



NOTE: Changing the object cache size on a running system causes the PIC to reboot.

JUNOS SDK applications are installed on the MultiServices PIC in one or more packages. To designate which SDK application package to install on a given PIC, include the `package package-name` option. Up to eight packages can be installed on a PIC; however, only one data package is allowed per PIC.

As of JUNOS Release 9.5, a stateful firewall plug-in is provided as part of jbundle. To load this plug-in on the PIC, include the `package jservices-sfw` statement at the [edit chassis fpc slot-number pic slot-number adaptive-services service-package extension-provider] hierarchy level.

```
user@host# show chassis
fpc 0;
  pic 0;
    adaptive-services;
      service-package;
        extension-provider;
          control-cores 1;
          data-cores 4;
          object-cache-size 128;
          package jservices-sfw;
          policy-db-size 64;
        }
      }
    }
  }
```



NOTE: You cannot install both a JUNOS service package and an SDK application package on the same PIC. However, you can load both the `jservices-sfw` package and a JUNOS SDK application package on the same PIC.

The `policy-db-size` statement defines the size of policies that providers expect to be present in their system. It is configured in megabytes. The size should be less than that set for the `object-cache-size` statement.

To record or view system log messages on a specific PIC, include the `syslog` statement. System log information is passed to the Routing Engine and put in the `/var/log/messages` directory. Two facilities are supported: `external` and `pfe`. The `pfe` facility logs actions performed or errors encountered by the Packet Forwarding

Engine. The **external** facility covers everything outside of the Packet Forwarding Engine. Severity is the same as for the JUNOS software; see the **syslog** configuration statement for the severity levels that you can specify.

Wired process memory is memory used by the operating system that is generally “off limits” to another application. To configure wired process memory size, specify 512 MB for the **wired-process-mem-size** statement. In addition, you can also configure the object cache.

Chapter 2

SDK Services Configuration Guidelines

This chapter includes the following topics:

- JUNOS SDK Service Sets Overview on page 9
- Configuring Service Sets for JUNOS SDK Applications on page 9
- Configuring the Service Order for JUNOS SDK Service Sets on page 10
- Example: JUNOS SDK Service Set Configuration on page 10
- Configuring Stateful Firewalls in JUNOS SDK on page 11

JUNOS SDK Service Sets Overview

This topic describes the use of service sets in SDK applications.

A *service set* is a collection of policies taken from multiple services that can be applied as a unit to traffic coming to the PIC. Service sets are the building blocks of SDK plugins.

Policies are maintained per service set only. For defining policies using the command-line interface (CLI), the SDK does not specify how providers must set up the configuration hierarchy. However, two things are mandatory:

- Service sets must be configured at the [edit services service-set *service-set-name* extension-service] hierarchy level.
- The *service-order* statement must be used to specify the order in which policies are applied to traffic coming to the PIC.

Up to two SDK plugins are supported per PIC and can be chained together in one service set. For an example, see “Example: JUNOS SDK Service Set Configuration” on page 10.

Configuring Service Sets for JUNOS SDK Applications

To define a service set, configure statements at the [edit services service-set *service-set-name* extension-service] hierarchy level. For specific information, see the application-specific documentation.

SDK application providers may want to follow the JUNOS software method of configuring a service set. In the native JUNOS software, policies known as *rules* or groups of rules known as *rule sets* are configured at the [edit services] hierarchy level.

These services are then gathered together in a service set at the [edit services service-set *service-set-name* extension-service] hierarchy level by referencing the names of the rules or rule sets.

To specify the order of the policies within a service set, configure the `service-order` statement at the [edit services extension-service] hierarchy level.

Configuring the Service Order for JUNOS SDK Service Sets

The service order defines the order in which services are applied for this service set. The `service-order` statement must include all services defined in the service set. It is mandatory to specify the forward-flow service order and the reverse-flow service order. If the reverse-flow service order is not specified, the reverse-flow order is the reverse of the forward-flow service order.

To configure the service order, include the `service-order` statement at the [edit services service-set *service-set-name* extension-service] hierarchy level.



NOTE: If the `extension-service` statement is specified, the `service-order` statement is mandatory. Service order should not be configured for native JUNOS internal services. For the internal services, there is a default service order.

To change the service order, delete the service order elements and then add them again in the new order.

Example: JUNOS SDK Service Set Configuration

In the following configuration example, the `acme-svc1` service is defined by three rules (their content is unspecified) and the `acme-svc2` service is defined by a rule set made up of an unspecified number of rules. In this case, these services are defined at the [edit acme services] hierarchy level.

```
[edit]
acme {
  services {
    acme-svc1 { #Provider-defined service
      svc1-rule1 { # First rule's name
        . . . # First rule defined
      }
      svc1-rule2 { # Second rule's name
        . . . # Second rule defined
      }
      svc1-rule3 { # Third rule's name
        . . . # Third rule defined
      }
    }
    acme-svc2 { # Provider-defined service
      rule-set svc2-rule-set { # Rule-set name
        [ rules rule-names ]; # Rules definitions start here
      }
    }
  }
}
```

```

    }
}

```

At the [edit services] hierarchy level (no intervening “acme” level here), the `service-set sset1` is defined by referencing the three rule names for `acme-svc1` and the one rule set name for `acme-svc2` using the `service-set service-set-name extension-service` statement at the [edit services service-set service-set-name] hierarchy level. The service order is also configured at the [edit services service-set service-set-name] hierarchy level.

The following is an example of configuring service sets, extension service rules, and the service order:

```

[edit]
services {
  service-set sset1 {
    extension-service acme-svc1 {
      svc1-rule1;
      svc1-rule2;
      svc1-rule3;
    }
    extension-service acme-svc2 {
      rule-set svc2-rule-set;
    }
    /* Now define the order */
    service-order {
      forward-flow [acme-svc1 acme-svc2];
      reverse-flow [acme-svc1 acme-svc2];
    }
  }
}

```

Configuring Stateful Firewalls in JUNOS SDK

This topic covers the following configuration and management of stateful firewalls for the JUNOS SDK.

- Loading the Stateful Firewall Plug-In on page 11
- Configuring `rsh`, `rlogin`, `rexec` on page 13
- Using Stateful Firewall Operational Commands on page 14

Loading the Stateful Firewall Plug-In

As of JUNOS Release 9.5, a stateful firewall plug-in is provided as part of `jbundle`. To load this plug-in on the PIC, include the `package jservices-sfw` statement at the [edit chassis fpc slot-number pic slot-number adaptive-services service-package extension-provider] hierarchy level. For example:

```

user@host# show chassis
fpc 0 {
  pic 2 {
    adaptive-services {
      service-package {

```

```

        extension-provider {
            control-cores 1;
            data-cores 4;
            object-cache-size 128;
            package jservices-sfw; #Loads stateful firewall plug-in.
            policy-db-size 64;
        }
    }
}

```

You cannot load both a native JUNOS service package and a JUNOS SDK application package on the same PIC. However, you can load both the `jservices-sfw` package and a JUNOS SDK application package on the same PIC.

The following example demonstrates the stateful firewall plug-in coexisting with a provider's plug-in:

```

[edit services]
service-set sset {
    interface-service {
        service-interface ms-0/0/0.0;
    }
    stateful-firewall-rules rule1;
    extension-service customer-plugin;
    service-order [stateful-firewall customer-plugin];
}
stateful-firewall {
    rule rule1 {
        match-direction input-output;
        term term1 {
            from {
                applications junos-ftp;
            }
            then {
                accept;
            }
        }
    }
    rule rule2 {
        match-direction input;
        term term1 {
            from {
                source-address {
                    192.1.1.2/32;
                }
            }
            then {
                reject;
                syslog;
            }
        }
    }
}
}

```

Configuring rsh, rlogin, rexec

Some implementations of the rsh, rlogin, rexec mechanism require the remote host to authenticate the request by opening a separate TCP session to port 113 on the client host. By default, the stateful firewall does not allow this authentication flow to go through.

To open the authentication flow, include the applications junos-ident statement at the [edit services stateful-firewall rule *rule-name* term *term-name* from] hierarchy level:

```
[edit]
services {
  stateful-firewall {
    rule rule1 {
      term term1 {
        from {
          (source-address | destination-address);
          applications junos-ident;
        }
        then {
          accept;
        }
      }
    }
  }
}
```

To allow Kerberos-enabled rsh, rlogin, rexec through the stateful firewall, configure the following additional applications and include them in the stateful firewall terms:

```
[edit]
applications {
  application test-kerberos-kshell {
    Protocol tcp;
    destination-port kshell;
  }
  application test-kerberos-klogin {
    protocol tcp;
    destination-port klogin;
  }
}

services {
  stateful-firewall {
    rule rule1 {
      term term1 {
        from {
          applications [kerberos-klogin kerberos-kshell];
        }
        then {
          accept;
        }
      }
    }
  }
}
```

```
}  
}
```

Using Stateful Firewall Operational Commands

The following stateful firewall operational commands support the `ms-` interface:

- `show services stateful-firewall flows (SDK)`—Display stateful firewall flow table entries.
- `show services stateful-firewall flows (SDK)`—Display stateful firewall statistics. For this command, only rule and ALG statistics are given. In the extensive option, other statistics appear but do not populate correctly; those values are all zeroes.
- `clear services stateful-firewall flows (SDK)`—Remove established flows from the flow table.

For more information on these commands, see their command summaries.

Chapter 3

Traffic Sampling for JUNOS SDK Applications

This chapter includes the following topics:

- Traffic Sampling for JUNOS SDK Applications Overview on page 15
- Configuring Traffic Sampling for JUNOS SDK Applications on page 16

Traffic Sampling for JUNOS SDK Applications Overview

You can configure traffic sampling on a MultiServices PIC for JUNOS SDK applications.

For routing platforms containing a MultiServices PIC, the existing `interface` statement at the `[edit forwarding-options sampling family family output]` hierarchy level is extended to allow you to use an interface of the `ms-` type (`ms-fpc/pic/port`) to sample traffic passing through the routing platform.

Limitations and Constraints of SDK Traffic Sampling

The following are limitations of traffic monitoring as supported for JUNOS SDK applications:

- Traffic monitoring is supported for IPv4 only.
- Firewall filters are used on ingress interfaces to direct packets for sampling. Sampling and port mirroring cannot be enabled on the same traffic.
- Only one `extension-service` statement can be used.
- Only one interface can be configured for sampling.

Configuring Traffic Sampling for JUNOS SDK Applications

As with regular JUNOS software, to configure traffic sampling for a JUNOS SDK application, you must complete three tasks: create a firewall filter, apply it to the logical interface on which you want to sample traffic, and enable sampling.

To enable sampling on a MultiServices PIC, include the `input` and `output` statements at the `[edit forwarding-options sampling]` hierarchy level:

```
[edit]
forwarding-options {
  sampling {
    input {
      family inet {
        rate number;
      }
    }
    output {
      extension-service service-name {
        provider-specific rules;
      }
      interface ms-fpc/pic/port;
    }
  }
}
```

The `extension-service` statement provides a section of the configuration hierarchy in which the provider of your SDK application may have added its own traffic monitoring configuration statements. To enable sampling for SDK applications and be able to use the configuration statements the SDK application provider may have added, you must include the `extension-service` statement at the `[edit forwarding-options sampling output]` hierarchy level. For application-specific configuration guidelines, see the documentation provided with your application.



NOTE: If you use the `extension-service` statement, the only other statement you can include at the `[edit forwarding-options sampling output]` hierarchy level is the `interface` statement. In this case, you must set the `interface` statement to an interface with an `ms-` prefix.

The following example shows a firewall filter `sample-monitor`, which, when attached to an interface, ensures that all traffic entering that interface with a source address matching address `10.1.1.1` is sampled and sent to the output interface `ms-2/0/0`.

```
[edit]
firewall {
  family inet {
    filter sample-monitor {
      term sample-term {
        from {
          source-address {
            10.1.1.1/32;
          }
        }
      }
    }
  }
}
```


Chapter 4

High Availability for the Services SDK

This chapter includes the following topics

- Configuring High Availability for the Services SDK on page 19
- Commands Supporting High Availability for MultiServices PICs on page 20

Configuring High Availability for the Services SDK

You can pair two MultiServices PICs in high availability mode using the virtual `rms` interface. As part of the configuration, one of the PICs is set as the *primary* and the other as the *secondary* PIC. When the `rms` interface comes up, the primary PIC comes up as active and the secondary PIC as standby.

On failure of the active PIC, the standby PIC becomes active and traffic is switched over to the new active PIC. When the failed primary PIC is restored, it comes up as standby. The network administrator must explicitly request a reversion to the primary PIC to make it active again. Otherwise, it continues in standby mode until the active PIC fails.

To create the `rms` interface, include the `redundancy-options` statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]
redundancy-options {
  primary ms-fpc/pic/port;
  secondary ms-fpc/pic/port;
  hot-standby;
}
unit logical-unit-number family inet ipaddr;
```

The `interface-name` variable is `rms number`, where `number` is in the range from 0 to 127.



NOTE: To bring up the `rms` interface, you must include the `unit logical-unit-number family inet` statement.

When a new `rms` interface is created, PICs designated as primary and secondary will reboot automatically. If either the primary or secondary PIC, or both, are changed, the corresponding old and new `ms-` interfaces will reboot automatically.



NOTE: The rms interface is also supported for service sets, class of service (CoS), routes.

For more information on the `redundancy-options` statement, see the *JUNOS Services Interfaces Configuration Guide*.

Commands Supporting High Availability for MultiServices PICs

The following operational commands support MultiServices PIC redundancy:

- **clear interfaces statistics**—Clear interface statistics. When the `show interfaces statistics` command is next issued, the output will show the packets received since the last time the `clear interfaces statistics` command was issued. However, after a graceful Routing Engine switchover (GRES), issuing the `show interfaces statistics` command will show cumulative statistics.
- **request interface (revert | switchover)**—Manually change over to the other PIC. Use `revert` to revert to the primary interface; use `switchover` to change, or switch over, to the secondary interface. After the switchover, it is recommended you place the old active PIC offline temporarily so it comes up fresh as a new backup.
- **show interfaces redundancy**—Display general information about the rms and ms-interfaces redundancy. You can use this command to determine which PIC is currently active.
- **show interfaces statistics**—Display interface statistics, such as packets received, packets transmitted, and errors. This command has output in three different levels of detail.

For detail on these commands as used in support of the rms interface, including sample output, see their command summaries. For information on these commands in other contexts, see the *JUNOS Interfaces Command Reference*.

Chapter 5

Tracing Processes Specific to JUNOS SDK Applications

This chapter includes the following topics:

- Tracing Process Monitoring Operations for JUNOS SDK Applications on page 21
- Tracing System Resource Cleanup Operations for JUNOS SDK Applications on page 22

Tracing Process Monitoring Operations for JUNOS SDK Applications

The *process health monitor* (pmond) is the central monitoring process for JUNOS SDK applications. It tracks resource usage and performs actions on processes when they trigger certain events (for example, when there is a runaway process event or when low-water or high-water resource marks are exceeded). Process monitoring ensures that SDK applications are operating appropriately and provides an interface for operators to monitor the impact of their SDK applications on the Routing Engine.

To trace process monitoring operations, include the `process-monitor` statement at the `[edit system processes]` hierarchy level:

```
[edit]
system {
  processes {
    process-monitor {
      disable;
      traceoptions {
        file;
        flag flag;
        level level;
        no-remote-trace;
      }
    }
  }
}
```

The `traceoptions` statement is the only container statement at the `[edit system processes process-monitor]` hierarchy level. The available flags for the `traceoptions` statement include:

- `all`—Enable all trace options flags.
- `process-tracking`—Display process life-cycle events and parent/child pedigree changes.
- `heartbeat`—Display heartbeat updates from applications.
- `ui`—Display tracing messages for UI operational commands.

Tracing System Resource Cleanup Operations for JUNOS SDK Applications

Using the JUNOS SDK, providers can have their SDK applications request and manage system resources. Some of this resource utilization is persistent across, for example, reboots or the restart of the application. Some system tasks such as deleting a package, disabling an application, or accessing shared resources require that resources be cleaned up by entities other than the application itself. Resources that are known to need cleaning up include the following:

- GENCFG blobs
- SYSV shared memory segments
- SYSV semaphores
- Temporary files

Currently, the `traceoptions` statement is the only CLI statement available for configuring resource cleanup.

To configure tracing operations for resource cleanup operations, include the `traceoptions flag` option for selectively turning the debugging of trace messages on or off:

```
[edit]
system {
  processes {
    resource-cleanup {
      traceoptions {
        flag (all | events | gencfg | sysvsem | sysvshm | ui);
        level level;
      }
    }
  }
}
```

The available flags for the `traceoptions` statement include:

- `all`—Enable all trace option flags.
- `events`—Display process state change and cleanup events.
- `gencfg`—Display GENCFG blobs recorded for cleanup.
- `sysvsem`—Display SYSV semaphores recorded for cleanup.

- `sysvshm`—Display SYSV shared memory segments recorded for cleanup.
- `ui`—Display tracing messages for UI operational commands.

Chapter 6

Configuration Mode Commands for SDK Applications

Configuration mode commands are commands you enter in configuration mode that perform general configuration functions such as copying, navigating, and managing configuration files. This chapter covers the following configuration mode command topics:

- Displaying the Package Name for JUNOS SDK Application Configurations on page 25
- Displaying and Deleting the Configuration for JUNOS SDK Applications on page 26
- How the extension show Command Matches Package Names on page 26
- Using the extension show Command to Display SDK Configuration by Package Name on page 27
- Using the extension delete Command to Delete SDK Configuration by Package Name on page 28

Displaying the Package Name for JUNOS SDK Application Configurations

To determine if a configuration has settings contributed by an SDK application package, use the following configuration mode command:

```
user@host# show <statement-path> | display detail
```

This command displays the configuration schema as piped through to the `display detail` command. The `show` command displays the entire user-defined configuration unless it is limited by the optional `statement-path` variable to that branch of the configuration schema. The `show | display detail` command displays the characteristics, descriptions, and constraints of each configuration statement in the JUNOS configuration schema using comment lines.

Generally, the information displayed is help strings and the permission bits required to add or modify the configuration statement. For configuration statements that are defined by an SDK application package, the name of the package that defines the statement is also displayed. If a JUNOS statement is redefined by an SDK application package, the package name is listed. However, if a configuration statement is defined by the native JUNOS software only, no package name is displayed.

Displaying and Deleting the Configuration for JUNOS SDK Applications

To display or delete the configuration for a specific SDK application package, use the `extension package-name (show | delete)` configuration mode command:

```
user@host# extension package-name (show | delete) <section>
```

The `extension` command filters for SDK application configuration statements based on the package named in the `extension package-name (show | delete)` command starting at the top of the configuration hierarchy, or, if you use the `section` option, starting at the hierarchy level (statement path) specified by `section`.



NOTE: Remove all the soon-to-be invalid configurations before removing the SDK application package.

Before removing SDK application packages, use the `extension package-name show` command to display the entire configuration contributed by the named package. Then use the `extension package-name delete` command to remove all configuration statements for that package.

Use the `extension show` and `extension delete` commands to select for, or filter, configurations differently, as explained in the following topics.

How the `extension show` Command Matches Package Names

Without the `extension package-name` filter, the `show` command displays the entire user-defined configuration hierarchy. The `extension package-name show` command, however, displays only the configuration statements contributed by packages whose names match those in the command. The subset of matches includes packages whose package names exactly match the value of `package-name` as well as those whose names have the same root but may have longer names, similar to a wildcard situation. The output displays the settings relating to all matches. The following example shows simplified output illustrating how the `extension show` filter works.

Suppose a router has `packageA`, `packageB`, and `packageAB` installed. When you issue the `show` command, you see the following output:

```
user@host# show
system {
  packageA {
    ...
  }
  packageB {
    ...
  }
  packageAB {
    ...
  }
}
```

If you issue the command `extension packageA show`, you see a subset of the previous `show` command output. The output displays settings for packages with names that not only exactly match `packageA` but also have roots that match (in this case, `packageAB`):

```
user@host# extension packageA show
system {
  packageA {
    ....
  }
  packageAB {
    ....
  }
}
```

Using the extension show Command to Display SDK Configuration by Package Name

The `extension package-name show` command selects configurations contributed by and leading to the package named in the command.

In the following example, only the `sdk-backup-server` statement at the `[edit system radius-server 10.1.1.1]` hierarchy level and the `sdk-proto1` statement at the `[edit system protocols]` hierarchy level are contributed by the SDK application package `sdk-pkg1`:

```
user@host# show
system {
  radius-server {
    10.1.1.1 {
      timeout 10;
      sdk-backup-server 10.1.1.2; # Contributed by sdk-pkg1
    }
  }
}
protocols {
  ospf {
    ....
  }
  sdk-proto1 { # Contributed by sdk-pkg1
    ....
  }
}
```

Following is the output from the `extension sdk-pkg1 show` command:

```
user@host# extension sdk-pkg1 show
system {
  radius-server {
    10.1.1.1 {
      sdk-backup-server 10.1.1.2;
    }
  }
}
protocols {
```

```

    sdk-proto1 {
        ....
    }
}

```

The extension `sdk-pkg1 show` command filters out the `timeout` and `ospf` commands from the displayed output, which were not contributed by the `sdk-pkg1` package.

Using the extension `delete` Command to Delete SDK Configuration by Package Name

The extension `package-name delete` command treats the value of `package-name` as a literal. It deletes only the settings contributed by the package whose package name exactly matches the given value. Using this command, you can delete all user-defined configuration statements related to the named package.



NOTE: A configuration schema defined in any native JUNOS package is never deleted by the removal of any third-party package.

Continuing with the preceding example, notice how the configuration changes when the extension `sdk-pkg1 delete` command is used:

```

user@host# extension sdk-pkg1 delete
[edit]
user@host# show
system {
    radius-server {
        10.1.1.1 {
            timeout 10;
        }
    }
}
protocols {
    ospf {
        ....
    }
}

```

You could accomplish the same thing by issuing the following two commands:

- `delete system radius-server 10.1.1.1 sdk-backup-server`
- `delete protocols sdk-proto1`

Part 2

Configuration Summaries and Command Reference

- Summary of SDK Configuration Mode Commands on page 31
- Summary of SDK Configuration Statements on page 35
- SDK Operational Command Reference on page 49

Chapter 7

Summary of SDK Configuration Mode Commands

The configuration mode commands described in this section are specific to the configuration of SDK applications either in whole or in part. The commands are listed in alphabetical order.

extension package-name (show | delete)

Syntax extension *package-name* (show | delete) <*section*>

Release Information Command introduced in JUNOS Release 8.5.

Description Manage configurations that are contributed by SDK application packages. Use **show** to display user-defined configuration contributed by the named package. If you specify **delete**, all subordinate statements and identifiers contained within the specified statement path (see the *section* option) are deleted as well.



NOTE: A configuration defined in any of the native JUNOS packages is never deleted by the **extension *package-name* delete** command.

Options *package-name*—Name of SDK application package.

section—(Optional) Statement path from which you want the command to act.

Required Privilege Level *configure*—To enter configuration mode; other required privilege levels depend on where the statement is located in the configuration hierarchy.

show | display detail (SDK)

Syntax	show <hierarchy-level> display detail
Release Information	Support for JUNOS SDK applications added in JUNOS Release 8.5.
Description	Display additional information about the configuration. The additional information generally includes the help string that explains each configuration statement and the permission bits required to add and modify the configuration statement. If a statement is contributed by an SDK application package, the name of the package is given with the output field ## package: package-name .
Options	<i>hierarchy-level</i> —(Optional) Statement hierarchy path for which you want the configuration displayed.
Required Privilege Level	configure—To enter configuration mode; other required privilege levels depend on where the statement is located in the configuration hierarchy.

Chapter 8

Summary of SDK Configuration Statements

This chapter provides a reference for each of the SDK configuration statements. The statements are organized alphabetically.

extension-provider

Syntax extension-provider {
 control-cores *control-number*;
 data-cores *data-number*;
 data-flow-affinity;
 forwarding-db-size *size*;
 object-cache-size *size*;
 package *package-name*;
 policy-db-size *size*;
 wired-process-mem-size *size*;
 syslog {
 facility severity;
 }
 }

Hierarchy Level [edit chassis fpc *slot-number* pic *slot-number* adaptive-services service-package]

Release Information Statement introduced in JUNOS Release 9.0.
 object-cache-size option introduced in JUNOS Release 9.1.
 forwarding-db-size, syslog, facility, and severity options introduced in JUNOS Release 9.2.
 policy-db-size and wired-process-mem-size options introduced in JUNOS Release 9.3.

Description Configure an SDK application on a PIC.

Options control-cores *control-number*—Number of cores you want to specify as control cores, which are cores dedicated to run control functionality (application control). At least one core must be a control core.

Range: 1 through 8

data-cores *data-number*—Number of cores you want to specify as data cores, which are cores dedicated to processing data for the application (application data).

data-flow-affinity—Enable flow affinity distribution for packets over data CPUs on the PIC. Once enabled, the default behavior distributing data packets changes from a round-robin distribution to a flow affinity distribution based on a hash distribution. Adding or deleting this statement will cause the PIC to reboot.

Range: 0 through 7 (recommended minimum is 5).

forwarding-db-size *size*—Size of the forwarding database (FDB), in megabytes (MB).

Range: 0 through 1280

object-cache-size *size*—Size of the object cache, in MB. Only values in increments of 128 MB are allowed.

Range: For MultiServices 100 PIC, 128 through 512. If the PIC is configured with a wired-process-mem-size of 512, the maximum object-cache-size is 128 MB.

Range: For MultiServices 400 PIC, 128 through 1280. If the PIC is configured with a wired-process-mem-size of 512, the maximum object-cache-size is 512 MB.

package *package-name*—Name of the SDK application package to be installed on the PIC. Up to eight packages can be installed on a PIC.

`policy-db-size size`—Size of the policy database, in MB.

Range: Range: 0 through 1280

`wired-process-mem-size size`—Size of the wired process memory, in MB.

Range: For MultiServices 100 PIC and MultiServices 400 PIC, 0 through 512

The remaining statements are explained separately in this collection of topics.

Usage Guidelines See “Configuring the MultiServices PIC for JUNOS SDK Applications” on page 4.

Required Privilege Level `interface`—To view this statement in the configuration.
`interface-control`—To add this statement to the configuration.

Related Topics `syslog`

extension-service

Syntax `extension-service service-name {
 provider-specific rules;
 }`

Hierarchy Level `[edit forwarding-options sampling output]
 [edit services service-set service-set-name],`

Release Information Statement introduced in JUNOS Release 9.0.

Description Define a service set or traffic monitoring for JUNOS SDK applications using application-specific configuration guidelines.

Options `provider-specific rules`—Provider-specific subhierarchy for services and service sets. See the application-specific documentation for details.

Usage Guidelines See “SDK Services Configuration Guidelines” on page 9.

Required Privilege Level `system`—To view this statement in the configuration.
`system-control`—To add this statement to the configuration.

extensions

Syntax extensions {
 providers {
 provider-id;
 }
}

Hierarchy Level [edit system]

Release Information Statement introduced in JUNOS Release 9.0.

Description Turn on the SDK service process (ssd) and configure the **provider-id** statement to enable SDK application packages to be deployed and run on the router.

Options providers *provider-id*—Provider ID for the SDK application package. See the application-specific documentation.

Usage Guidelines See “Enabling the SSD and SDK Application Deployment” on page 4.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

process-monitor

Syntax

```
process-monitor {
  disable;
  traceoptions {
    file;
    flag flag;
    level level;
    no-remote-trace;
  }
}
```

Hierarchy Level [edit system processes]

Release Information Statement introduced in JUNOS Release 9.0.

Description Configure tracing options for the process health monitor (pmond).

Options disable—Disable the health monitor.

The remaining statements are explained separately in this collection of topics.

Usage Guidelines See “Tracing Process Monitoring Operations for JUNOS SDK Applications” on page 21.

Required Privilege Level admin—To view this statement in the configuration.
admin-control—To add this statement to the configuration.

Related Topics traceoptions (Process Monitor)

resource-cleanup

Syntax resource-cleanup {
 disable;
 traceoptions {
 file;
 flag *flag*;
 level *level*;
 no-remote-trace;
 }
 }

Hierarchy Level [edit system processes]

Release Information Statement introduced in JUNOS Release 9.3.

Description Selectively turn on or off the debugging of trace messages for the resource cleanup process.

Options disable—Disable the resource cleanup process.

The remaining statements are explained separately in this collection of topics.

Usage Guidelines See “Tracing System Resource Cleanup Operations for JUNOS SDK Applications” on page 22.

Required Privilege Level trace—To view this statement in the configuration.
 trace-control—To add this statement to the configuration.

Related Topics traceoptions (Resource Cleanup)

service-order

Syntax	<pre> service-order { forward-flow [service-name1 service-name2]; reverse-flow [service-name1 service-name2]; } </pre>
Hierarchy Level	[edit services service-set <i>service-set-name</i>]
Release Information	Statement introduced in JUNOS Release 9.3.
Description	Define the order of services in service set to be applied to traffic coming to the PIC.
Options	<p>forward-flow—Order of services in service set to be applied in forward flow.</p> <p>reverse-flow—Order of services in service set to be applied in reverse flow. If you want the order to be the reverse of that specified for forward flow, this is optional. However, if, for example, you want the order to be the same regardless of direction of flow, you must include this statement.</p>
Usage Guidelines	See “JUNOS SDK Service Sets Overview” on page 9.
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Topics	extension-service

syslog

Syntax	<pre>syslog { facility severity; }</pre>
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>slot-number</i> adaptive-services service-package extension-provider]
Release Information	Statement introduced in JUNOS Release 9.2.
Description	Enable PIC system logging to record or view system log messages on a specific PIC. The system log information is passed to the kernel for logging in the <code>/var/log/messages</code> directory.
Options	<p><i>facility</i>—Group of messages that are either generated by the same software process or concern a similar condition or activity. Possible values:</p> <ul style="list-style-type: none"> ■ pfe ■ external <p><i>severity</i>—Classification of effect on functioning. Possible values are the same as for the native JUNOS software. Possible values include the following:</p> <ul style="list-style-type: none"> ■ any—Include all severity levels. ■ none—Disable logging of the associated facility to a destination. ■ emergency—System panic or other condition that causes the routing platform to stop functioning. ■ alert—Conditions that require immediate correction, such as a corrupted system database. ■ critical—Critical conditions, such as hard errors. ■ error—Error conditions that generally have less serious consequences than errors in the emergency, alert, and critical levels. ■ warning—Conditions that warrant monitoring. ■ notice—Conditions that are not errors but might warrant special handling. ■ info—Events or nonerror conditions of interest.
Usage Guidelines	“Configuring the MultiServices PIC for JUNOS SDK Applications” on page 4.
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Topics	extension-provider

traceoptions

- traceoptions (Process Monitor) on page 44
- traceoptions (Resource Cleanup) on page 46

traceoptions (Process Monitor)

Syntax traceoptions {
 file;
 flag *flag*;
 level *level*;
 no-remote-trace;
 }

Hierarchy Level [edit system processes process-monitor]

Release Information Statement introduced in JUNOS Release 9.0.

Description Enable tracing options for the process health monitor (pmond).

Options file—Specify trace file information. You can include the following options:

- **files *number***—(Optional) Maximum number of trace files. When a trace file named *trace-file* reaches its maximum size, it is renamed *trace-file.0*, then *trace-file.1*, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum number of files, you also must specify a maximum file size with the **size** option and a filename.

- **match *regex***—(Optional) Refine the output to include lines that contain the regular expression.
- **size *size***—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named *trace-file* reaches this size, it is renamed *trace-file.0*. When the *trace-file* again reaches its maximum size, *trace-file.0* is renamed *trace-file.1* and *trace-file* is renamed *trace-file.0*. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.
- **world-readable | no-world-readable**—(Optional). Grant all users permission to read log files, or restrict the permission only to the **root** user and users who have the JUNOS maintenance permission.

flag *flag*—Specify which tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all**—Enable all trace options flags.
- **events**—Trace process state change and cleanup events.
- **gencfg**—Trace GENCFG blobs recorded for cleanup.
- **module**—Trace module code.
- **sysvsem**—Trace SYSV semaphores recorded for cleanup.
- **sysvshm**—Trace SYSV shared memory segments recorded for cleanup.
- **tracking**—Trace tracking code.

- `ui`—Trace user interface operations.

`level level`—Specify the level of debugging output:

- `all`—Match all levels.
- `error`—Match error conditions.
- `info`—Match informational messages.
- `notice`—Match conditions that warrant special handling (but are not errors).
- `verbose`—Match verbose messages.
- `warning`—Match warning messages.

`no-remote-trace`—Disable remote tracing.

Usage Guidelines See `traceoptions (Process Monitor)`.

Required Privilege Level `system`—To view this statement in the configuration.
`system-control`—To add this statement to the configuration.

traceoptions (Resource Cleanup)

Syntax traceoptions {
 file;
 flag *flag*;
 level *level*;
 no-remote-trace;
 }

Hierarchy Level [edit system processes resource-cleanup]

Release Information Statement introduced in JUNOS Release 9.3.

Description Enable debugging tracing for resource cleanup process.

Options file—Specify trace file information. You can include the following options:

- **files *number***—(Optional) Maximum number of trace files. When a trace file named *trace-file* reaches its maximum size, it is renamed *trace-file.0*, then *trace-file.1*, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum number of files, you also must specify a maximum file size with the **size** option and a filename.

- **match *regex***—(Optional) Refine the output to include lines that contain the regular expression.
- **size *size***—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named *trace-file* reaches this size, it is renamed *trace-file.0*. When the *trace-file* again reaches its maximum size, *trace-file.0* is renamed *trace-file.1* and *trace-file* is renamed *trace-file.0*. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.
- **world-readable | no-world-readable**—(Optional). Grant all users permission to read log files, or restrict the permission only to the **root** user and users who have the JUNOS maintenance permission.

flag *flag*—Specify which tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all**—Enable all trace options flags.
- **events**—Trace process state change and cleanup events.
- **gencfg**—Trace GENCFG blobs recorded for cleanup.
- **module**—Trace module code.
- **sysvsem**—Trace SYSV semaphores recorded for cleanup.
- **sysvshm**—Trace SYSV shared memory segments recorded for cleanup.
- **tracking**—Trace tracking code.

- `ui`—Trace user interface operations.

`level level`—Specify the level of debugging output:

- `all`—Match all levels.
- `error`—Match error conditions.
- `info`—Match informational messages.
- `notice`—Match conditions that warrant special handling (but are not errors).
- `verbose`—Match verbose messages.
- `warning`—Match warning messages.

`no-remote-trace`—Disable remote tracing.

Usage Guidelines See “Tracing System Resource Cleanup Operations for JUNOS SDK Applications” on page 22.

Required Privilege Level `trace`—To view this statement in the configuration.
`trace-control`—To add this statement to the configuration.

Related Topics `resource-cleanup`

Chapter 9

SDK Operational Command Reference

Operational mode commands show you the current status of the router interfaces, chassis, protocols, and system information and are used to monitor and troubleshoot configurations.

The operational commands described here are relevant to the configuration of SDK applications. For JUNOS operational commands, see the JUNOS command references.

clear interfaces statistics (SDK)

Syntax	clear interfaces statistics (all <i>interface-name</i>)
Release Information	For routers running JUNOS SDK applications, support for rms interfaces added in JUNOS Release 9.5.
Description	Clear interface statistics. When the show interfaces statistics command is next issued, the output will show the packets received since the last time the clear interfaces statistics command was issued. However, after a graceful Routing Engine switchover (GRES), issuing the show interfaces statistics command will show cumulative statistics.
Options	all —Clear statistics on all interfaces. <i>interface-name</i> —Clear statistics on the named interface.
Required Privilege Level	clear
Output Fields	There is no output for this command.
Sample Output	user@host> clear interfaces statistics rms0

clear services stateful-firewall flows (SDK)

Syntax	clear services stateful-firewall flows <interface interface-name>
Release Information	For routers running JUNOS SDK applications, support for ms- interfaces added in JUNOS Release 9.5.
Description	Remove established flows from the flow table. For this commands's usage in other contexts, see the <i>JUNOS System Basics and Services Command Reference</i> .
Options	none—Clear all stateful firewall flows. interface interface-name—(Optional)Clear stateful firewall flows for the named interface.
Required Privilege Level	clear
Output Fields	There is no output for this command.
Sample Output	user@host> clear services stateful-firewall flows

request interface (revert | switchover) (SDK)

Syntax	<code>request interface (revert switchover) rmsnumber</code>
Release Information	For routers running JUNOS SDK applications, support for rms interfaces added in JUNOS Release 9.5.
Description	<p>Manually revert to the primary interface or switch over to the secondary interface. After the switchover, it is recommended to take the old active PIC offline so it comes up fresh as a new backup.</p> <p>For this command's usage in other contexts, see the <i>JUNOS Interfaces Command Reference</i>.</p>
Options	<p><code>revert</code>—Restore active processing to the primary MultiServices PIC.</p> <p><code>switchover</code>—Transfer active processing to the secondary (backup) MultiServices PIC.</p> <p><code>rmsnumber</code>—Number identifying the rms interface.</p>
Required Privilege Level	view
Output Fields	<p>One of two outputs are possible:</p> <ul style="list-style-type: none"> ■ request succeeded ■ error: command invalid for current state
request interface switchover	<pre>user@host> request interface switchover rms0 request succeeded</pre>
request interface revert	<pre>user@host> request interface revert rms0 request succeeded</pre>
request interface revert repeated	<pre>user@host> request interface revert rms0 error: command invalid for current state</pre>

show chassis pic (SDK)

Syntax	show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i>
Release Information	Support for JUNOS SDK applications added in JUNOS Release 8.4.
Description	For PICs with SDK application packages installed, the <code>show chassis pic</code> command displays <code>Extension-provider</code> in the <code>Package</code> field. For more information about this command, see the <i>JUNOS System Basics and Services Command Reference</i> .
Options	See the <code>show chassis pic</code> command in the <i>JUNOS System Basics and Services Command Reference</i> .
Required Privilege Level	view
List of Sample Output	show chassis pic on page 53
Output Fields	For a description of the output fields, see the output fields table for the <code>show chassis pic</code> command in the <i>JUNOS System Basics and Services Command Reference</i> .
show chassis pic	<pre> user@host> show chassis pic pic-slot 1 fpc-slot 1 FPC slot 1, PIC slot 1 information: Type MultiServices 100 State Online PIC version 1.5 Uptime 5 hours, 59 minutes, 34 seconds Package Extension-provider </pre>

show extension-provider system connections

Syntax show extension-provider system connections
 <extensive>
 <inet | inet6>
 <interface>
 <show-routing-instances>

Release Information Command introduced in JUNOS Release 9.1.

Description Show connection activity on the extension provider PIC. This command functions similarly to show system connections command.

Options extensive—(Optional) Display exhaustive system process information.
 inet | inet6—(Optional) Display IPv4 connections or IPv6 connections, respectively.
 interface—(Optional) Display the name of the extension provider interface.
 show-routing-instances—(Optional) Display routing instances.

Required Privilege Level view

List of Sample Output show extension-provider system connections on page 54
 show extension-provider system connections extensive interface on page 55
 show extension-provider system connections inet on page 55
 show extension-provider system connections inet6 on page 55
 show extension-provider system connections interface on page 55
 show extension-provider system connections show-routing-instances on page 56
 show extension-provider system connections show-routing-instances interface
 inet6 on page 56

Output Fields For a description of the output fields, see the output fields table for the show system connections command in the *JUNOS System Basics and Services Command Reference*.

```

show extension-provider system connections user@host> show extension-provider system connections
Interface: ms-0/0/0
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address          Foreign Address         (state)
tcp4      0      0 20.0.0.16.32004        20.0.0.1.64292         ESTABLISHED
tcp4      0      0 20.0.0.16.3000         20.0.0.1.58036         ESTABLISHED
tcp4      0      0 20.0.0.16.59517        20.0.0.1.3000          ESTABLISHED
tcp4      0      0 *.3000                  *.*                     LISTEN
tcp4      0      0 *.32004                  *.*                     LISTEN
tcp4    66312  0 20.0.0.16.59592        20.0.0.1.32003         ESTABLISHED
tcp4      0      0 *.23                     *.*                     LISTEN
tcp4      0      0 *.33005                  *.*                     LISTEN
tcp4      0      0 128.0.1.16.49900       128.0.0.1.6234         ESTABLISHED
udp4      0      0 *.842                    *.*                     LISTEN
udp4      0      0 127.0.0.1.123          *.*                     LISTEN
udp4      0      0 *.123                    *.*                     LISTEN
udp46     0      0 *.514                    *.*                     LISTEN
udp4      0      0 *.514                    *.*                     LISTEN
Interface: ms-0/2/0
Active Internet connections (including servers)
    
```

```

Proto Recv-Q Send-Q Local Address          Foreign Address        (state)
tcp4    0      0 20.0.0.18.32004       20.0.0.1.62402        ESTABLISHED
tcp4    0      0 *.33005                *.*                    LISTEN
tcp4    0      0 128.0.3.16.59592     128.0.0.1.6234        ESTABLISHED
tcp4    0      0 *.23                    *.*                    LISTEN
tcp4    0      0 *.32004                *.*                    LISTEN
tcp4    0      0 20.0.0.18.49900      20.0.0.1.32003        ESTABLISHED
udp4    0      0 *.789                   *.*                    LISTEN
udp4    0      0 127.0.0.1.123        *.*                    LISTEN
udp4    0      0 *.123                   *.*                    LISTEN
udp46   0      0 *.514                   *.*                    ESTABLISHED
udp4    0      0 *.514                   *.*                    LISTEN

```

show extension-provider system connections extensive interface user@host> **show extension-provider system connections extensive interface ms-0/2/0**
Interface: ms-0/2/0
Active Internet connections (including servers)

```

Proto Recv-Q Send-Q Local Address          Foreign Address        (state)
tcp4    0      0 20.0.0.18.32004       20.0.0.1.49792        ESTABLISHED
sndsbcc: 0 sndsbmbcnt: 0 sndsbmbmax: 265248
sndsblowat: 2048 sndsbhiwat: 33156
rcvsbcc: 0 rcvsbmbcnt: 0 rcvsbmbmax: 530496
rcvsblowat: 1 rcvsbhiwat: 66312
proc id: 1 proc name:
  iss: 4025626166 sndup: 4025626167
  snduna: 4025626167 sndnxt: 4025626167 sndwnd: 66312
  sndmax: 4025626167 sndcwnd: 131070 sndssthresh: 1073725440
  irs: 3544420903 rcvup: 3544420904
  rcvnxt: 3544421176 rcvadv: 3544487488 rcvwnd: 66312
  rtt: 0 srtt: 64 rttv: 16
  rxtcur: 1200 rxtshift: 0 rtseq: 0
  rttmin: 1000 mss: 1228
Flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x20003e0]
...

```

show extension-provider system connections inet The output for the show extension-provider system connections inet command is identical to that for the show extension-provider system connections command. For sample output, see show extension-provider system connections on page 54.

show extension-provider system connections inet6 user@host> **show extension-provider system connections inet6**
Interface: ms-0/0/0
Active Internet connections (including servers)

```

Proto Recv-Q Send-Q Local Address          Foreign Address        (state)
udp6    0      0 *.123                   *.*                    LISTEN
udp46   0      0 *.514                   *.*                    LISTEN
Interface: ms-0/2/0
Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address          Foreign Address        (state)
udp6    0      0 *.123                   *.*                    LISTEN
udp46   0      0 *.514                   *.*                    LISTEN

```

show extension-provider system connections interface user@host> **show extension-provider system connections interface ms-0/2/0**
Interface: ms-0/2/0
Active Internet connections (including servers)

```

Proto Recv-Q Send-Q Local Address          Foreign Address        (state)
tcp4    0      0 20.0.0.18.32004       20.0.0.1.59521        ESTABLISHED
tcp4    0      0 *.33005                *.*                    LISTEN
tcp4    0      0 128.0.3.16.51534     128.0.0.1.6234        ESTABLISHED
tcp4    0      0 *.23                    *.*                    LISTEN

```

```

tcp4      0      0  *.32004          *.*              LISTEN
tcp4      0      0  20.0.0.18.61044  20.0.0.1.32003  ESTABLISHED
udp4      0      0  *.914            *.*             
udp4      0      0  127.0.0.1.123    *.*             
udp4      0      0  *.123            *.*             
udp46     0      0  *.514            *.*             
udp4      0      0  *.514            *.*             
    
```

show extension-provider system connections show-routing-instances

```

user@host> show extension-provider system connections show-routing-instances

Interface: ms-0/0/0
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address Foreign Address Routing Instance (state)
tcp4    0      0  20.0.0.16.32004  20.0.0.1.52590 __juniper_private2__ ESTABLISHED
tcp4    0      0  20.0.0.16.3000   20.0.0.1.58036 __juniper_private2__ ESTABLISHED
tcp4    0      0  20.0.0.16.59517  20.0.0.1.3000  __juniper_private2__ ESTABLISHED
tcp4    0      0  *.3000           *.*             __juniper_private2__ LISTEN
tcp4    0      0  *.32004          *.*             __juniper_private2__ LISTEN
tcp4  66312  0      0  20.0.0.16.59592  20.0.0.1.32003 __juniper_private2__ ESTABLISHED
tcp4    0      0  *.23             *.*             __juniper_private1__ LISTEN
tcp4    0      0  *.33005          *.*             __juniper_private2__ LISTEN
tcp4    0      0  128.0.1.16.49900 128.0.0.1.6234 __juniper_private1__ ESTABLISHED
udp4    0      0  *.842            *.*             __juniper_private1__
udp4    0      0  127.0.0.1.123    *.*             default
udp4    0      0  *.123            *.*             __juniper_private1__
udp46   0      0  *.514            *.*             default
udp4    0      0  *.514            *.*             __juniper_private1__

Interface: ms-0/2/0
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address Foreign Address Routing Instance (state)
tcp4    0      0  20.0.0.18.32004  20.0.0.1.54602 __juniper_private2__ ESTABLISHED
tcp4    0      0  *.33005          *.*             __juniper_private2__ LISTEN
tcp4    0      0  128.0.3.16.59592 128.0.0.1.6234 __juniper_private1__ ESTABLISHED
tcp4    0      0  *.23             *.*             __juniper_private1__ LISTEN
tcp4    0      0  *.32004          *.*             __juniper_private2__ LISTEN
tcp4    0      0  20.0.0.18.49900  20.0.0.1.32003 __juniper_private2__ ESTABLISHED
udp4    0      0  *.789            *.*             __juniper_private1__
udp4    0      0  127.0.0.1.123    *.*             default
udp4    0      0  *.123            *.*             __juniper_private1__
udp46   0      0  *.514            *.*             default
udp4    0      0  *.514            *.*             __juniper_private1__
    
```

show extension-provider system connections show-routing-instances interface inet6

```

user@host> show extension-provider system connections show-routing-instances
interface ms-0/0/0 inet6

Interface: ms-0/0/0
Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address Foreign Address Routing Instance
(state)
udp6      0      0  *.123            *.*             default
udp46     0      0  *.514            *.*             default
    
```

show extension-provider system packages

Syntax	show extension-provider system packages <detail> <interface>
Release Information	Command introduced in JUNOS Release 9.1.
Description	Show packages loaded on the extension provider PIC. This command functions similarly to <code>show system software</code> command.
Options	detail—(Optional) Display detailed output. interface—(Optional) Display the name of the extension provider interface.
Required Privilege Level	view
List of Sample Output	show extension-provider system packages on page 57 show extension-provider system packages detail on page 57 show extension-provider system packages interface on page 58
Output Fields	Output field descriptions to be provided.
show extension-provider system packages	<pre> user@host> show extension-provider system packages Interface: ms-0/0/0 jmpsdk JUNOS MPSDK Base OS boot [9.2R1.3] jnx-flow-data-pic JUNOS SDK JNX-FLOW Dataplane Component [9.2I20080801_1059] Interface: ms-0/2/0 jmpsdk JUNOS MPSDK Base OS boot [9.2R1.3] </pre>
show extension-provider system packages detail	<pre> user@host> show extension-provider system packages detail Interface: ms-0/0/0 Information for jmpsdk: Comment: JUNOS MPSDK Base OS boot [9.2R1.3] Description: JUNOS MPSDK Base OS Copyright (c) 1996-2008, Juniper Networks, Inc. All rights reserved. Software version: 9.2R1.3 This package contains the MPSDK base operating system components. Information for jnx-flow-data-pic: Comment: JUNOS SDK JNX-FLOW Dataplane Component [9.2I20080801_1059] Description: JUNOS SDK JNX-FLOW Data Component Package Copyright (c) 1996-2008, Juniper Networks, Inc. All rights reserved. Software version: 9.2I20080801_1059 This package contains SDK JNX-FLOW dataplane component Interface: ms-0/2/0 Information for jmpsdk: Comment: JUNOS MPSDK Base OS boot [9.2R1.3] Description: JUNOS MPSDK Base OS </pre>

Copyright (c) 1996-2008, Juniper Networks, Inc.
All rights reserved.
Software version: 9.2R1.3
This package contains the MPSDK base operating system components.

```
show extension-provider user@host> show extension-provider system packages interface ms-0/2/0  
system packages Interface: ms-0/2/0  
interface jmpsdk JUNOS MPSDK Base OS boot [9.2R1.3]
```

show extension-provider system processes

Syntax	show extension-provider system processes <brief detail extensive> <interface> <wide>
Release Information	Command introduced in JUNOS Release 9.1.
Description	Show system process table on the extension provider PIC.
Options	brief detail extensive—(Optional) Display the specified level of output. interface—(Optional) Name of the extension provider interface. wide—(Optional) Display information even if it is wider than 80 columns.
Required Privilege Level	view
List of Sample Output	show extension-provider system processes on page 59 show extension-provider system processes brief on page 60 show extension-provider system processes detail on page 60 show extension-provider system processes extensive on page 61 show extension-provider system processes interface on page 61 show extension-provider system processes wide on page 62
Output Fields	For a description of the output fields, see the Output Fields table for the show system processes command in the <i>JUNOS System Basics and Services Command Reference</i> .
show extension-provider system processes	user@host> show extension-provider system processes

```

Interface: ms-0/0/0
  PID  TT  STAT      TIME  COMMAND
   0  ??  Wls      0:00.00 [swapper]
   1  ??  Sls      0:00.75 /sbin/init --
   2  ??  DL       0:05.91 [g_event]
   3  ??  DL       0:03.96 [g_up]
   4  ??  DL       0:04.24 [g_down]
   5  ??  DL       0:00.00 [kqueue taskq]
   6  ??  DL       0:00.00 [thread taskq]
   9  ??  DL       0:00.15 [pagedaemon]
  10  ??  DL       0:00.00 [ktrace]
  11  ??  RL       0:00.00 [idle: cpu31]
  12  ??  RL       0:00.00 [idle: cpu30]
  13  ??  RL       0:00.00 [idle: cpu29]
  14  ??  RL       0:00.13 [idle: cpu28]
  15  ??  RL       0:00.00 [idle: cpu27]
  16  ??  RL       0:00.00 [idle: cpu26]
  17  ??  RL       0:00.00 [idle: cpu25]
  18  ??  RL       0:00.13 [idle: cpu24]
  19  ??  RL       0:00.00 [idle: cpu23]
  20  ??  RL       0:00.00 [idle: cpu22]
  21  ??  RL       0:00.00 [idle: cpu21]
  22  ??  RL       0:00.13 [idle: cpu20]
  23  ??  RL       0:00.00 [idle: cpu19]
  24  ??  RL       0:00.00 [idle: cpu18]

```

```

25 ?? RL    0:00.00 [idle: cpu17]
26 ?? RL    0:00.13 [idle: cpu16]
27 ?? RL    0:00.00 [idle: cpu15]
28 ?? RL    0:00.00 [idle: cpu14]
29 ?? RL    0:29.15 [idle: cpu13]
30 ?? RL    443:15.66 [idle: cpu12]
31 ?? RL    0:29.15 [idle: cpu11]
32 ?? RL    0:29.14 [idle: cpu10]
. . .

```

show extension-provider system processes brief

```

user@host> show extension-provider system processes brief
Interface: ms-0/0/0
last pid: 20238; load averages: 11.64, 11.71, 11.74 up 0+07:24:28 22:23:18
91 processes: 45 running, 34 sleeping, 12 waiting
Mem: 8924K Active, 1768K Inact, 152M Wired, 156K Cache, 77M Buf, 200M Free
Swap:
Interface: ms-0/2/0
last pid: 13025; load averages: 4.16, 4.08, 4.02 up 0+04:43:20 22:23:18
88 processes: 37 running, 32 sleeping, 19 waiting
Mem: 6488K Active, 1212K Inact, 156M Wired, 24K Cache, 75M Buf, 460M Free
Swap:

```

show extension-provider system processes detail

```

user@host> show extension-provider system processes detail
Interface: ms-0/0/0

```

PID	UID	PPID	CPU	PRI	NI	RSS	WCHAN	STARTED	TT	STAT	TIME	COMMAND
20	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
21	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
22	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.13	[idle: cp
28	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
15	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
19	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
11	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
12	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
13	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
16	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
17	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
18	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.13	[idle: cp
26	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.13	[idle: cp
68	0	0	0	-16	0	8	-	2:59PM	??	RL	0:00.00	[pot: cpu
70	0	0	0	-16	0	8	-	2:59PM	??	RL	0:00.00	[poller:
14	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.13	[idle: cp
24	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
25	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
27	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
69	0	0	0	-16	0	8	-	2:59PM	??	RL	0:00.00	[poller:
23	0	0	0	171	0	8	-	2:59PM	??	RL	0:00.00	[idle: cp
30	0	0	0	171	0	8	-	2:59PM	??	RL	444:58.30	[idle: cp
259	0	1	0	139	0	840	-	2:59PM	??	R	3111:46.43	/opt/sdk/
120	0	1	0	139	0	652	select	2:59PM	??	Ss	154:48.02	syslogd -
142	0	1	0	8	0	1132	wait	2:59PM	??	S	122:57.26	/usr/sbin
20287	0	142	0	109	0	1100	-	10:24PM	??	R	0:00.08	/bin/ps -
0	0	0	0	-16	0	0	-	2:59PM	??	Wls	0:00.00	[swapper]
1	0	0	0	8	0	1152	wait	2:59PM	??	SLs	0:00.75	/sbin/ini

**show extension-provider
system processes
extensive**

```

user@host> show extension-provider system processes extensive
Interface: ms-0/0/0
last pid: 20384; load averages: 11.51, 11.63, 11.69 up 0+07:27:42 22:26:32
91 processes: 45 running, 34 sleeping, 12 waiting
Mem: 8924K Active, 1784K Inact, 152M Wired, 156K Cache, 77M Buf, 200M Free
Swap:
  PID USERNAME  THR PRI NICE   SIZE    RES STATE  C  TIME  WCPU COMMAND
  259 root          8 139   0   643M   840K CPU13  d 52.1H 658.40% jnx-flow-data

    22 root          1 171  52    OK     8K CPU20  14  0:00 99.22% idle: cpu20
    21 root          1 171  52    OK     8K CPU21   0  0:00 99.22% idle: cpu21
    20 root          1 171  52    OK     8K CPU22   0  0:00 99.22% idle: cpu22
    15 root          1 171  52    OK     8K CPU27   0  0:00 98.49% idle: cpu27
    19 root          1 171  52    OK     8K CPU23   0  0:00 97.71% idle: cpu23
    28 root          1 171  52    OK     8K CPU14   0  0:00 97.71% idle: cpu14
    18 root          1 171  52    OK     8K CPU24  18  0:00 96.97% idle: cpu24
    26 root          1 171  52    OK     8K CPU16  10  0:00 96.97% idle: cpu16
    70 root          1 -16   0    OK     8K CPU8    0  0:00 96.97% poller: cpu8
    68 root          1 -16   0    OK     8K CPU1    0  0:00 96.97% pot: cpu1
    25 root          1 171  52    OK     8K CPU17   0  0:00 96.97% idle: cpu17
    17 root          1 171  52    OK     8K CPU25   0  0:00 96.97% idle: cpu25
    13 root          1 171  52    OK     8K CPU29   0  0:00 96.97% idle: cpu29
    12 root          1 171  52    OK     8K CPU30   0  0:00 96.97% idle: cpu30
    11 root          1 171  52    OK     8K CPU31   0  0:00 96.97% idle: cpu31
    16 root          1 171  52    OK     8K CPU26   0  0:00 96.97% idle: cpu26
    14 root          1 171  52    OK     8K CPU28  1c  0:00 96.24% idle: cpu28

Interface: ms-0/2/0
last pid: 13175; load averages: 4.00, 4.04, 4.00 up 0+04:46:34 22:26:32
88 processes: 37 running, 32 sleeping, 19 waiting
Mem: 6488K Active, 1228K Inact, 156M Wired, 24K Cache, 75M Buf, 460M Free
Swap:
  PID USERNAME  THR PRI NICE   SIZE    RES STATE  C  TIME  WCPU COMMAND
    12 root          1 171  52    OK     8K CPU30   0  0:00 98.49% idle: cpu30
    23 root          1 171  52    OK     8K CPU19   0  0:00 98.49% idle: cpu19
    20 root          1 171  52    OK     8K CPU22   0  0:00 98.49% idle: cpu22
    21 root          1 171  52    OK     8K CPU21   0  0:00 98.49% idle: cpu21
    75 root          1 -16   0    OK     8K CPU16   4  0:00 97.71% poller: cpu16
    76 root          1 -16   0    OK     8K CPU20   4  0:00 97.71% poller: cpu20
    13 root          1 171  52    OK     8K CPU29   0  0:00 97.71% idle: cpu29
    14 root          1 171  52    OK     8K CPU28  1c  0:00 96.24% idle: cpu28
    77 root          1 -16   0    OK     8K CPU24   4  0:00 96.24% poller: cpu24
    16 root          1 171  52    OK     8K CPU26   0  0:00 96.24% idle: cpu26
    11 root          1 171  52    OK     8K CPU31   0  0:00 96.24% idle: cpu31
    24 root          1 171  52    OK     8K CPU18   0  0:00 96.24% idle: cpu18
    25 root          1 171  52    OK     8K CPU17   0  0:00 96.24% idle: cpu17
    17 root          1 171  52    OK     8K CPU25   0  0:00 96.24% idle: cpu25
    19 root          1 171  52    OK     8K CPU23   0  0:00 96.24% idle: cpu23
    29 root          1 171  52    OK     8K CPU13  d 284:04 93.95% idle: cpu13
    30 root          1 171  52    OK     8K CPU12  c 284:05 92.48% idle: cpu12
    33 root          1 171  52    OK     8K CPU9    9 283:52 92.48% idle: cpu9

```

**show extension-provider
system processes
interface**

The output for the `show extension-provider system processes interface` command is identical to that for the `show extension-provider system processes` command except that the output for the former is for the specified interface only and the output for the latter is for all ms interfaces. For sample output, see `show extension-provider system processes` on page 59.

show extension-provider system processes wide user@host> **show extension-provider system processes wide**

```
Interface: ms-1/0/0
  PID TT  STAT      TIME PROVIDER COMMAND
   0 ??  WLS      0:00.00 (null) [swapper]
   1 ??  SLs      0:00.83 /sbin/init --
   2 ??  DL       0:24.86 [g_event]
   3 ??  DL       0:24.52 [g_up]
   4 ??  DL       0:24.38 [g_down]
   5 ??  DL       0:00.00 [thread taskq]
   6 ??  DL       0:00.00 [kqueue taskq]
   9 ??  DL       0:00.53 [pagedaemon]
  10 ??  DL       0:00.00 [ktrace]
  11 ??  RL       0:00.00 [idle: cpu31]
  12 ??  RL       0:00.00 [idle: cpu30]
  13 ??  RL       0:00.00 [idle: cpu29]
  14 ??  RL       0:00.17 [idle: cpu28]
  15 ??  RL       0:00.00 [idle: cpu27]
  16 ??  RL       0:00.00 [idle: cpu26]
  17 ??  RL       0:00.00 [idle: cpu25]
  18 ??  RL       0:00.17 [idle: cpu24]
  19 ??  RL       0:00.00 [idle: cpu23]
  20 ??  RL       0:00.00 [idle: cpu22]
  21 ??  RL       0:00.00 [idle: cpu21]
  22 ??  RL       0:00.17 [idle: cpu20]
  23 ??  RL       0:00.00 [idle: cpu19]
  24 ??  RL       0:00.00 [idle: cpu18]
  25 ??  RL       0:00.00 [idle: cpu17]
  26 ??  RL       0:00.17 [idle: cpu16]
  ...
```

show extension-provider system processes wide detail user@host> **show extension-provider system processes wide detail**

```
Interface: ms-0/2/0
  PID UID PPID CPU PRI NI  RSS WCHAN  STARTED TT  STAT TIME COMMAND PROVIDER
  12  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu30]
  20  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu22]
  23  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu19]
  21  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu21]
  25  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu17]
  11  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu31]
  13  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu29]
  14  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.36 [idle: cpu28]
  16  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu26]
  17  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu25]
  19  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu23]
  24  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu18]
  75  0  0  0  -16  0  8 -  5:40PM ??  RL  0:00.00 [poller: cpu16]
  76  0  0  0  -16  0  8 -  5:40PM ??  RL  0:00.00 [poller: cpu20]
  77  0  0  0  -16  0  8 -  5:40PM ??  RL  0:00.00 [poller: cpu24]
  29  0  0  0  171  0  8 -  5:40PM ??  RL 288:22.84 [idle: cpu13]
  15  0  0  0  171  0  8 -  5:40PM ??  RL  0:00.00 [idle: cpu27]
  74  0  0  0  -16  0  8 -  5:40PM ??  RL  0:00.00 [pot: cpu1]
  33  0  0  0  171  0  8 -  5:40PM ??  RL 288:47.94 [idle: cpu9]
  30  0  0  0  171  0  8 -  5:40PM ??  RL 287:07.79 [idle: cpu12]
  34  0  0  0  171  0  8 -  5:40PM ??  RL 288:57.04 [idle: cpu8]
  37  0  0  0  171  0  8 -  5:40PM ??  RL 288:01.05 [idle: cpu5]
  38  0  0  0  171  0  8 -  5:40PM ??  RL 285:08.89 [idle: cpu4]
  42  0  0  0  171  0  8 -  5:40PM ??  RL 281:47.55 [idle: cpu0]
   0  0  0  0  -16  0  0 -  5:40PM ??  WLS 0:00.00 [swapper] null)
```

```
1 0 0 0 8 0 1144 wait 5:40PM ?? SLs 0:00.58 /sbin/init -  
...
```

show extension-provider system uptime

Syntax	show extension-provider system uptime <interface>
Release Information	Command introduced in JUNOS Release 9.1.
Description	Show uptime on the extension provider PIC.
Options	interface—(Optional) Name of the extension provider interface.
Required Privilege Level	view
List of Sample Output	show extension-provider system uptime on page 64 show extension-provider system uptime interface on page 64
Output Fields	For a description of the output fields, see the Output Fields table for the show system uptime command in the <i>JUNOS System Basics and Services Command Reference</i> .
show extension-provider system uptime	<pre> user@host> show extension-provider system uptime Interface: ms-0/0/0 5:08PM up 26 mins, 0 users, load averages: 0.09, 0.06, 0.04 Interface: ms-0/2/0 5:08PM up 26 mins, 0 users, load averages: 0.15, 0.03, 0.01 </pre>
show extension-provider system uptime interface	<pre> user@host> show extension-provider system uptime interface ms-0/2/0 Interface: ms-0/2/0 5:08PM up 26 mins, 0 users, load averages: 0.15, 0.03, 0.01 </pre>

show extension-provider system virtual-memory

Syntax	show extension-provider system virtual-memory <interface>
Release Information	Command introduced in JUNOS Release 9.1.
Description	Show kernel dynamic memory usage on the extension provider PIC. Display the usage of JUNOS kernel memory listed first by size of allocation and then by type of usage.
Options	interface—(Optional) Name of the extension provider interface.
Required Privilege Level	view
List of Sample Output	show extension-provider system virtual-memory on page 65 show extension-provider system virtual-memory interface on page 66
Output Fields	For a description of the output fields, see Table 4 on page 65. Output fields are listed in the approximate order in which they appear.

Table 4: show extension-provider system virtual-memory Output Fields

Field	Field Description
Size (unlabeled)	Memory block size in bytes.
Type(s) (unlabeled)	Kernel modules that are using the memory blocks. For a definition of each type, see a FreeBSD book.
interrupt	Type of interrupt: <ul style="list-style-type: none"> ■ total—Total number of interrupts for each type. ■ rate—Interrupt rate.
Total	Total of all interrupts.

```

show extension-provider user@host> show extension-provider system virtual-memory
system virtual-memory Interface: ms-0/0/0
    916976 cpu context switches
193097320 device interrupts
    43468 software interrupts
        0 traps
    199882 system calls
        78 kernel threads created
    2416 fork() calls
        0 vfork() calls
        0 rfork() calls
        0 swap pager pageins
        0 swap pager pages paged in
        0 swap pager pageouts
        0 swap pager pages paged out
    1307 vnode pager pageins

```

```

1307 vnode pager pages paged in
    0 vnode pager pageouts
    0 vnode pager pages paged out
    0 page daemon wakeups
    0 pages examined by the page daemon
454 pages reactivated
54109 copy-on-write faults
    11 copy-on-write optimized faults
65858 zero fill pages zeroed
65190 zero fill pages prezeroed
    10 intransit blocking page faults
206484 total VM faults taken
    0 pages affected by kernel thread creation
102942 pages affected by fork()
    0 pages affected by vfork()
    0 pages affected by rfork()
144325 pages freed
    0 pages freed by daemon
102373 pages freed by exiting processes
    1749 pages active
    317 pages inactive
    28 pages in VM cache
38743 pages wired down
51895 pages free
    4096 bytes per page
    0 swap pages used
    0 peak swap pages used
109540 total name lookups
    cache hits (86% pos + 12% neg) system 0% per-directory
    deletions 0%, falsehits 0%, toolong 0%
interrupt          total          rate
clock              177515903    59689
Total              177515903    59689

```

**show extension-provider
system virtual-memory
interface**

```

user@host> show extension-provider system virtual-memory interface ms-0/2/0
Interface: ms-0/2/0
6971866 cpu context switches
757808764 device interrupts
101858 software interrupts
    0 traps
1129382 system calls
    80 kernel threads created
15764 fork() calls
    0 vfork() calls
    0 rfork() calls
    0 swap pager pageins
    0 swap pager pages paged in
    0 swap pager pageouts
    0 swap pager pages paged out
1212 vnode pager pageins
1212 vnode pager pages paged in
    0 vnode pager pageouts
    0 vnode pager pages paged out
    0 page daemon wakeups
    0 pages examined by the page daemon
    420 pages reactivated
354621 copy-on-write faults
    0 copy-on-write optimized faults
430183 zero fill pages zeroed
424776 zero fill pages prezeroed
    1434 intransit blocking page faults

```

```

1332189 total VM faults taken
    0 pages affected by kernel thread creation
648103 pages affected by fork()
    0 pages affected by vfork()
    0 pages affected by rfork()
892030 pages freed
    0 pages freed by daemon
673820 pages freed by exiting processes
    1604 pages active
    309 pages inactive
    6 pages in VM cache
39994 pages wired down
117802 pages free
    4096 bytes per page
    0 swap pages used
    0 peak swap pages used
702497 total name lookups
    cache hits (86% pos + 13% neg) system 0% per-directory
    deletions 0%, falsehits 0%, toolong 0%
interrupt          total      rate
clock              987886798  47811
Total              987886798  47811

```

show interfaces redundancy (SDK)

Syntax show interfaces redundancy

Release Information For routers running JUNOS SDK applications, support for rms interfaces added in JUNOS Release 9.5.

Description Display general information about the MultiServices interfaces redundancy (rms interface).

For this command's usage in other contexts, see the *JUNOS Interfaces Command Reference*.

Required Privilege Level view

Output Fields For a description of the output fields, see the Output Fields table for the show interfaces redundancy command in the *JUNOS Interfaces Command Reference*.

show interfaces redundancy both up

```
user@host> show interfaces redundancy
Interface State          Last change Primary Secondary Current status
rms0      On primary          01:02:45 ms-0/0/0 ms-0/2/0 both up
```

show interfaces redundancy one or both down

```
user@host> show interfaces redundancy
Interface State          Last change Primary Secondary Current status
rms0      Not present
rms1      On secondary    1d 23:56 ms-1/2/0 ms-0/3/0 primary down
rms2      On primary      10:10:27 ms-1/3/0 ms-0/2/0 secondary down
```

show interfaces statistics (SDK)

Syntax	show interface statistics <i>interface-name</i> <brief detail terse>
Release Information	For routers running JUNOS SDK applications, support for rms interfaces added in JUNOS Release 9.5.
Description	Display interface statistics, such as packets received, packets transmitted, and errors. For this command's usage in other contexts, see the <i>JUNOS Interfaces Command Reference</i> .
Options	<i>interface-name</i> —Display statistics for the interface named. brief detail terse—(Optional) Display the specified detail level of output.
Required Privilege Level	view
Output Fields	For descriptions of the output fields see the “Adaptive Services and Redundant Adaptive Services show interfaces Output Fields” table for the “show interfaces (Adaptive Services)” command summary topic in the <i>JUNOS Interfaces Command Reference</i> .
show interfaces statistics	<pre> user@host> show interface statistics rms0 Physical interface: rms0, Enabled, Physical link is Up Interface index: 158, SNMP ifIndex: 149 Type: Adaptive-Services, Link-level type: Adaptive-Services, MTU: 1504, Speed: 1000mbps Device flags : Present Running Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000 Link type : Full-Duplex Link flags : None Last flapped : 2009-01-27 18:17:21 PST (16:29:12 ago) Input rate : 0 bps (0 pps) Output rate : 0 bps (0 pps) Logical interface rms0.1 (Index 74) (SNMP ifIndex 150) Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: Adaptive-Services Bandwidth: 800mbps Input packets : 0 Output packets: 0 Protocol inet, MTU: 1504 Flags: None Addresses, Flags: Is-Primary Local: 1.1.1.1 </pre>
show interfaces statistics brief	<pre> user@host> show interfaces statistivs rms0 brief Physical interface: rms0, Enabled, Physical link is Up Type: Adaptive-Services, Link-level type: Adaptive-Services, MTU: 1504, Clocking: Unspecified, Speed: 1000mbps Device flags : Present Running Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000 </pre>

```
Logical interface rms0.1
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: Adaptive-Services
  inet 1.1.1.1          --> 0/0
```

show interfaces statistics detail

```
user@host> show interfaces statistics detail
Physical interface: rms0, Enabled, Physical link is Up
  Interface index: 158, SNMP ifIndex: 149, Generation: 168
  Type: Adaptive-Services, Link-level type: Adaptive-Services, MTU: 1504,
  Clocking: Unspecified, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped  : 2009-01-27 18:17:21 PST (16:29:22 ago)
  Statistics last cleared: 20-01-27 18:20:31 PST (16:26:12 ago)
  Traffic statistics:
    Input bytes :                84000          0 bps
    Output bytes :                84000          0 bps
    Input packets:                 1000          0 pps
    Output packets:                1000          0 pps
  IPv6 transit statistics:
    Input bytes :                0
    Output bytes :                0
    Input packets:                0
    Output packets:               0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
  Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface rms0.1 (Index 74) (SNMP ifIndex 150) (Generation 143)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: Adaptive-Services
  Bandwidth: 800mbps
  Traffic statistics:
    Input bytes :                84000
    Output bytes :                84000
    Input packets:                 1000
    Output packets:                1000
  Local statistics:
    Input bytes :                0
    Output bytes :                0
    Input packets:                0
    Output packets:               0
  Transit statistics:
    Input bytes :                84000          0 bps
    Output bytes :                84000          0 bps
    Input packets:                 1000          0 pps
    Output packets:                1000          0 pps
  Protocol inet, MTU: 1504, Generation: 154, Route table: 0
  Flags: None
  Addresses, Flags: Is-Primary
    Destination: Unspecified, Local: 1.1.1.1, Broadcast: Unspecified,
```

Generation: 170

```
show interfaces user@host> show interfaces statistics terse rms0 terse  
statistics terse Interface      Admin Link Proto  Local      Remote  
rms0                up    up  
rms0.1              up    up  inet   1.1.1.1    --> 0/0
```

show services stateful-firewall flows (SDK)

Syntax	show services stateful-firewall flows <interface <i>interface-name</i> >
Release Information	For routers running JUNOS SDK applications, support for ms- interfaces added in JUNOS Release 9.5.
Description	Display stateful firewall flow table entries.
Options	none—Display standard information about all stateful firewall flows. interface <i>interface-name</i> —(Optional) Display information about the named interface.
Required Privilege Level	view
Output Fields	Table 5 on page 72 lists the output fields for the show services stateful-firewall flows command. Output fields are listed in the approximate order in which they appear.

Table 5: show services stateful-firewall flows Output Fields

Field	Field Description
Interface	Interface ID.
Service set	Name of service set.
Flow	Protocol used for the flow.
State	Status of the flow.
Dir	Direction of the flow: input (I) and output (O).
Frm count	Number of frames in the flow.

```

show services stateful-firewall flows user@host> show services stateful-firewall flows
Interface: ms-2/2/0, Service ser: sset1
Flow Stats Dir Frm count
TCP 192.1.1.2.37822 -> 192.2.1.2.21 Watch I 16
TCP 192.2.1.2.21 -> 192.1.1.2.37822 Watch O 13
TCP 192.1.1.2.37822 -> 192.2.1.2.40598 Unknown I 2
TCP 192.2.1.2.40598 -> 192.1.1.2.37822 Unknown O 1

```

show services stateful-firewall statistics (SDK)

Syntax	show services stateful-firewall statistics <extensive>
Release Information	For routers running JUNOS SDK applications, support for ms- interfaces added in JUNOS Release 9.5.
Description	Display only rule statistics or rule and application-level gateway (ALG) statistics. For this command's usage in other contexts, see the <i>JUNOS System Basics and Services Command Reference</i> .
Options	none—Display standard information about all stateful firewall statistics. For MultiServices interfaces, standard information is only rule statistics. extensive—(Optional) Display the extensive level of output. For MultiServices interfaces, the extensive level gives just rule and ALG statistics. Other statistics shown do not populate correctly and show all zeroes.
Required Privilege Level	view
Output Fields	Table 6 on page 73 lists the output fields for the show services stateful-firewall statistics command. Output fields are listed in the approximate order in which they appear.

Table 6: show services stateful-firewall statistics Output Fields

Field	Field Description
Interface	Interface ID.
Service set	Name of service set.
Accept	Number of flows accepted.
Discard	Number of flows discarded.
Reject	Number of flows rejected.
Errors	Number of errors.

```

show services      user@host> show services stateful-firewall statistics
stateful-firewall Interface Service set Accept Discard Reject Errors
statistics       ms-5/1/0    sset1      1      1      0      0

```

show system processes (SDK)

Syntax	show system processes <wide>
Release Information	Support for JUNOS SDK applications added in JUNOS Release 9.0.
Description	Display information about software processes that are running on the router.
Options	wide—(Optional) Display process information that might be wider than 80 columns. This option shows the PROVIDER column.
Required Privilege Level	view
List of Sample Output	show system processes on page 74 show system processes wide on page 74
Output Fields	For a description of the output fields, see the Output Fields table for the show system processes command in the <i>JUNOS System Basics and Services Command Reference</i> .

```

show system processes user@host> show system processes
      PID TT  STAT      TIME COMMAND
      ...
        9 ??  DL      0:00.01 [pagedaemon]
      ...
      6463 ??  DL      0:00.18 [md9]
      6738 ??  S       0:00.44 /usr/sbin/mgd -N
      7001 ??  S       0:00.12 /opt/sbin/jnx-exampled -N
      7063 ??  Ss      0:00.03 mgd: (mgd) (regress)/dev/ttyp0 (mgd)

```

```

show system processes user@host> show system processes wide
wide      PID TT  STAT      TIME PROVIDER COMMAND
      ...
        9 ??  DL      0:00.01          [pagedaemon]
      ...
      6463 ??  DL      0:00.18          [md9]
      6738 ??  S       0:00.44          /usr/sbin/mgd -N
      7001 ??  S       0:00.12 jnx          /opt/sbin/jnx-exampled -N
      7063 ??  Ss      0:00.03          mgd: (mgd) (regress)/dev/ttyp0 (mgd)

```

show system processes health

Syntax	show system process health <process-name <i>name</i> pid <i>pid</i> >
Release Information	Command introduced in JUNOS Release 8.5.
Description	Display the resource utilization (health), of all the SDK applications currently running. You can display health information about one specific process by specifying either the process name or the process ID (PID).
Options	<p>process-name <i>name</i>—(Optional) Display health information about the process identified by the process name.</p> <p>pid <i>pid</i>—(Optional) Display health information about the process identified by the PID.</p>
Required Privilege Level	view
List of Sample Output	<p>show system processes health on page 76</p> <p>show system processes health pid on page 76</p> <p>show system processes health process-name on page 77</p>
Output Fields	For a description of the output fields, see Table 7 on page 75. Output fields are listed in the approximate order in which they appear.

Table 7: show system processes health Output Fields

Field Name	Field Description
PID	Process ID, a number that identifies the process.
Provider	Provider prefix. A string that identifies the provider of the SDK application.
Parent process	Process ID of the process that spawned the process in question.
Child processes	Process ID of the process that is launched from the process in question: <ul style="list-style-type: none"> ■ Process ID for child process—A number that identifies the child process. ■ Name of child process—A string that identifies the child process.
CPU accumulated	Maximum amount of CPU time that can be accumulated.
Heartbeat	A regular signal sent from a router to indicate that the router is up and running: <ul style="list-style-type: none"> ■ Interval—Number of seconds between heartbeats. ■ Allowed misses—Number of missed heartbeats allowed before the application restarts. ■ Last seen—Time in seconds when the last heartbeat occurred. ■ Total misses—Number of heartbeats missed so far.

Table 7: show system processes health Output Fields (continued)

Field Name	Field Description
Resource utilization	<p>How memory is divided:</p> <ul style="list-style-type: none"> ■ Area—Segment of memory. ■ Current—Current size of memory segment. ■ Max. allowed—Maximum size allowed for memory segment. ■ data size—Current and maximum sizes of data segment. ■ open files—Number of currently open files and the maximum allowed. ■ resident set size—Current and maximum size of resident set segment. ■ shared memory size—The amount of shared memory the process is using. ■ stack size—Current and maximum sizes of stack segment.

show system processes health

```

user@host> show system processes health
PID: 10075 (jnx-flow-mgmt)
Provider: jnx
Parent process: 1 (init)
CPU accumulated: 0 seconds
Resource utilization:
  Area          Current  Max. allowed
  data size     7KB     32MB
  open files    20      64
  resident set size 12KB    24MB
  shared memory size 4KB
  stack size    2KB     8MB
PID: 420 (jnx-exampled)
Provider: jnx
Parent process: 1 (init)
Child processes: 1
  PID  Process name
  421  jnx-exampled
CPU accumulated: 21 seconds
Heartbeat:
  Interval: 1s
  Allowed misses: 5
  Last seen: 1s ago (0 missed)
  Total misses: 2
Resource utilization:
  Area          Current  Max. allowed
  data size     24KB    16MB
  open files    23      128
  resident set size 1532KB  24MB
  shared memory size 43KB
  stack size    8KB     8MB
    
```

show system processes health pid

The output for the `show system processes health pid pid` command is identical to that for the `show system processes health` command except that health information is displayed for only the process specified by the PID. For sample output, see `show system processes health` on page 76.

show system processes health process-name The output for the `show system processes health process-name` name command is identical to that for the `show system processes health` command except that health information is displayed for only the process named. For sample output, see `show system processes health` on page 76.

show system processes providers

Syntax	show system processes providers
Release Information	Command introduced in JUNOS Release 8.5.
Description	Display information about software processes that are running on the router. The output is similar to that of the <code>show system processes extensive</code> command, but this command displays only provider processes (that is, only external processes). Also, this command's output has an extra column labeled PROVIDER to display the provider prefix.
Required Privilege Level	view
List of Sample Output	show system processes providers on page 78
Output Fields	For a description of the output fields, see the output fields table for the <code>show system processes</code> command in the <i>JUNOS System Basics and Services Command Reference</i> . This table explains all the fields except for PROVIDER which is for the string that is the provider prefix for the SDK application running the process.
show system processes providers	<pre> user@host> show system processes providers last pid: 7014; load averages: 0.19, 0.09, 0.05 up 0+00:57:29 12:54:45 54 processes: 1 running, 53 sleeping Mem: 101M Active, 105M Inact, 31M Wired, 132M Cache, 69M Buf, 369M Free Swap: 1536M Total, 1536M Free PID USERNAME PROVIDER PRI NICE SIZE RES STATE TIME WCPU COMMAND 7001 root jnx 96 0 3240K 2700K select 0:00 0.00% jnx-exampled </pre>

show system resource-cleanup processes

Syntax	show system resource-cleanup processes <detail>
Release Information	Command introduced in JUNOS Release 9.3.
Description	Display the list of processes that have been registered for resource cleanup services.
Options	detail—(Optional) Display the list of processes that have been registered for resource clean up services, along with the resources that have been requested for clean up.
Required Privilege Level	view
List of Sample Output	show system resource-cleanup processes on page 79 show system resource-cleanup processes detail on page 79
Output Fields	For a description of the output fields, see Table 8 on page 79. Output fields are listed in the approximate order in which they appear.

Table 8: show system resource-cleanup processes Output Fields

Field Name	Field Description
PID	Process ID, a number that identifies a process.
Process name	String that identifies the process.
Resources to clean	Resources that have been registered to be cleaned up.

```

show system resource-cleanup processes
user@host> show system resource-cleanup processes
PID      Process name      Resources to clean
420      jnx-exampld      GENCFG, SYSV shared memory

```

```

show system resource-cleanup processes detail
user@host> show system resource-cleanup processes detail
PID      Process name      Resources to clean
420      jnx-exampld      GENCFG blob major ID 0x8000, minor ID 0x0000
          SYSV shared memory ID 65536, key 1108955839
          SYSV shared memory ID 65537, key 1108955837

```

show version (SDK)

Syntax	show version
Release Information	Support for JUNOS SDK applications added in JUNOS Release 8.5.
Description	Display the hostname and version information of the software running on the router. For routers that have SDK application packages installed, the <code>show version</code> command lists those packages.
Required Privilege Level	view
List of Sample Output	show version on page 80
Output Fields	For a description of the output fields, see Table 9 on page 80. Output fields are listed in the approximate order in which they appear.

Table 9: show version Output Fields

Field Name	Field Description
Hostname	Router name.
Model	Router model number.
contents listing (unlabeled)	Package contents installed.

```

show version user@host> show version
Hostname: router1
Model: m10i
JUNOS Base OS boot [I20070611_2103]
JUNOS Base OS Software Suite [8.5I20070611_2103]
JUNOS Kernel Software Suite [8.5I20070611_2103]
JUNOS Crypto Software Suite [8.5I20070611_2103]
JUNOS Packet Forwarding Engine Support (M/T Common) [8.5I20070611_2103]
JUNOS Packet Forwarding Engine Support (M7i/M10i) [8.5I20070611_2103]
JUNOS Online Documentation [8.5I20070611_2103]
JUNOS Routing Software Suite [8.5I20070611_2103]
JUNOS SDK Gateway Example Control Component [8.5I20070612_1932]
JUNOS SDK Gateway Example Dataplane Component [8.5I20070612_1932]
JUNOS SDK Gateway Example Management Component [8.5I20070612_1932]

```

Part 3

Index

- Index on page 83
- Index of Statements and Commands on page 85

Index

Symbols

#, comments in configuration statements.....	xx
(), in syntax descriptions.....	xx
< >, in syntax descriptions.....	xx
[], in configuration statements.....	xx
{ }, in configuration statements.....	xxi
(pipe), in syntax descriptions.....	xx

B

braces, in configuration statements.....	xxi
brackets	
angle, in syntax descriptions.....	xx
square, in configuration statements.....	xx

C

clear interfaces statistics command	
SDK.....	50
clear services stateful-firewall flows command	
SDK.....	51
comments, in configuration statements.....	xx
configuration mode commands.....	25, 26
control cores.....	4
conventions	
text and syntax.....	xx
curly braces, in configuration statements.....	xxi
customer support.....	xxi
contacting JTAC.....	xxi

D

data cores.....	4
data flow affinity.....	4
documentation set	
comments on.....	xxi

E

extension	
defined.....	3
extension package-name (show delete)	
command.....	32
usage guidelines.....	26

extension package-name delete command	
usage guidelines.....	28
extension package-name show command	
how it filters.....	26
usage guidelines.....	27
extension-provider statement.....	36
usage guidelines.....	4
extension-service statement.....	37
usage guidelines.....	9, 15, 16
extensions statement.....	38
usage guidelines.....	4

F

font conventions.....	xx
forwarding database.....	4

H

high availability	
operational commands for.....	20
SDK, configuring.....	19

I

icons defined, notice.....	xix
----------------------------	-----

J

jservices-sfw package.....	11
----------------------------	----

M

manuals	
comments on.....	xxi
MultiServices PIC	
configuring.....	4

O

object cache.....	4
Open IP Solution Development Program <i>See</i> OSDP	
OSDP.....	3

P

packages
 jservices-sfw..... 11
 SDK application, installed on PIC..... 4
 parentheses, in syntax descriptions.....xx
 pmond *See* process health monitor
 policy database..... 4
 process health monitor.....21
 process-monitor statement.....39
 usage guidelines.....21
 provider
 defined.....3
 provider ID
 defined.....4
 enabling.....4

R

redundancy-options statement
 usage guidelines.....19
 request interface (revert | switchover) command
 SDK.....52
 resource-cleanup statement.....40
 usage guidelines.....22
 resources
 cleaning up.....22
 monitoring.....21
 rms interface
 creating.....19
 defined.....19

S

sampling *See* traffic sampling
 SDK applications
 defined.....3
 deployment.....4
 SDK applications configuration
 overview.....3
 SDK service process *See* ssd
 service order
 SDK, configuring.....10
 service sets
 SDK, configuring.....9
 service-order statement.....41
 usage guidelines.....9, 10
 Services SDK
 defined.....3
 show chassis pic command
 SDK.....53
 show extension-provider system connections
 command.....54
 show extension-provider system packages
 command.....57
 show extension-provider system processes
 command.....59

show extension-provider system uptime
 command.....64
 show extension-provider system virtual-memory
 command.....65
 show interfaces redundancy command
 SDK.....68
 show interfaces statistics command
 SDK.....69
 show services stateful-firewall flows command
 SDK.....72
 show services stateful-firewall statistics command
 SDK.....73
 show system processes command
 SDK.....74
 show system processes health command.....75
 show system processes providers command.....78
 show system resource-cleanup processes
 command.....79
 show version command
 SDK.....80
 show | display detail command
 SDK.....33
 usage guidelines.....25
 Software Development Kit *See* SDK
 ssd (SDK service process)
 enabling.....4
 stateful firewalls
 jservices-sfw package.....11
 operational commands for.....14
 SDK Kerberos-enabled, configuring.....13
 SDK plug-in for, loading.....11
 support, technical *See* technical support
 syntax conventions.....xx
 syslog statement.....42
 SDK applications.....4

T

technical support
 contacting JTAC.....xxi
 traceoptions statement.....43
 process monitor.....44
 resource cleanup.....46
 usage guidelines
 process montitor.....21
 resource cleanup.....22
 traffic sampling
 and forwarding database.....4
 in SDK applications.....15, 16

U

user cores.....4

Index of Statements and Commands

C

clear interfaces statistics command	
SDK.....	50
clear services stateful-firewall flows command	
SDK.....	51

E

extension-provider statement.....	36
extension-service statement.....	37
extensions statement.....	38

P

process-monitor statement.....	39
--------------------------------	----

R

request interface (revert switchover) command	
SDK.....	52
resource-cleanup statement.....	40

S

service-order statement.....	41
show chassis pic command	
SDK.....	53
show extension-provider system connections	
command.....	54
show extension-provider system packages	
command.....	57
show extension-provider system processes	
command.....	59
show extension-provider system uptime	
command.....	64
show extension-provider system virtual-memory	
command.....	65
show interfaces redundancy command	
SDK.....	68
show interfaces statistics command	
SDK.....	69
show services stateful-firewall flows command	
SDK.....	72

show services stateful-firewall statistics command	
SDK.....	73
show system processes command	
SDK.....	74
show system processes health command.....	75
show system processes providers command.....	78
show system resource-cleanup processes	
command.....	79
show version command	
SDK.....	80
syslog statement.....	42

T

traceoptions statement.....	43
process monitor.....	44
resource cleanup.....	46

