

clear spanning-tree statistics

Syntax	clear spanning-tree statistics <interface <i>interface-name</i> unit <i>logical-unit-number</i> >;
Release Information	Command introduced in JUNOS Release 9.0 for EX-series switches.
Description	Reset STP statistics for the all interfaces or a specified interface.
Options	none—Reset STP counters for all interfaces. <i>interface-name</i> —(Optional) The name of the interface for which statistics should be reset. <i>logical-unit-number</i> —(Optional) The logical unit number of the interface.
Required Privilege Level	clear
Related Topics	<ul style="list-style-type: none">■ show spanning-tree bridge■ show spanning-tree interface■ Understanding STP for EX-series Switches
List of Sample Output	clear spanning-tree statistics on page 1
Output Fields	This command produces no output.
clear spanning-tree statistics	user@switch> clear spanning-tree statistics

