

show sflow

Syntax show sflow
 <collector>
 <interface>

Release Information Command introduced in JUNOS Release 9.3 for EX-series switches.

Description Displays default sflow configuration information.

Options collector—(Optional) Display standard status information about the specified sflow collector.

interface—(Optional) Display standard status information about the specified sflow interface.

Required Privilege Level view

- Related Topics**
- show sflow interface
 - show sflow collector
 - Example: Monitoring Network Traffic Using sFlow Technology on EX-series Switches
 - Configuring sFlow Technology for Network Monitoring (CLI Procedure)

Output Fields Table 1 lists the output fields for the **show sflow** command. Output fields are listed in the approximate order in which they appear.

Table 1: show sflow Output Fields

| Field Name | Field Description | Level of Output |
|------------------|---|-----------------|
| sFlow | Status of the feature: enabled or disabled. | All levels |
| Sample rate | Rate at which packets are sampled. | All levels |
| Sample limit | Number of packets sampled per second. The sample limit cannot be configured and is set to 300 packets/second. | All levels |
| Polling interval | Interval at which the sFlow agent polls the interface. | All levels |

```
show sflow sFlow          : Enabled
           Sample rate    : 1:1000
           Sample limit    : 300 packets/second
           Polling interval : 20 seconds
```

