

## show sflow interface

---

**Syntax** show sflow interface

**Release Information** Command introduced in JUNOS Release 9.3 for EX-series switches.

**Description** Displays the interfaces on which sFlow technology is enabled and the sampling parameters.

**Required Privilege Level** view

- Related Topics**
- show sflow
  - show sflow collector
  - Example: Monitoring Network Traffic Using sFlow Technology on EX-series Switches
  - Configuring sFlow Technology for Network Monitoring (CLI Procedure)

**Output Fields** Table 1 lists the output fields for the **show sflow interface** command. Output fields are listed in the approximate order in which they appear.

**Table 1: show sflow interface Output Fields**

Field Name	Field Description	Level of Output
Interfaces	Interface on which sFlow technology is enabled.	All levels
Sample-rate	Rate at which packets are sampled.	All levels
Sample-limit	Number of packets sampled per second. Sample limit cannot be configured and is set to 300 packets/second.	All levels
Polling-interval	The interval at which the sFlow agent polls the interface.	All levels

```
show sflow interface Interfaces Sample-rate Sample-limit Polling-interval
ge-0/0/0.0 1:1000 300 pkt/sec 20 sec
```

