

## event-thresholds

---

**Syntax** event-thresholds {  
    frame-error *count*;  
    frame-period *count*;  
    frame-period-summary *count*;  
    symbol-period *count*;  
}

**Hierarchy Level** [edit protocols oam ethernet link-fault-management interface *interface-name*]

**Release Information** Statement introduced in JUNOS Release 9.4 for EX-series switches.

**Description** Configure threshold limit values for link events in periodic OAM PDUs.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Topics** ■ Configuring Ethernet OAM Link Fault Management (CLI Procedure)

