

## Checking Active Alarms with the J-Web Interface

**Purpose** Use the monitoring functionality to view alarm information for the EX-series switches including alarm type, alarm severity, and a brief description for each active alarm on the switching platform.

**Action** To view the active alarms:

1. Select **Monitor > Events and Alarms > View Alarms** in the J-Web interface.
2. Select an alarm filter based on alarm type, severity, description, and date range.
3. Click **Go**.

All the alarms matching the filter are displayed.



**NOTE:** When the switch is reset, the active alarms are displayed.

**Meaning** Table 1 lists the alarm output fields.

**Table 1: Summary of Key Alarm Output Fields**

Field	Values
Type	Category of the alarm: <ul style="list-style-type: none"><li>■ Chassis—Indicates an alarm condition on the chassis (typically an environmental alarm such as one related to temperature).</li><li>■ System—Indicates an alarm condition in the system.</li></ul>
Severity	Alarm severity—either major (red) or minor (yellow).
Description	Brief synopsis of the alarm.
Time	Date and time when the failure was detected.

- Related Topics**
- Monitoring System Log Messages
  - Dashboard for EX-series Switches
  - Understanding Alarm Types and Severity Levels on EX-series Switches

