

## conformed-fraction

---

**Syntax** conformed-fraction *conformedFraction*

no conformed-fraction

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Sets the percentage of the total queue that can be occupied before dropping conformed packets. The **no** version returns the conformed fraction to its default setting.

**Options** ■ *conformedFraction*—Percentage in the range 0–100; default value is 50

**Mode** Queue Profile Configuration

**Related Topics** ■ [Configuring Queue Profiles to Manage Buffers and Thresholds](#)

---

Published: 2009-10-09