

## J-series Services Router and SRX-series Services Gateway Installation and Configuration Overview

---



**NOTE:** For important safety information, read the *Juniper Networks Security Products Safety Guide*.

---

Before you can add either a J-series Services Router or an SRX-series services gateway to NSM, the device must be installed and configured, and logon credentials for an NSM administrator must be configured for it. Follow these steps:

1. Connect the device to the network and configure one of the interfaces so that the device can reach the NSM device server.
2. Add a user for NSM that has full administrative rights.

For complete details on installing and configuring J-series Services Routers, see the corresponding Hardware Guide for your device.

For complete details on installing and configuring SRX-series services gateway, see the corresponding Hardware Guide for your device.

### Related Topics

- NSM Installation Overview
- NSM and Device Management Overview
- Communication Between NSM and a Device Overview

