

Configuring a New RADIUS Vendor (NSM Procedure)

To configure a new RADIUS vendor:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab, and then double-click the Infranet Controller device for which you want to configure a new RADIUS vendor.
3. Click the **Configuration** tab. In the configuration tree, select **UAC > Network Access > RADIUS Vendors**.
4. Add or modify RADIUS vendors on the **RADIUS Vendors** tab as specified in Table 1 on page 1.
5. Click one:
 - **OK**—Saves the changes.
 - **Cancel**—Cancels the modifications.

Table 1: RADIUS Vendors Configuration Details

Option	Function	Your Action
Name	Specifies a name for the RADIUS vendor.	Enter a name for the RADIUS vendor.
Description	Describes the RADIUS vendors.	Enter a brief description for the RADIUS vendor.
Dictionary	Specifies the dictionary to be associated with the RADIUS vendor.	Select the dictionary.

- Related Topics**
- Configuring Location Groups (NSM Procedure)
 - Configuring RADIUS Clients (NSM Procedure)
 - Configuring RADIUS Attributes Policies (NSM Procedure)

