

Viewing Device Inventory in NSM (NSM Procedure)

NSM displays the hardware and software inventory for each device according to the information it has in its database. For a device with dual Routing Engines, NSM collects the inventory data from the master Routing Engine. To view the device inventory, the device must be in the Managed state.

To view the device inventory in NSM:

1. In the navigation tree, select **Device Manager > Devices**.
2. Right-click the device whose inventory you want to view.
3. Select **View/Reconcile Inventory**. The Device Inventory window appears.
4. Select the **Hardware** tab to display information about hardware modules in the device, including the I/O module, the Routing Engine, and so on.
5. Select the **Software** tab to display information about the software packages installed in the device, including the installed OS and its version, and any other installed packages.

Related Topics ■ Viewing and Reconciling Device Inventory Overview

