

Configuring the Polling Interval for Device Alarm Status (NSM Procedure)

The default polling interval is 900 seconds (15 minutes). To configure polling intervals for alarm Status:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab, and then double-click the device to set the polling interval.
3. Click the **Info** tab, and select **Device Admin**.
4. Set the polling interval for the device. The minimum polling interval is 60 seconds. The maximum interval is 2,147,483,647 seconds. You cannot disable polling.
5. Click one:
 - **OK**—Saves the changes.
 - **Cancel**—Cancels the modifications.

- Related Topics**
- Viewing Device Status
 - Viewing Device Monitor Alarm Status (NSM Procedure)

