

Setting the Polling Interval For Device Alarm Status

The default polling interval is 900 seconds (15 minutes). To configure polling intervals for Alarm Status:

1. From **Device Manager > Devices**, double-click the device to open it.

The Info tab dialog box is displayed.

2. Select the **Device Admin** page to set the polling interval for the device.

The minimum polling interval is 60 seconds. The maximum interval is 2,147,483,647 seconds. You cannot disable polling.

- Related Topics**
- About the Realtime Monitor
 - Viewing Device Status
 - Viewing Device Monitor Alarm Status

