

Configuring a USB Modem Interface (NSM Procedure)

To configure a USB modem interface for the device:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab and then double-click the device for which you want to configure the USB modem interface.
3. Click the **Configuration** tab. In the configuration tree, select **Interfaces > Interfaces List**.
4. Add or modify interface settings as specified in Table 1 on page 1.
5. Click one:
 - **OK**—Saves the changes.
 - **Cancel**—Cancels the modifications.

Table 1: USB Modem Interface Configuration Details

Option	Function	Your Action
Name	Specifies the name of the new interface.	Enter a name for the new interface.
Dialer Options > Pool		
Name	Specifies the name of the dialer pool configured on the dialer interface you want to use for USB modem connectivity.	Enter a name for the dialer pool.
Priority	Specifies the dialer pool priority.	Set the dialer pool priority.
Modem Options		
Init Command String	Configures the modem to automatically answer calls after a specified number of rings.	Enter the modem initialization command string. For example, enter ATSO = 2 .

- Related Topics**
- [Configuring a Dialer Interface \(NSM Procedure\)](#)
 - [Configuring Dial-in Options on a Dialer Interface \(NSM Procedure\)](#)

