

Configuring Syslog Collection (NSM Procedure)

You configure syslog settings if you want to forward a copy of IDP logs to a syslog server.

You have the option of configuring NSM to forward a copy of its log collection to a syslog server or configuring syslog settings for each IDP device.

To configure syslog forwarding for NSM, see the *NSM online Help*.

To configure syslog forwarding for a single IDP device:

1. In the NSM Device Manager, double-click the IDP device to display the device configuration editor.
2. Click **Report Settings**.
3. Select **Enable Syslog**.
4. Specify the syslog server IP address.
5. Specify whether to forward packet logs to the syslog server.
6. Click **OK**.

- Related Topics**
- NSM Logs and Reports Overview
 - Viewing Logs
 - Configuring an SNMP Agent (NSM Procedure)

