

## Configuring SNMP Views (NSM Procedure)

---

To configure SNMP views:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab and then double-click the device for which you want to configure SNMP views.
3. Click the **Configuration** tab. In the configuration tree, select **Snmp > View**.
4. Add or modify SNMP views as specified in Table 1.
5. Click one:
  - **New**—Creates a new view.
  - **OK**—Saves the changes.
  - **Cancel**—Cancels the modifications.

**Table 1: SNMP View Configuration Details**

Option	Function	Your Action
Name	Specifies a name for the view.	Enter a name for the view.
<b>Snmp &gt; View &gt; Oid</b>		
Name	Specifies the MIB for the view.	Enter the OID of the MIB in either dotted integer or subtree name format.
Include or Exclude	Specifies whether the view includes or excludes the MIB	Select this option.

- Related Topics**
- Configuring Basic System Identification for SNMP (NSM Procedure)
  - Configuring SNMP Agents and Communities (NSM Procedure)
  - Configuring SNMP Trap Groups (NSM Procedure)

