

Viewing Device Monitor Alarm Status (NSM Procedure)

Alarms refresh automatically through periodic polling.

To view the alarm status and time:

1. From Device Monitor, right-click the device row entry and select the **View Alarm** option.

The device Alarm Status dialog box displays the alarm list and polling time for the device.

2. Retrieve the current alarm status in the device by clicking the **Refresh** button.

The poll time is derived from the device server time.

- Related Topics**
- Viewing Device Status
 - Configuring the Polling Interval for Device Alarm Status (NSM Procedure)

