

## Viewing Device Monitor Alarm Status

---

**Purpose** Alarms refresh automatically through periodic polling.

**Action** To view the Alarm status and time:

1. From **Device Monitor**, right-click the device row entry and select the **View Alarm** option.

The device **Alarm Status** dialog box displays the alarm list and polling time for the device.

2. To retrieve the current alarm status in the device, click the **Refresh** button.

The poll time is derived from the device server time.

- Related Topics**
- About the Realtime Monitor
  - Viewing Device Status
  - Setting the Polling Interval For Device Alarm Status

