

UAC Installation Overview



NOTE: For important safety information, read *Juniper Networks Security Products Safety Guide*.

The UAC components to be installed are the following:

1. Install Infranet Enforcer and/or 802.1X hardware and perform the basic setup. See the documentation that shipped with the system or visit the Juniper Networks Web site at <http://www.juniper.net/techpubs/> to download the appropriate documentation.
2. Install Infranet Controller hardware and perform the basic setup using the serial console. See the *Juniper Networks Unified Access Control Installation Guide*.
3. License the Infranet Controller and verify user accessibility. Follow the initial configuration Task Guide instructions embedded in the Infranet Controller Web console.
4. Configure an SSL connection between the Infranet Controller appliance and your Infranet Enforcer appliances and/or 802.1X switches. See the *Juniper Networks Unified Access Control Quick Start Guide* or Part 1, “Getting Started,” of the *Juniper Networks Unified Access Control Administration Guide*.

- Related Topics**
- NSM Installation Overview
 - NSM and Device Management Overview
 - Communication Between an Infranet Controller and NSM Overview

Published: 2009-08-20