

J Series Services Router and SRX Series Services Gateway Installation and Configuration Overview



NOTE: For important safety information, read the *Juniper Networks Security Products Safety Guide*.

Before you can add either a J Series Services Router or an SRX Series services gateway to NSM, the device must be installed and configured, and logon credentials for an NSM administrator must be configured for it. Follow these steps:

1. Connect the device to the network and configure one of the interfaces so that the device can reach the NSM device server.
2. Add a user for NSM that has full administrative rights.

For complete details on installing and configuring J Series Services Routers, see the corresponding Hardware Guide for your device.

For complete details on installing and configuring SRX Series services gateway, see the corresponding Hardware Guide for your device.

- Related Topics**
- NSM Installation Overview
 - NSM and Device Management Overview
 - Communication Between NSM and a Device Overview

Published: 2009-08-21