

Configuring Location Groups (NSM Procedure)

You can use location groups to organize or logically group network access devices by associating the devices with specific sign-in policies. Location groups associate sign-in policies with network access devices.

To configure location groups:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab, and then double-click the Infranet Controller device for which you want to configure location groups.
3. Click the **Configuration** tab. In the configuration tree, select **UAC > Network Access > Location Groups**.
4. Add or modify **Location Groups** tab as specified in Table 1.
5. Click one:
 - **OK**—Saves the changes.
 - **Cancel**—Cancels the modifications.

Table 1: Location Groups Configuration Details

Option	Function	Your Action
Name	Specifies the location group name.	Enter a name for the location group.
Description	Describes the location group.	Enter a brief description for the location group.
Sign-in Policy	Specifies the sign-in policy you want to associate with the location group.	Select the sign-in policy.
MAC Authentication Realm	Specifies the MAC authentication realm.	Select the MAC authentication realm.

- Related Topics**
- Configuring RADIUS Clients (NSM Procedure)
 - Configuring a New RADIUS Vendor (NSM Procedure)
 - Configuring RADIUS Return Attributes Policies (NSM Procedure)

Published: 2009-08-20