

Configuring the RADIUS Parameters (NSM Procedure)

You can specify the options used by the RADIUS authentication and accounting servers.

To configure the radius parameters in NSM:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab, and then double-click the device to select it.
3. Click the **Configuration** tab. In the configuration tree, expand **Access**.
4. Select **Profile**.
5. Add or modify settings as specified in Table 1.
6. Click one:
 - OK—Saves the changes.
 - Cancel—Cancels the modifications.



NOTE: To create a profile, the device should be in the in-device policy mode.

Table 1: Radius Parameters Configuration Details

Task	Your Action
Configure the radius parameters.	<ol style="list-style-type: none">1. Click Add new entry next to Profile.2. Click Radius Options next to Profile.3. In the Comment box, enter the comment.4. From the Revert Interval list, select the amount of time the router waits after a server has become unreachable. Default: 600 seconds

Published: 2009-08-23