

Configuring Container Interfaces (NSM Procedure)

To configure a container interface, you must first create the number of container devices that you require. You can create up to a maximum of 128 container interfaces per router using the Container Interfaces option.

To configure container interfaces in NSM:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab, and then double-click the device to select it.
3. Click the **Configuration** tab. In the configuration tree, expand **Chassis**.
4. Select **Container Devices**.
5. Add or modify settings as specified in Table 1.
6. Click one:
 - OK—Saves the changes.
 - Cancel—Cancels the modifications.

Table 1: Container Interfaces Configuration Details

Task	Your Action
Specify the container devices configuration.	<ol style="list-style-type: none">1. In the Comment box, enter the comment.2. From the Device list, select the number of container devices. Range: 1 through 128

- Related Topics**
- [Configuring Aggregated Devices \(NSM Procedure\)](#)
 - [Configuring Chassis FPC \(NSM Procedure\)](#)

Published: 2009-08-23