

## Configuring Options (NSM Procedure)

---

You can configure the types of system logging messages sent about the routing protocols process to the system log message file. These messages are also displayed on the system console. You can log messages at a particular level or up to and including a particular level.

To configure options in NSM:

1. In the navigation tree, select **Device Manager > Devices**.
2. In the **Devices** list, double-click the device to select it.
3. Click the **Configuration** tab.
4. In the configuration tree, expand **Routing Options**.
5. Select **Options**.
6. Enter the parameters as specified in Table 1.
7. Click one:
  - **OK**—To save the changes.
  - **Cancel**—To cancel the modifications.
  - **Apply**—To apply the routing option settings.



**NOTE:** After you make changes to a device configuration, you must push that updated device configuration to the physical security device for those changes to take effect. You can update multiple devices at one time. See the *Updating Devices* section in the *Network and Security Manager Administration Guide* for more information.

---

**Table 1: Configuring Options Fields**

Option	Function	Your Action
Comment	Specifies the comment for the message option.	Enter the comment.
Mark	Specifies the mark for the option.	Enter the mark value or select from the list.
Syslog	Enables you to configure the generation of system log messages for a particular severity level and all higher levels.	<ol style="list-style-type: none"><li>1. Expand the <b>Options</b> tree and select <b>Syslog</b>.</li><li>2. Select the severity levels for system log messages.</li></ol>

---

Published: 2009-08-23