

## Configuring a Dialer Interface (NSM Procedure)

---

To configure a dialer interface for the device:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab and then double-click the device for which you want to configure the dialer interface.
3. Click the **Configuration** tab. In the configuration tree, select **Interfaces > Interfaces List**.
4. Add or modify interface settings as specified in Table 1.
5. Click one:
  - **OK**—Saves the changes.
  - **Cancel**—Cancels the modifications.

**Table 1: Dialer Interface Configuration Details**

Option	Function	Your Action
Name	Specifies the name of the new interface.	Enter a name for the new interface.
Description	Differentiates between different dialer interfaces.	Enter a description for the new interface.
Encapsulation	Specifies the encapsulation.	Select <b>PPP</b> from the encapsulation list.
<b>Unit</b>		
Unit	Specifies the logical unit.	Enter the unit number.
<b>Unit &gt; Dialer Options</b>		
Pool	Specifies the name of the dialer pool to use for USB modem connectivity.	Enter the name of the dialer pool.
<b>Unit &gt; Family &gt; Inet &gt; Address</b>		
Name	Specifies the source IP address for the dialer interface.	Enter the source IP address.
Destination	Specifies the destination IP address for the dialer interface.	Enter the destination IP address.

- Related Topics**
- [Configuring a USB Modem Interface \(NSM Procedure\)](#)
  - [Configuring Dial-in Options on a Dialer Interface \(NSM Procedure\)](#)