

Configuring Dial-in Options on a Dialer Interface (NSM Procedure)

To configure dial-in options on a dialer interface:

1. In the NSM navigation tree, select **Device Manager > Devices**.
2. Click the **Device Tree** tab and then double-click the device for which you want to configure dial-in options.
3. Click the **Configuration** tab. In the configuration tree, select **Interfaces > Interfaces List**.
4. Select the dialer interface and add or modify interface settings as specified in Table 1.
5. Click one:
 - **OK**—Saves the changes.
 - **Cancel**—Cancels the modifications.

Table 1: Dialer Interface for Dial-in Configuration Details

Option	Function	Your Action
Unit > Dialer Options > Incoming Map		
Caller	Specifies the incoming map options for the dialer interface.	<ul style="list-style-type: none">■ Select accept-all to accept all incoming calls.■ Select caller to accept calls from a specific caller ID.
Caller		
Name	Specifies the caller ID to be accepted on the dialer interface.	Enter the caller ID.

- Related Topics**
- [Configuring a Dialer Interface \(NSM Procedure\)](#)
 - [Configuring a USB Modem Interface \(NSM Procedure\)](#)

Published: 2009-08-21