

MX960 Power Supply LEDs on the Craft Interface

Each power supply has two LEDs on the craft interface that indicate its status. The LEDs, labeled 0 through 3, are located on the upper left of the craft interface next to the PEM label. Table 1 describes the functions of the power supply LEDs on the craft interface.

Table 1: Power Supply LEDs on the Craft Interface

Label	Color	State	Description
PEM	Green	On steadily	Power supply is functioning normally.
	Red	On steadily	Power supply has failed or power input has failed.

- Related Topics**
- MX960 AC Power Supply Description
 - MX960 DC Power Supply
 - Installing an MX960 AC Power Supply
 - Installing an MX960 DC Power Supply

Published: 2010-01-27