


JCS1200 MUX Card LEDs

Figure 1 shows the location of the LEDs on the JCS1200 MUX card.

Figure 1: JCS1200 MUX Card LEDs

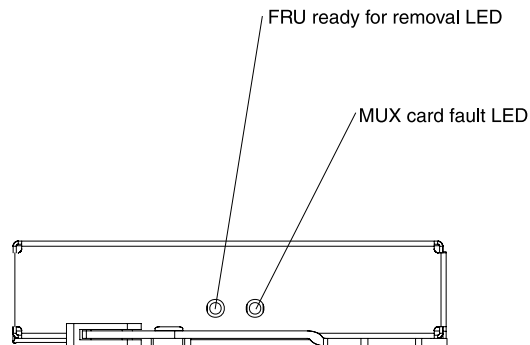

The functions of the MUX card LEDs are described in Table 1.

Table 1: JCS1200 MUX Card LEDs

Name	Color	State	Description
FRU ready for removal	Blue	On steadily	Indicates that it is safe to remove the device from the JCS1200 platform.
MUX card fault	Amber	On steadily	There is a fault on the MUX card. The system can continue to operate, usually without the use of the components on the MUX card.



NOTE: When removing the MUX card, you must install another MUX card in its place to maintain proper cooling in the JCS1200 platform.

- Related Topics**
- JCS1200 MUX Card Description
 - Replacing a JCS1200 MUX Card
 - Locating the JCS1200 MUX Card Serial Number

Published: 2010-01-25