

## Starting the J-Web Interface

---

You can use the J-Web graphical interface to configure and manage the EX Series switch.

To start the J-Web interface:

1. Launch your HTTP-enabled or HTTPS-enabled Web browser.

To use HTTPS, you must have installed a certificate on the switch and enabled HTTPS.

2. After `http://` or `https://` in your Web browser, type the hostname or IP address of the switch and press **Enter**.

The J-Web login page appears.

3. On the login page, type your username and password, and click **Log In**.

To correct or change the username or password you typed, click **Reset**, type the new entry or entries, and click **Log In**.



**NOTE:** The default username is root with no password. You must change this during initial configuration or the system does not accept the configuration.

---

The Chassis Dashboard information page appears.

To explicitly terminate a J-Web session at any time, click **Logout** in the top pane.

- Related Topics**
- J-Web User Interface for EX Series Switches Overview
  - Understanding How to Use the J-Web Interface to View System Information

---

Published: 2009-07-28