

Unpacking an EX-series Switch

The EX-series switch is shipped in a cardboard carton and is secured with foam packing material. The carton also contains an accessory box.



NOTE: The EX-series switch is maximally protected inside the shipping carton. Do not unpack it until you are ready to begin installation.

To unpack the switch (see Figure 1 on page 2):

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the system components.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box and verify the contents against the parts inventory on the label attached to the carton.
5. Pull out the packing material holding the switch in place.
6. Verify the chassis components received against the packing list included with the switch. An inventory of parts provided with an EX-series switch is provided in Table 1 on page 2.
7. Save the shipping carton and packing materials in case you need to move or ship the switch later.

Figure 1: Unpacking an EX-series Switch

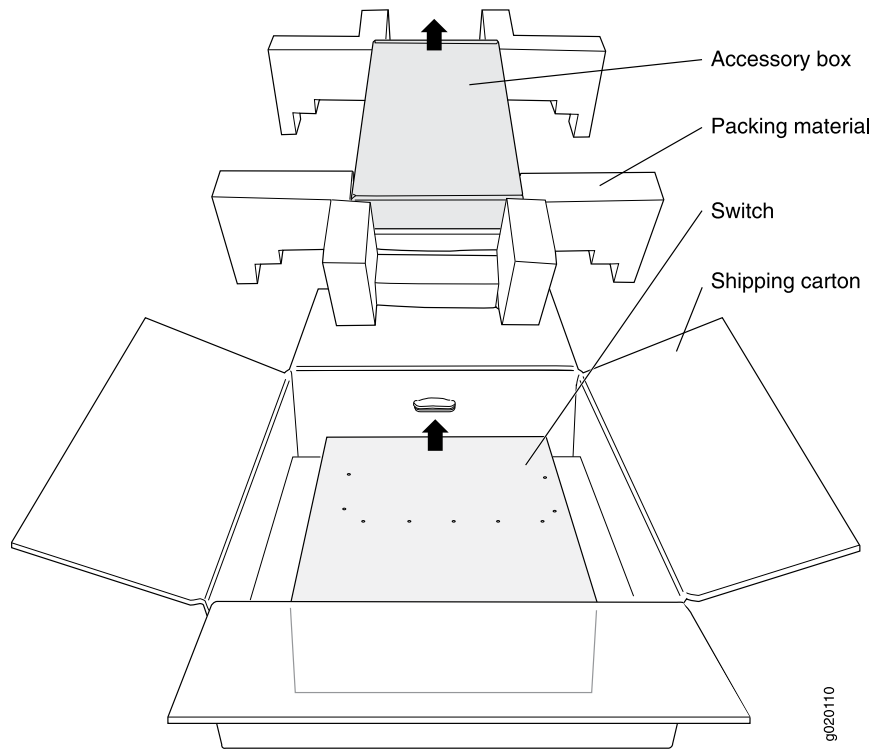


Table 1: Inventory of Components Provided with an EX-series Switch

Component	Quantity
Switch	1
Fan tray (preinstalled)	1
Power supply (preinstalled if the switch uses a 320 W power supply; not preinstalled if the switch uses a 600 W or 930 W power supply)	1
Power cord retainer clip	1
Mounting brackets	2
Mounting screws	8
Rubber feet	4
RJ-45 cable and RJ-45 to DB-9 serial port adapter	1
Virtual chassis cable (for an EX 4200 switch)	1
Virtual chassis cable connector retainers (for an EX 4200 switch)	2
Dust covers for ports (for an EX 4200-24F switch)	24

- Related Topics**
- Mounting an EX 3200 or EX 4200 Switch
 - Installing and Connecting an EX 3200 or EX 4200 Switch
 - Connecting and Configuring an EX-series Switch (CLI Procedure)
 - Connecting and Configuring an EX-series Switch (J-Web Procedure)

