

## About this Manual

This chapter provides a high-level overview of the *JUNOS Internet Software Configuration Guide: Getting Started*.

- Objectives on page xxix
- Audience on page xxx
- Document Organization on page xxx
- Part Organization on page xxxiii
- Using the Indexes on page xxxiv
- Documentation Conventions on page xxxiv
- List of Technical Publications on page xxxvii
- Documentation Feedback on page xxxviii
- How to Request Support on page xxxviii

## Objectives

This manual provides an overview of the JUNOS Internet software and describes how to install and upgrade the software. This manual also describes how to configure system management functions and how to configure the chassis, including user accounts, passwords, and redundancy.

This manual documents Release 6.0 of the JUNOS Internet software. To obtain additional information about the JUNOS software—either corrections to information in this manual or information that might have been omitted from this manual—refer to the software release notes.

To obtain additional information about the JUNOS software—either corrections to information in this manual or information that might have been omitted from this manual—refer to the printed software release notes that accompany your router.

To obtain the most current version of this manual and the most current version of the software release notes, refer to the product documentation page on the Juniper Networks Web site, which is located at <http://www.juniper.net/>.

To order printed copies of this manual or to order a documentation CD-ROM, which contains this manual, please contact your sales representative.

## Audience

This manual is designed for network administrators who are configuring a Juniper Networks M-series or T-series routing platform.

It assumes that you have a broad understanding of networks in general, the Internet in particular, networking principles, and network configuration. This manual assumes that you are familiar with one or more of the following Internet routing protocols: Border Gateway Protocol (BGP), Routing Information Protocol (RIP), Intermediate System-to-Intermediate System (IS-IS), Open Shortest Path First (OSPF), Internet Control Message Protocol (ICMP) router discovery, Internet Group Management Protocol (IGMP), Distance Vector Multicast Routing Protocol (DVMRP), Protocol-Independent Multicast (PIM), Multiprotocol Label Switching (MPLS), Resource Reservation Protocol (RSVP), and Simple Network Management Protocol (SNMP).

Personnel operating the equipment must be trained and competent; must not conduct themselves in a careless, willfully negligent, or hostile manner; and must abide by the instructions provided by the documentation.

## Document Organization

This manual is divided into several parts. Each part describes a major functional area of the JUNOS software, and the individual chapters within a part describe the software components of that functional area.

This manual contains the following parts and chapters:

- Preface, “About this Manual” (this chapter), provides a brief description of the contents and organization of this manual and describes how to contact customer support.
- Part 1, “Overview,” provides an overview of the hardware and software components of the router, describes the user command-line interface, and provides the procedures for installing and upgrading the software.
  - Chapter 1, “Product Architecture,” discusses the router hardware and product architecture.
  - Chapter 2, “JUNOS Software Overview,” provides an overview of the JUNOS software features and lists the software standards that the JUNOS software supports.
  - Chapter 3, “Complete Configuration Mode Commands and Statements,” lists all the commands available in configuration mode. It also lists the complete configuration statement hierarchy, showing all possible configuration statements and levels in the configuration hierarchy.
- Part 2, “Software Installation and Upgrade,” describes how to install, reinstall, and upgrade the JUNOS software on a router.
  - Chapter 4, “Installation Overview,” provides background information for the installation process.

- Chapter 5, “Configure the Software Initially,” describes how to initially configure the JUNOS software.
- Chapter 6, “Reinstall the Software Using the Install Media,” describes how to reinstall the JUNOS software using the install media.
- Chapter 7, “Upgrade Software Packages,” describes how to upgrade software packages.
- Chapter 8, “Reinstall Software using jinstall,” describes how to reinstall software using jinstall.
- Chapter 9, “Upgrade to Release 6.0 or Downgrade from Release 6.0,” describes how to upgrade to Release 6.0 or downgrade from Release 6.0.
- Part 3, “Command-Line Interface,” describes the interface that you use to configure and monitor the JUNOS software. The command-line interface (CLI) is the interface you use when you access the router.
  - Chapter 10, “Command-Line Interface Overview,” provides an overview of the functions of the CLI.
  - Chapter 11, “Command-Line Interface Operational Mode,” describes the operational mode of the CLI.
  - Chapter 12, “Control the CLI Environment,” describes how to configure the CLI environment.
  - Chapter 13, “Configure the Router with the CLI,” describes the configuration mode of the CLI.
  - Chapter 14, “Configuration Groups,” describes configuration groups.
  - Chapter 15, “Summary of CLI Environment Commands,” explains each of the CLI environment commands.
  - Chapter 16, “Summary of CLI Configuration Mode Commands,” explains each of the CLI configuration mode commands.
  - Chapter 17, “Summary of CLI Operational Mode Commands,” explains each of the CLI operational mode commands.
- Part 4, “System Management,” describes how to use the CLI to manage the router.
  - Chapter 18, “System Management Overview,” provides background information for configuring system management functions.
  - Chapter 19, “System Management Configuration Statements,” lists all the statements available at the [edit system] hierarchy level.
  - Chapter 20, “Configure Basic System Management,” describes how to configure basic system management functions.
  - Chapter 21, “Configure System Authentication,” describes how to configure RADIUS and TACACS+ authentication.
  - Chapter 22, “Configure User Access,” describes how to configure user access.

- Chapter 23, “Configure Time,” describes how to set the time zone and configure the Network Time Protocol, which provides mechanisms to synchronize time and coordinate time distribution in a large, diverse network.
- Chapter 24, “System Log Messages Overview,” describes how to control system logging and how much information the system should log.
- Chapter 25, “Configure Miscellaneous System Management Features,” describes how to configure various system management functions, such as console and auxiliary port properties and the source address for locally generated TCP/IP packets.
- Chapter 26, “Security Configuration Example”, provides an example of a configuration that applies sound security policies so that the router can operate securely.
- Chapter 27, “Summary of System Management Configuration Statements,” explains each of the system management configuration statements.
- Part 5, “Access,” describes how to configure access services
  - Chapter 28, “Access Configuration Guidelines,” describes how to configure access, and explains each of the access configuration statements.
- Part 6, “Security Services,” describes how to configure security services.
  - Chapter 29, “Security Services Overview,” provides background information for configuring security services.
  - Chapter 30, “Security Services Configuration Guidelines,” describes how to configure security service properties.
  - Chapter 31, “Summary of Security Services Configuration Statements,” explains each of the security services configuration statements.
- Part 7, “Router Chassis,” covers the configuration of router chassis properties.
  - Chapter 32, “Router Chassis Configuration Guidelines,” describes how to configure router chassis properties.
  - Chapter 33, “Summary of Router Chassis Configuration Statements,” provides a detailed listing of all configuration statements used in router chassis configuration.

This manual also contains a glossary, a complete index, and an index of statements and commands.

## Part Organization

The parts in this manual generally include the following information:

- **Overview**—Provides background information about and discusses concepts related to the software component described in that part of the book.
- **Configuration statements**—Lists all the configuration statements available to configure the software component. This list is designed to provide an overview of the configuration statement hierarchy for that software component.
- **Configuration guidelines**—Describes how to configure all the features of the software component. The first section of the configuration guidelines describes the minimum configuration for that component, listing the configuration statements you must include to enable the software component on the router with only the bare minimum functionality. The remaining sections in the configuration guidelines are generally arranged so that the most common features are near the beginning.
- **Statement summary**—A reference that lists all configuration statements alphabetically and explains each statement and all its options. The explanation of each configuration statement consists of the following parts:
  - **Syntax**—Describes the full syntax of the configuration statement. For an explanation of how to read the syntax statements, see “Documentation Conventions” on page xxxiv.
  - **Hierarchy level**—Tells where in the configuration statement hierarchy you include the statement.
  - **Description**—Describes the function of the configuration statement.
  - **Options**—Describes the configuration statement’s options, if there are any. For options with numeric values, the allowed range and default value, if any, are listed. For multiple options, the default is stated. If a configuration statement is at the top of a hierarchy of options that are other configuration statements, these options are generally explained separately in the statement summary section.
  - **Usage guidelines**—Points to the section or sections in the configuration guidelines section that describe how to use the configuration statement.
  - **Required privilege level**—Indicates the permissions that the user must have to view or modify the statement in the router configuration. For an explanation of the permissions, see the appropriate chapters in this manual.
  - **See also**—Indicates other configuration statements that might provide related or similar functionality.

## Using the Indexes

This manual contains two indexes: a complete index, which contains all index entries, and an index that contains only statements and commands.

In the complete index, bold page numbers point to pages in the statement summary chapters. The index entry for each configuration statement always contains at least two entries. The first, with a bold page number on the same line as the statement name, references the statement summary section. The second entry, “usage guidelines,” references the section in a configuration guidelines chapter that describes how to use the statement.

## Documentation Conventions

### **General Conventions**

This manual uses the following text conventions:

- Statements, commands, filenames, directory names, IP addresses, and configuration hierarchy levels are shown in a sans serif font. In the following example, *stub* is a statement name and [edit protocols ospf area *area-id*] is a configuration hierarchy level:

To configure a stub area, include the stub statement at the [edit protocols ospf area *area-id*] hierarchy level:

- In examples, text that you type literally is shown in bold. In the following example, you type the word *show*:

```
[edit protocols ospf area area-id]  
cli# show  
stub <default-metric metric>
```

- Examples of command output are generally shown in a fixed-width font to preserve the column alignment. For example:

```
> show interfaces terse  
Interface      Admin Link Proto Local                Remote  
at-1/3/0       up    up  
at-1/3/0.0     up    up    inet 1.0.0.1            --> 1.0.0.2  
               iso  
fxp0           up    up  
fxp0.0         up    up    inet 192.168.5.59/24
```

## Conventions for Software Commands and Statements

When describing the JUNOS software, this manual uses the following type and presentation conventions:

- Statement or command names that you type literally are shown nonitalicized. In the following example, the statement name is *area*:

You configure all these routers by including the following area statement at the [edit protocols ospf] hierarchy level:

- Options, which are variable terms for which you substitute appropriate values, are shown in italics. In the following example, *area-id* is an option. When you type the area statement, you substitute a value for *area-id*.

`area area-id;`

- Optional portions of a configuration statement are enclosed in angle brackets. In the following example, the “default-metric *metric*” portion of the statement is optional:

`stub <default-metric metric>;`

- For text strings separated by a pipe (|), you must specify either *string1* or *string2*, but you cannot specify both or neither of them. Parentheses are sometimes used to group the strings.

`string1 | string2`  
`(string1 | string2)`

In the following example, you must specify either broadcast or multicast, but you cannot specify both:

`broadcast | multicast`

- For some statements, you can specify a set of values. The set must be enclosed in square brackets. For example:

`community name members [community-id]`

- The configuration examples in this manual are generally formatted in the way that they appear when you issue a `show` command. This format includes braces (`{ }`) and semicolons. When you type configuration statements in the CLI, you do not type the braces and semicolons. However, when you type configuration statements in an ASCII file, you must include the braces and semicolons. For example:

```
[edit]
cli# set routing-options static route default nexthop address retain
[edit]
cli# show
routing-options {
  static {
    route default {
      nexthop address;
      retain;
    }
  }
}
```

- Comments in the configuration examples are shown either preceding the lines that the comments apply to, or more often, they appear on the same line. When comments appear on the same line, they are preceded by a pound sign (#) to indicate where the comment starts. In an actual configuration, comments can only precede a line; they cannot be on the same line as a configuration statement. For example:

```
protocols {
  mpls {
    interface (interface-name | all); # Required to enable MPLS on the interface
  }
  rsvp {                               # Required for dynamic MPLS only
    interface interface-name;
  }
}
```

- The general syntax descriptions provide no indication of the number of times you can specify a statement, option, or keyword. This information is provided in the text of the statement summary.

## List of Technical Publications

Table 1 lists the software and hardware books for Juniper Networks routers and describes the contents of each book.

**Table 1: Juniper Networks Technical Documentation**

| <b>Book</b>   | <b>Description</b>  |
|---|---|
| <b>JUNOS Internet Software Configuration Guides</b>   |   |
| <i>Feature Guide</i>  | Provides a detailed explanation and configuration examples for several of the most complex features in the JUNOS software.  |
| <i>Getting Started</i>  | Provides an overview of the JUNOS software and describes how to install and upgrade the software. This manual also describes how to configure system management functions and how to configure the chassis, including user accounts, passwords, and redundancy. |
| <i>MPLS Applications</i>  | Provides an overview of traffic engineering concepts and describes how to configure traffic engineering protocols.  |
| <i>Multicast</i>  | Provides an overview of multicast concepts and describes how to configure multicast routing protocols.  |
| <i>Network Interfaces and Class of Service</i>  | Provides an overview of the network interface and class-of-service functions of the JUNOS software and describes how to configure the network interfaces on the router.   |
| <i>Network Management</i>   | Provides an overview of network management concepts and describes how to configure various network management features, such as SNMP, accounting options, and cflowd.   |
| <i>Policy Framework</i>   | Provides an overview of policy concepts and describes how to configure routing policy, firewall filters, and forwarding options.  |
| <i>Routing and Routing Protocols</i>  | Provides an overview of routing concepts and describes how to configure routing, routing instances, and unicast routing protocols.  |
| <i>Services Interfaces</i>  | Provides an overview of the services interfaces functions of the JUNOS software and describes how to configure the services interfaces on the router.   |
| <i>VPNs</i>   | Provides an overview of Layer 2 and Layer 3 Virtual Private Networks (VPNs), describes how to configure VPNs, and provides configuration examples.  |
| <b>JUNOS Internet Software References</b>   |   |
| <i>Operational Mode Command Reference: Interfaces</i>   | Describes the JUNOS Internet software operational mode commands you use to monitor and troubleshoot network and services interfaces on Juniper Networks M-series and T-series routers.  |
| <i>Operational Mode Command Reference: Protocols, Class of Service, Chassis, and Management</i> | Describes the JUNOS Internet software operational mode commands you use to monitor and troubleshoot most aspects of Juniper Networks M-series and T-series routers.   |
| <i>System Log Messages Reference</i>  | Describes how to access and interpret system log messages generated by JUNOS software modules and provides a reference page for each message.   |
| <b>JUNOScript API Documentation</b>   |   |
| <i>JUNOScript API Guide</i>   | Describes how to use the JUNOScript API to monitor and configure Juniper Networks routers.  |
| <i>JUNOScript API Reference</i>   | Provides a reference page for each tag in the JUNOScript API.   |
| <b>JUNOS Internet Software Comprehensive Index</b>  |   |
| <i>Comprehensive Index</i>  | Provides a complete index of all JUNOS Internet software books and the <i>JUNOScript API Guide</i> .  |

| Book   | Description   |
|--|---|
| <b>Hardware Documentation</b>                |   |
| <i>Hardware Guide</i>                        | Describes how to install, maintain, and troubleshoot routers and router components. Each platform has its own hardware guide.   |
| <i>PIC Guide</i>                             | Describes the router Physical Interface Cards (PICs). Each router platform has its own PIC guide.   |
| <b>Release Notes</b>                         |   |
| <i>JUNOS Internet Software Release Notes</i> | Provide a summary of new features for a particular software release. Software release notes also contain corrections and updates to published JUNOS and JUNOScript manuals, provide information that might have been omitted from the manuals, and describe upgrade and downgrade procedures. |
| <i>Hardware Release Notes</i>                | Describe the available documentation for the router platform and summarize known problems with the hardware and accompanying software. Each platform has its own release notes.   |
| <b>JUNOScope Software</b>                    |   |
| <i>JUNOScope Software Guide</i>              | Describes the JUNOScope software graphical user interface (GUI), how to install and administer the software, and how to use the software to manage router configuration files and monitor router operations.  |

## Documentation Feedback

We are always interested in hearing from our customers. Please let us know what you like and do not like about the Juniper Networks documentation, and let us know of any suggestions you have for improving the documentation. Also, let us know if you find any mistakes in the documentation. Send your feedback to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net).

## How to Request Support

For technical support, contact Juniper Networks at [support@juniper.net](mailto:support@juniper.net), or at 1-888-314-JTAC (within the United States) or 408-745-9500 (from outside the United States).