

Chapter 35

Summary of Accounting Options Configuration Statements

The following sections explain each of the accounting options configuration statements. The statements are organized alphabetically.

accounting-options

Syntax	accounting-options {...}
Hierarchy Level	[edit]
Description	Configure options for accounting statistics collection.
Usage Guidelines	See “Configuring Accounting Options” on page 361.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

archive-sites

Syntax	archive-sites { <i>site-name</i> ; }
Hierarchy Level	[edit accounting-options file <i>filename</i>]
Description	Configure an archive site. If more than one site name is configured, an ordered list of archive sites for the accounting-data log files is created. When a file is archived, the router attempts to transfer the file to the first URL in the list, moving to the next site only if the transfer does not succeed. The log file is stored at the archive site with a filename of the format <i>router-name_log-filename_timestamp</i> .
Options	<i>site-name</i> —Any valid FTP URL to a destination. For information on how to specify valid FTP URLs, see the <i>JUNOS System Basics Configuration Guide</i> .
Usage Guidelines	See “Configuring Archive Sites” on page 366.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

class-usage-profile

Syntax class-usage-profile *profile-name* {
 file *filename*;
 interval *minutes*;
 source-classes {
 source-class-name;
 }
 destination-classes {
 destination-class-name;
 }
 }

Hierarchy Level [edit accounting-options]

Description Create a class usage profile, which is used to log class usage statistics to a file in the /var/log directory. The class usage profile logs class usage statistics for the configured source classes on every interface that has destination-class-usage configured.

For information on configuring source classes, see the *JUNOS Routing and Routing Protocols Configuration Guide*. For information on configuring source class usage, see the *JUNOS Network Interfaces and Class of Service Configuration Guide*.

Options *profile-name*—Name of the destination class profile.

The remaining statements are explained separately.

Usage Guidelines See “Configuring Class Usage Profiles” on page 377.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

counters

Syntax counters {
 counter-name;
 }

Hierarchy Level [edit accounting-options filter-profile *profile-name*]

Description Names of counters for which filter profile statistics are collected. The packet and byte counts for the counters are logged to a file in the /var/log directory.

Options *counter-name*—Name of the counter.

Usage Guidelines See “Configuring the Counters” on page 370.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

destination-classes

Syntax	destination-classes { <i>destination-class-name</i> ; }
Hierarchy Level	[edit accounting-options class-usage-profile <i>profile-name</i>]
Description	Specify the destination classes for which statistics are collected.
Options	<i>destination-class-name</i> —Name of the destination class to include in the source class usage profile.
Usage Guidelines	See “Configuring a Class Usage Profile” on page 377.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

fields

See the following sections:

fields (for Interface Profiles) on page 385

fields (for Routing Engine Profiles) on page 386

fields (for Interface Profiles)

Syntax	fields { <i>field-name</i> ; }
Hierarchy Level	[edit accounting-options interface-profile <i>profile-name</i>]
Description	Statistics to collect in an accounting-data log file for an interface.
Options	<i>field-name</i> —Name of the field: input-bytes—Input bytes input-errors—Generic input error packets input-multicast—Input packets arriving by multicast input-packets—Input packets input-unicast—Input unicast packets output-bytes—Output bytes output-errors—Generic output error packets

output-multicast—Output packets sent by multicast

output-packets—Output packets

output-unicast—Output unicast packets

Usage Guidelines See “Configuring the Interface Profile” on page 367.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

fields (for Routing Engine Profiles)

Syntax fields {
 field-name;
}

Hierarchy Level [edit accounting-options routing-engine-profile *profile-name*]

Description Statistics to collect in an accounting-data log file for a Routing Engine.

Options *field-name*—Name of the field:

cpu-load-1—Average system load over the last 1 minute

cpu-load-5—Average system load over the last 5 minutes

cpu-load-15—Average system load over the last 15 minutes

date—Date, in YYYYMMDD format

host-name—Hostname for the router

time-of-day—Time of day, in HHMMSS format

uptime—Time since last reboot, in seconds

Usage Guidelines See “Configuring the Routing Engine Profile” on page 380.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

file

See the following sections:

file (Associating with a Profile) on page 387

file (Configuring a Log File) on page 387

file (Associating with a Profile)

Syntax	file <i>filename</i> ;
Hierarchy Level	[edit accounting-options class-usage-profile <i>profile-name</i>], [edit accounting-options filter-profile <i>profile-name</i>], [edit accounting-options interface-profile <i>profile-name</i>], [edit accounting-options routing-engine-profile <i>profile-name</i>]
Description	The accounting log file to use.
Options	<i>filename</i> —Name of the log file. You must specify a <i>filename</i> already configured in the file statement at the [edit accounting-options] hierarchy level.
Usage Guidelines	See “Configuring the Interface Profile” on page 367, “Configuring the Filter Profile” on page 369, and “Configuring the Routing Engine Profile” on page 380.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

file (Configuring a Log File)

Syntax	file <i>filename</i> { archive-sites { <i>site-name</i> ; } files <i>filename</i> ; size <i>bytes</i> ; transfer-interval <i>minutes</i> ; }
Hierarchy Level	[edit accounting-options]
Description	Information on a log file used for accounting data.
Options	<i>filename</i> —Name of file in which to write the accounting data. The remaining statements are explained separately.
Usage Guidelines	See “Configuring Files” on page 365.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

files

Syntax	files <i>number</i> ;
Hierarchy Level	[edit accounting-options file <i>filename</i>]
Description	Information on a log file used for accounting data.
Options	<i>number</i> —The maximum number of files. When a log file (for example, profilelog) reaches its maximum size, it is renamed profilelog.0, then profilelog.1, and so on, until the maximum number of log files is reached. Then the oldest log file is overwritten. The minimum value for <i>number</i> is 3 and the default value is 10.
Usage Guidelines	See “Configuring Files” on page 365.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

filter-profile

Syntax	filter-profile <i>profile-name</i> { counters { <i>counter-name</i> ; } file <i>filename</i> ; interval <i>minutes</i> ; }
Hierarchy Level	[edit accounting-options]
Description	Create a profile to filter and collect packet and byte count statistics and write them to a file in the /var/log directory. To apply the profile to a firewall filter, you include the accounting-profile statement at the [edit firewall filter <i>filter-name</i>] hierarchy level. For more information on firewall filters, see the <i>JUNOS Network Interfaces and Class of Service Configuration Guide</i> .
Options	<i>profile-name</i> —Name of the filter profile. The remaining statements are explained separately.
Usage Guidelines	See “Configuring the Filter Profile” on page 369.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

interface-profile

Syntax	<pre>interface-profile <i>profile-name</i> { fields { <i>field-name</i>; } file <i>filename</i>; interval <i>minutes</i>; }</pre>
Hierarchy Level	[edit accounting-options]
Description	Create a profile to filter and collect error and packet statistics and write them to a file in the /var/log directory. You can specify an interface profile for either a physical or a logical interface.
Options	<p><i>profile-name</i>—Name of the interface profile.</p> <p>The remaining statements are explained separately.</p>
Usage Guidelines	See “Configuring the Interface Profile” on page 367.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

interval

Syntax	interval <i>minutes</i> ;
Hierarchy Level	<p>[edit accounting-options class-usage-profile <i>profile-name</i>],</p> <p>[edit accounting-options filter-profile <i>profile-name</i>],</p> <p>[edit accounting-options interface-profile <i>profile-name</i>],</p> <p>[edit accounting-options routing-engine-profile <i>profile-name</i>]</p>
Description	How often statistics are collected for the accounting profile.
Options	<p><i>minutes</i>—Amount of time between each collection of statistics.</p> <p>Range: 1 through 2880 minutes</p> <p>Default: 30 minutes</p>
Usage Guidelines	See “Configuring the Interface Profile” on page 367, “Configuring the Filter Profile” on page 369, and “Configuring the Routing Engine Profile” on page 380.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

routing-engine-profile

Syntax	<pre>routing-engine-profile <i>profile-name</i> { fields { <i>field-name</i>; } file <i>filename</i>; interval <i>minutes</i>; }</pre>
Hierarchy Level	[edit accounting-options]
Description	Create a Routing Engine profile to collect selected Routing Engine statistics and write them to a file in the /var/log directory.
Options	<p><i>profile-name</i>—Name of the Routing Engine statistics profile.</p> <p>The remaining statements are explained separately.</p>
Usage Guidelines	See “Configuring the Routing Engine Profile” on page 380.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

size

Syntax	<i>size bytes</i> ;
Hierarchy Level	[edit accounting-options file <i>filename</i>]
Description	Attributes of an accounting-data log file.
Options	<p><i>bytes</i>—Maximum size of each log file, in bytes, kilobytes (KB), megabytes (MB), or gigabytes (GB). When a log file (for example, profilelog) reaches its maximum size, it is renamed profilelog.0, then profilelog.1, and so on, until the maximum number of log files is reached. Then the oldest log file is overwritten. If you do not specify a size, the file is closed, archived, and renamed when the time specified for the transfer interval is exceeded.</p> <p>Syntax: <i>x</i> to specify bytes, <i>xk</i> to specify KB, <i>xm</i> to specify MB, <i>xg</i> to specify GB</p> <p>Range: 256 KB through 1 GB</p>
Usage Guidelines	See “Configuring the Maximum Size of the File” on page 366.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

source-classes

Syntax	source-classes { <i>source-class-name</i> ;
Hierarchy Level	[edit accounting-options class-usage-profile <i>profile-name</i>]
Description	Specify the source classes for which statistics are collected.
Options	<i>source-class-name</i> —Name of the source class to include in the class usage profile.
Usage Guidelines	See “Configuring a Class Usage Profile” on page 377.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

transfer-interval

Syntax	transfer-interval <i>minutes</i> ;
Hierarchy Level	[edit accounting-options file <i>filename</i>]
Description	Time the file remains open and receiving new statistics before it is closed and transferred to an archive site.
Options	<i>minutes</i> —Time the file remains open and receiving new statistics before it is closed and transferred to an archive site. Range: 15 through 2880 minutes Default: 30 minutes
Usage Guidelines	See “Configuring the Transfer Interval of the File” on page 366.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

