

## Chapter 8

# Configuring Remote Access

This chapter describes how to configure remote access to your E-series devices and contains the following sections:

- Overview on page 111
- References on page 113
- Before You Begin on page 113
- Configuration Tasks on page 113
- Configuring a B-RAS License on page 114
- Creating User Domain Maps on page 115
- Creating Authentication and Accounting Servers on page 116
- Creating DHCP Relay Servers on page 117
- Creating Local IP Address Pools on page 118

## Overview

---

The NMC-RX application allows you to configure Broadband Remote Access Server (B-RAS) on your E-series device. The B-RAS application:

- Aggregates the output from digital subscriber line access multiplexers (DSLAMs)
- Provides user PPP sessions
- Provides PPP session termination
- Enforces quality of service (QoS) policies
- Routes traffic into an ISP's backbone network

A DSLAM collects data traffic from multiple subscribers into a centralized point so that it can be uploaded to your E-series device over an ATM connection through a DS3, an OC3, an E3, or an OC12 link.

The E-series device provides the logical termination for PPP sessions, as well as the interface to authentication and accounting systems.

### ***B-RAS Protocol Support***

Your E-series device supports the following protocols for B-RAS services for remote PPP clients:

- PPP
- PPP over Ethernet (PPPoE)
- Bridged Ethernet
- Layer 2 Tunneling Protocol (L2TP): L2TP access concentrator (LAC) and L2TP network server (LNS)
- Layer 2 Forwarding (L2F)

### ***B-RAS Data Flow***

The E-series device performs several tasks for a digital subscriber line (DSL) PPP user to establish a PPP connection:

- Authenticates the subscriber through RADIUS authentication
- Assigns an IP address to the PPP/IP session through RADIUS, local address pools, or DHCP
- Terminates the PPP encapsulation
- Provides user accounting by means of RADIUS

### ***RADIUS***

Remote Authentication Dial-In User Service (RADIUS) is a distributed client/server system that protects networks against unauthorized access. RADIUS clients running on an E-series device send authentication requests to a central RADIUS server. This server contains all the required user authentication and network access information.

You can configure RADIUS authentication and accounting services with the NMC-RX application. The authentication service determines that a user is allowed to access a specific service or resource. The accounting service tracks service use by subscribers.

### ***DHCP***

Dynamic Host Configuration Protocol (DHCP) provides a mechanism through which computers using TCP/IP can obtain protocol configuration parameters automatically from a DHCP server on the network.

## References

---

For more information about RADIUS, see *JUNOS Broadband Access Guide, Chapter 1, Configuring Remote Access*.

## Before You Begin

---

Before you can configure B-RAS, you must:

- Get a B-RAS license from Juniper Networks.
- Create at least one group.
- Create at least one E-series device.

Additionally, you must determine the following for the RADIUS authentication and accounting servers:

- IP addresses
- UDP port numbers
- Secret keys

For information about associating servers with a virtual router and on setting the B-RAS parameters on a virtual router, see *Chapter 3, Configuring Virtual Routers*.

## Configuration Tasks

---

Complete the B-RAS tasks in this order:

1. Configure a B-RAS license.
2. Create a user domain map entry.
3. Create authentication and accounting servers.
4. Create DHCP relay servers.
5. Associate the servers with virtual routers.
6. Create a local IP address pool.
7. (Optional) Create a bridged IP interface. See *NMC-RX User Guide, Vol. 1, Chapter 20, Configuring Bridged IP*.
8. Create a PPP over ATM or a PPP over Ethernet over ATM interface. See *NMC-RX User Guide, Vol. 1, Chapter 27, Configuring PPP* and *Chapter 28, Configuring PPP over Ethernet*.

## Configuring a B-RAS License

Your B-RAS license is a string of alphanumeric characters provided by your Juniper Networks sales representative or by Juniper Networks customer service. Depending on the license purchased, you can activate 4000, 8000, 16,000, or 32,000 authenticated PPP sessions at any one time. The license key limits the number of active subscribers.



**NOTE:** To use a B-RAS license for 16,000 or more interfaces, your SRP module(s) must have 512 MB of memory.

To configure a B-RAS license:

1. In the Device-wide Explorer, under System folder, click Licensing, right-click, and click Configure.

The Licensing tab appears in the work area.

2. Enter the License String (Table 40).

**Table 40: Licensing Parameters**

Parameter	Description
License String	License string can contain up to 15 alphanumeric characters.
Number of PPP Sessions	Number of PPP sessions allowed by the given license string. The number of PPP sessions available is automatically filled in when you save a valid license string. If the string is invalid, an error message is displayed.

3. Click the Save button.

A dialog box prompts you to save your changes.

4. Click Yes.

## Creating User Domain Maps

You can configure RADIUS authentication, RADIUS accounting, DHCP servers, and local address pools for a specific virtual router, and then map a user domain to that virtual router.

The E-series device uses the name appearing to the right of the @ character in a username as the domain name. For example, juniper.net is the domain of xsmith@juniper.net. Your E-series device keeps track of the domain-name-to-virtual-router mapping.

When the E-series device is configured to require authentication of a PPP user, it checks for the appropriate user-domain-name-to-virtual-router mapping. If it finds a match, the E-series device sends a RADIUS authentication request to the RADIUS server configured for the specific virtual router.



**NOTE:** You cannot reconfigure a domain map entry. To change the virtual router assignment, you must first delete the domain map entry and then recreate it, selecting a different virtual router.

To create a user domain map entry:

1. In the Device-wide Explorer, select Virtual Routers, right-click, and click List All.

The names of all currently configured virtual routers on the device, including a default virtual router, appear in the list area.

Virtual Router Name	Type
default	DEFAULT
vrOne	User Created
VR-Yi_Test2	User Created
hgfhg	User Created

2. Select a virtual router in the list, right-click, select Create, and click User Domain Map Entry.

The Create User Domain Map Entry dialog box appears.


3. Set the parameters (Table 41).

**Table 41: User Domain Map Parameters**

Parameter	Description
Domain Name	Domain name you want to map (for example, juniper.net); maximum of 32 characters.
Virtual Router	Currently selected virtual router

- To change the virtual router name, click  to the right of the Virtual Router text box.

The Associate Virtual Router dialog box appears.

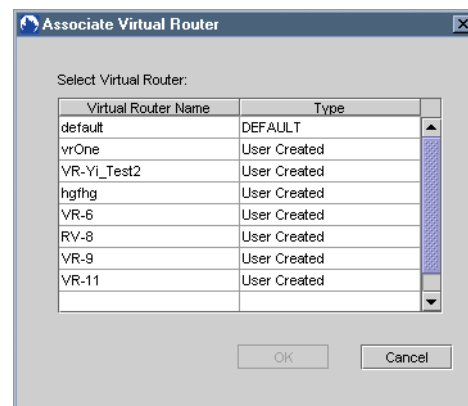

- Select a virtual router from the list, and click OK.

The virtual router you selected now appears in the Virtual Router text box of the Create User Domain Map Entry dialog box.

- Click OK.

## Creating Authentication and Accounting Servers

You can create and configure up to ten authentication and ten accounting servers as part of the RADIUS services. Authentication service determines whether or not a user is allowed access to a specific service or resource. The accounting service tracks service use by subscribers.

If you do not configure a primary authentication or accounting server, all authentication and accounting requests will fail. You can configure other servers as backup in the event that the primary server cannot be reached.



**NOTE:** You can configure B-RAS with RADIUS accounting without RADIUS authentication. In this configuration, the username and password on the remote end are not authenticated and can be set to any value.

The authentication and accounting servers have the same parameters.

You can perform the following procedure from both the Network Workshop and the Device Workshop.




**NOTE:** Because the procedure for creating authentication and accounting servers is the same, only authentication servers are used in this example.

To create an authentication server:

1. On the Configuration menu, select Create, and click Authentication Server.

The Create Authentication Server dialog box appears.

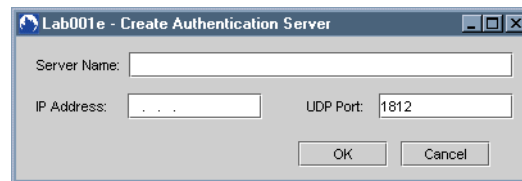

2. Set the server's parameters (Table 42).

Setting the parameters allows you to identify an authentication server as a network resource. When you associate a server with a virtual router, you can set parameters that can be specific to that particular virtual router. See *Chapter 3, Configuring Virtual Routers*.

**Table 42: Authentication Server Parameters**

Parameter	Description
Server Name	Name associated with this server; up to 32 alphanumeric characters
IP Address	Valid IP address for the server
UDP Port	Port where the RADIUS server can be contacted; range 0–65536

3. Click OK.

## Creating DHCP Relay Servers

DHCP provides a mechanism through which computers using TCP/IP can obtain protocol configuration parameters automatically from a DHCP server on the network.


The DHCP server is typically centrally located and operated by the network administrator. An IP client contacts a DHCP server for configuration parameters. Because the server is run by a network administrator, DHCP clients can be reliably and dynamically configured with parameters appropriate to the current network architecture.

For PPP users, the E-series device acts as a DHCP client to obtain an address for the PPP user. This is referred to as DHCP proxy.

DHCP proxy client support enables the device to obtain an IP address from a DHCP server for a remote PPP client. Each virtual router (acting as a DHCP proxy client) can query up to five DHCP servers.

To create a DHCP relay server:

1. From the Configuration menu, select Create, and click DHCP Relay Server. The Create DHCP Relay Server dialog box appears.

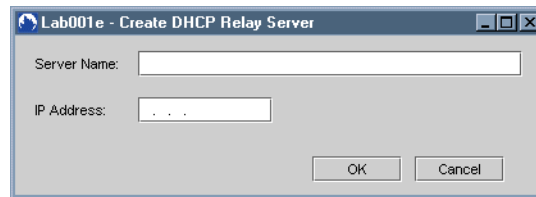

2. Set the DHCP relay server parameters (Table 43).

Setting the parameters allows you to identify a DHCP server as a network resource. When you associate a server with a virtual router, you can set parameters that can be specific to that particular virtual router. See *Chapter 3, Configuring Virtual Routers*.

**Table 43: DHCP Relay Server Parameters**

Parameter	Description
Server Name	Name associated with this server; must not be more than 32 alphanumeric characters
IP Address	Valid IP address for the server

3. Click OK.

## Creating Local IP Address Pools

IP address pools are configured for virtual routers. To make the E-series router use the address pools specified on the virtual router, the virtual router must have the addressing scheme set to *Local*.

You can configure the E-series device to provide an IP address during the authentication process. These IP addresses must be configured in a local IP address pool. Each address pool must be associated with a virtual router before it can be used.

Each local address pool is named and contains ranges of sequentially ordered IP addresses. These addresses are allocated when the AAA server makes a request for an IP address.

If a local address pool range is exhausted, the next range of addresses is used. If all pool ranges are exhausted, a new range can be configured to extend or supplement the existing range of addresses, or a new pool can be created. The newly created pool range is then used for future address allocation. If addresses allocated from the first pool range are released, then subsequent requests for addresses are taken from the first pool range.


To create a local IP address pool:

1. From the Device-wide Explorer, select Virtual Routers, right-click, and click List All.

A listing of all available virtual routers appears in the list area.

2. Select a virtual router in the list, right-click, select Create, and click Local IP Address Pools.

The Create Local IP Address Pool dialog box appears.

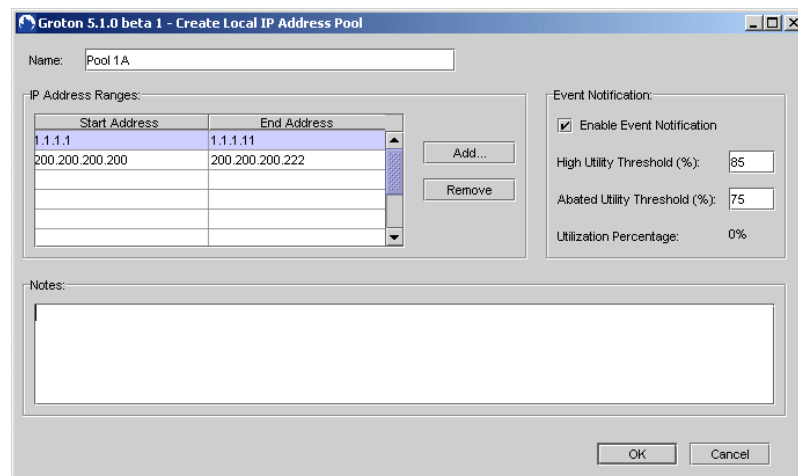

3. Set the local IP address pool parameters (Table 44).

**Table 44: Local IP Address Pool Parameters**

Parameter	Description
Name	Name associated with this address pool; up to 32 characters
<b>IP Address Ranges</b>	
Add	<p>Click to enter an IP address range. The Add Local IP Address Pool Range dialog box appears. After entering a start and end address, click OK. The range is added to the list.</p> <ul style="list-style-type: none"> <li>■ Start Address—First valid IP address available in the address pool</li> <li>■ End Address—Last valid IP address available in the address pool</li> </ul>

**Table 44: Local IP Address Pool Parameters (continued)**

Parameter	Description
Remove	Click to delete the selected IP address range. The range is removed from the list.
<b>Event Notification</b>	
Enable Event Notification	Enables utility threshold event notification through SNMP traps
High Utility Threshold (%)	Percentage of usage that triggers a high utility event notification; range 1-100; default: 85
Abated Utility Threshold (%)	Percentage of usage that triggers an abated utility event notification; range 1-100; default: 75
Utilization Percentage	Displays the percentage of IP addressees currently in use; range 0-100
Notes	Stores descriptive or contextual information of up to 256 alphanumeric characters

4. Click OK.

### Configuring and Viewing IP Address Pools

You can add and remove IP address ranges for existing IP address pools by listing all address pools associated with a virtual router, right-clicking, and then clicking Configure. The Local IP Address Pool tab appears in the work area, with the Add and Remove parameters available.

You can also view the number of addresses per range, the number in use per range, and the percentage of address utilization by listing all address pools, right-clicking, and then clicking View. The results are displayed in the work area on the Local IP Address Pool tab.

For more information about these parameters, see *Creating Local IP Address Pools* on page 118.

