

clear dhcp relay binding

Syntax	<code>clear dhcp relay binding</code> <code><(all <i>ip-address</i> <i>mac-address</i>)></code> <code><interface <i>interface-name</i>></code> <code><logical-system <i>logical-system-name</i>></code> <code><routing-instance <i>routing-instance-name</i>></code>
Release Information	Command introduced in JUNOS Release 8.3. all and interface options added in JUNOS Release 8.4.
Description	Clear the binding state of a Dynamic Host Configuration Protocol (DHCP) client from the client table.
Options	<p>all—(Optional) Clear the binding state for all DHCP clients.</p> <p>interface <i>interface-name</i>—(Optional) Clear the binding state for DHCP clients on the specified interface.</p> <p><i>ip-address</i>—(Optional) IP address of the DHCP client.</p> <p><i>mac-address</i>—(Optional) MAC address of the DHCP client.</p> <p>logical-system <i>logical-system-name</i>—(Optional) Clear the binding state for DHCP clients on the specified logical system.</p> <p>routing-instance <i>routing-instance-name</i>—(Optional) Clear the binding state for DHCP clients on the specified routing instance.</p>
Required Privilege Level	view
List of Sample Output	clear dhcp relay binding on page 1 clear dhcp relay binding all on page 1 clear dhcp relay binding interface on page 1
Output Fields	See show dhcp binding for an explanation of output fields.
clear dhcp relay binding	The following sample output displays the address bindings in the DHCP client table before and after the clear dhcp relay binding command is issued. user@host> show dhcp relay binding IP address Hardware address Type Lease expires at 100.20.32.1 90:00:00:01:00:01 active 2007-02-08 16:41:17 EST user@host> clear dhcp relay binding 100.20.32.1 user@host> show dhcp relay binding
clear dhcp relay binding all	user@host> clear dhcp relay binding all
clear dhcp relay binding interface	user@host> clear dhcp relay binding interface fe-0/0/2

