

## request virtual-chassis vc-port

---

<b>Syntax</b>	request virtual-chassis vc-port set interface <i>vcp-interface-name</i> <member <i>member-id</i> > <disable>
<b>Release Information</b>	Command introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Disable or enable a Virtual Chassis port (VCP) interface for a dedicated VCP on the rear panel of the Virtual Chassis.
<b>Options</b>	<p>interface <i>vcp-interface-name</i> —Name of the interface to enable or disable. Specify either <i>vcp-0</i> or <i>vcp-1</i>.</p> <p>member <i>member-id</i> —(Optional) Enable or disable the specified VCP interface on the specified member of the Virtual Chassis configuration.</p> <p>disable —(Optional) Disable the specified VCP. If you omit this keyword, the command enables the dedicated VCP interface.</p>
<b>Additional Information</b>	If you omit member <i>member-id</i> , this command defaults to disabling or enabling the dedicated VCP interface on the switch where the command is issued. The dedicated VCP interfaces are enabled in the factory default configuration.
<b>Required Privilege Level</b>	system-control
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ request virtual-chassis vc-port</li><li>■ show virtual-chassis vc-port</li><li>■ show virtual-chassis vc-port statistics</li><li>■ clear virtual-chassis vc-port statistics</li><li>■ Understanding Virtual Chassis Components</li></ul>
<b>List of Sample Output</b>	request virtual-chassis vc-port set interface vcp-0 disable on page 1 request virtual-chassis vc-port set interface vcp-0 member 3 disable on page 1
<b>request virtual-chassis vc-port set interface vcp-0 disable</b>	<pre>user@host&gt; request virtual-chassis vc-port set interface vcp-0 disable</pre> <p>To check the results of this command, use the show virtual-chassis vc-port command.</p>
<b>request virtual-chassis vc-port set interface vcp-0 member 3 disable</b>	<pre>user@host&gt; request virtual-chassis vc-port set interface vcp-0 member 3 disable</pre> <p>To check the results of this command, use the show virtual-chassis vc-port command.</p>