

request virtual-chassis vc-port

Syntax	request virtual-chassis vc-port set delete pic-slot <i>pic-slot</i> port <i>port-number</i> <member <i>member-id</i> >
Release Information	Command introduced in JUNOS Release 9.0 for EX-series switches.
Description	Enable or disable an uplink port (on an EX-UM-2XFP or EX-UM-4SFP uplink module) as a Virtual Chassis port (VCP) interface.
Options	<p>pic-slot <i>pic-slot</i>—Number of the PIC slot for the uplink. Specify 1 to represent the uplink module PIC on the EX-series switch.</p> <p>port <i>port-number</i>—Number of the uplink module port (0 or 1) that is to be enabled or disabled as a VCP interface.</p> <p>member <i>member-id</i>—(Optional) Enable or disable the specified VCP uplink interface on the specified member of the Virtual Chassis configuration.</p>
Additional Information	If you omit member <i>member-id</i> , this command defaults to enabling or disabling the uplink VCP interface on the switch where the command is issued.
Required Privilege Level	system-control
Related Topics	<ul style="list-style-type: none">■ request virtual-chassis vc-port■ show virtual-chassis vc-port■ show virtual-chassis vc-port statistics■ clear virtual-chassis vc-port statistics■ Understanding Virtual Chassis Components
List of Sample Output	request virtual-chassis vc-port set pic-slot 1 port 0 on page 1 request virtual-chassis vc-port set pic-slot 1 port 1 member 3 on page 1 request virtual-chassis vc-port delete pic-slot 1 port 1 member 3 on page 1
request virtual-chassis vc-port set pic-slot 1 port 0	<p>user@host>request virtual-chassis vc-port set pic-slot 1 port 0</p> <p>To check the results of this command, use the show virtual-chassis vc-port command.</p>
request virtual-chassis vc-port set pic-slot 1 port 1 member 3	<p>user@host>request virtual-chassis vc-port set pic-slot 1 port 1 member 3</p> <p>To check the results of this command, use the show virtual-chassis vc-port command.</p>
request virtual-chassis vc-port delete pic-slot 1 port 1 member 3	<p>user@host>request virtual-chassis vc-port delete pic-slot 1 port 1 member 3</p> <p>To check the results of this command, use the show virtual-chassis vc-port command.</p>